

INSTRUCTIONS

-J00694 REV. 10-2-96

Kit Numbers 58309-95A, 58310-95A, 58312-95A, and 58361-95A to 58363-95A

WINDSHIELD TRIM KITS

General

This Instruction Sheet applies to windshield trim kits:

PART NO.	FINISH	MODEL FITMENT
58309-95A 58361-95A	smooth engraved	All XL, FXR, FXD and FXSTS with permanently mounted Compact windshields
58310-95A 58362-95A	smooth engraved	All FLSTC, FLSTF, FLSTN and FLH with permanently mounted King Size windshields
58312-95A 58363-95A	smooth engraved	All FXSTC and FXDWG with permanently mounted Compact windshields

Kit contents:

QTY	DESCRIPTION	
1	Brace, horizontal, front	
1	Brace, vertical-right hand	
1	Brace, vertical-left hand	
2	#12-24x13/16 in. T-head screw	
2	#12-24x3/4 in. T-head screw	
5	#12-24x11/16 in. L-head screw	
1	#12-24x approx. 7/8 in. T-head screw	

Installation

 See Figure 1. Remove windshield assembly from motorcycle.

- Remove all hardware securing front mounting brackets (braces) (1, 2, 3) to windshield. Save the nine acorn nuts. Discard screws, washers, and front braces (1, 2, 3). On later models a T-27 TORX screwdriver is required to remove the nine screws.
- See Figure 1 and Service Parts Illustration on page 3. Slide five screws (4, 6) into groove in center of front horizontal brace (1). If a windshield bag is to be used, slide five screws (4,6,7) into groove in center of front horizontal brace as shown in Service Parts Illustration.
- Check that the two outer 11/16 inch L-head screws (6) are positioned with short side of head facing to the outside end of brace (1).
- Align screws in front horizontal brace (1) to holes in windshield.

Position front horizontal brace (1) so edge with slots faces down.

Gently push screws through windshield, stock horizontal brace (7), and adjustable bracket (8) on rear of windshield.

Install acorn nuts on the center and outer screws and tighten one turn.

NOTE

In next step right and left are defined as viewed by the rider seated on the motorcycle.

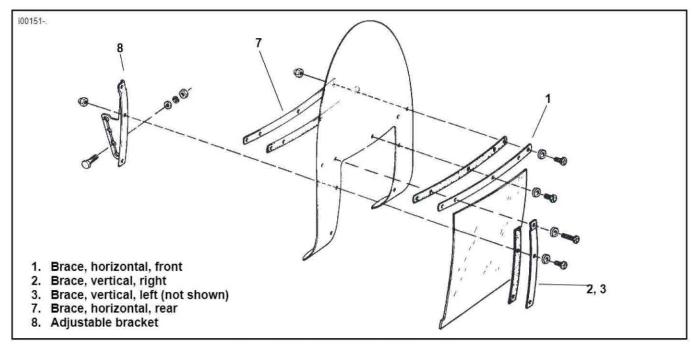


Figure 1. Windshield, Bracket Assembly


- See Figure 1 and Service Parts Illustration on page 3. Locate right hand vertical brace (2). Slide an 11/16 inch L-head screw (6), with short side of head facing lower end of brace, into groove in center of brace.
- Slide a T-head, 3/4 in. screw (5) into brace (2). Align screws in vertical brace with holes in windshield. Gently push screws through windshield and stock adjustable bracket (8).
- Place acorn nuts on the vertical brace screws and tighten one turn.
- 10. Repeat steps 7 through 9 for the left hand brace (3).

 Adjust vertical braces (2, 3) until tines engage slots in horizontal brace (1).

ACAUTION

Do not over tighten fasteners. Over tightening can crack the windshield.

- If a windshield bag is to be used, attach the windshield bag to the center horizontal screw (7).
- 13. Tighten all acorn nuts to 1-2 ft-lbs.(12-24 in.lbs).
- 14. Reattach windshield assembly to motorcycle.

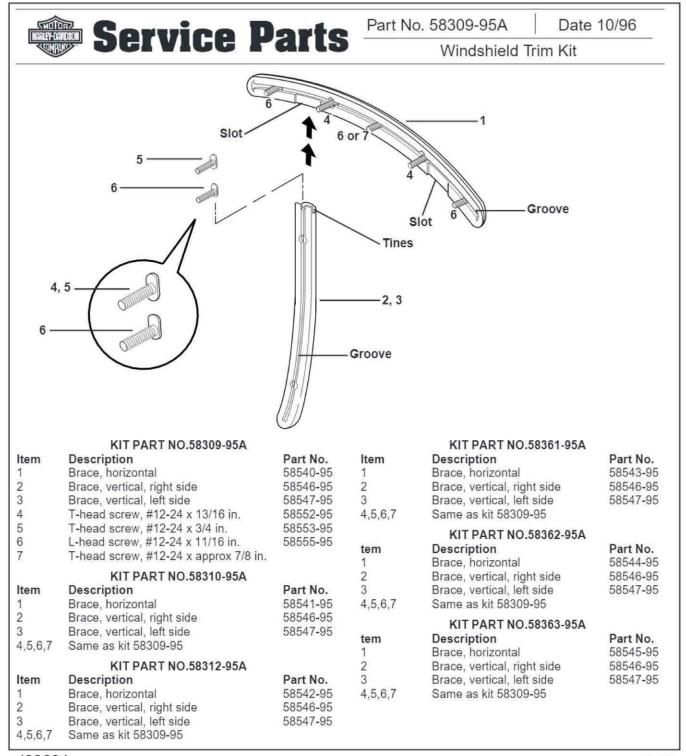

-J00694 2 of 2