



INSTRUCTIONS

-J01224

REV. 7-23-98

Kit Number 32716-98

CHROME TAPPET BLOCK COVERS FOR SPORTSTER

General

This kit fits 1991 and later Sportster Model Motorcycles.

Kit Contents:

QTY	DESCRIPTION
1	Front tappet block cover
1	Rear tappet block cover
4	Chrome plated socket head cap screws
4	Chrome plated washers
4	Hot spots

Installation

1. Remove the 4 screws holding the four pushrod tubes in place.
2. Set the tappet block covers in place and hold them down firmly against the flat surfaces of the push rod tubes. Secure the covers in place using the socket head cap screws and washers included in the kit. Tighten screws to 18 ft-lbs.
3. Insert hot spots into bolt ends.

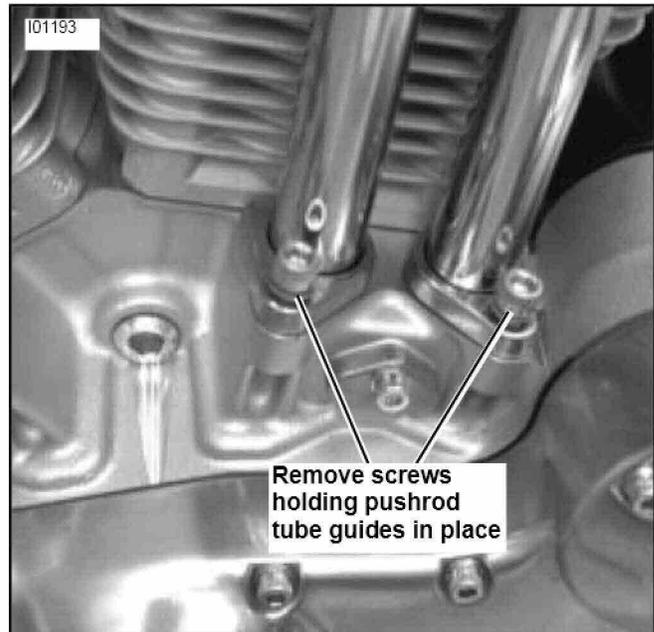


Figure 1. Remove screws

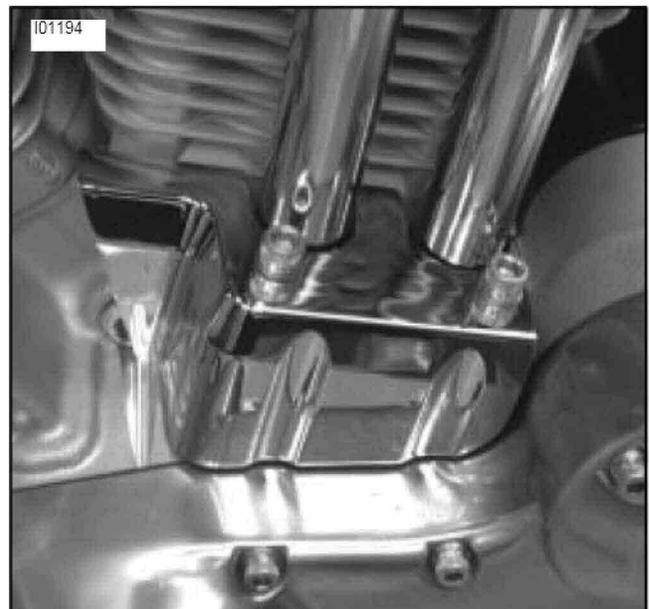


Figure 2. Installed tappet block cover