



INSTRUCTIONS

-J01610

REV.6-10-99

Kit Number 60481-00

CHROME XL BELT GUARD KIT

General

This kit is designed for installation on 2000 XL model motorcycles.

The kit contains one belt guard Part Number 60482-00.

Installation

WARNING

To avoid accidental start-up of motorcycle, and possible personal injury, disconnect the negative battery cable before performing any of the following procedures. If the positive cable should contact ground with the negative cable installed, the resulting sparks could cause a battery explosion, which could result in death or serious injury.

1. Disconnect negative battery cable.
2. See Figure 1. Remove the right lower shock mounting nut (4).
3. Remove belt guard front mounting bolt (5), washer (6) and nut (7). Save all removed hardware for later installation.

4. Remove original belt guard.
5. Position new belt guard (1) with rear mounting bracket onto inboard side of shock mounting bolt (2) and front bracket inboard of belt guard mounting bracket on the swingarm (8).
6. Replace locknut (4) onto shock mounting bolt (2) and torque to 30-50 ft. lbs. (41-68 Nm).
7. Place original washer (6) on screw (5) and insert through the swingarm and belt guard brackets. Install nut (7) on screw and tighten to 12 ft. lbs. (16.3 Nm).
8. Check belt guard to be sure that it does not touch the belt.
9. Connect negative battery cable.

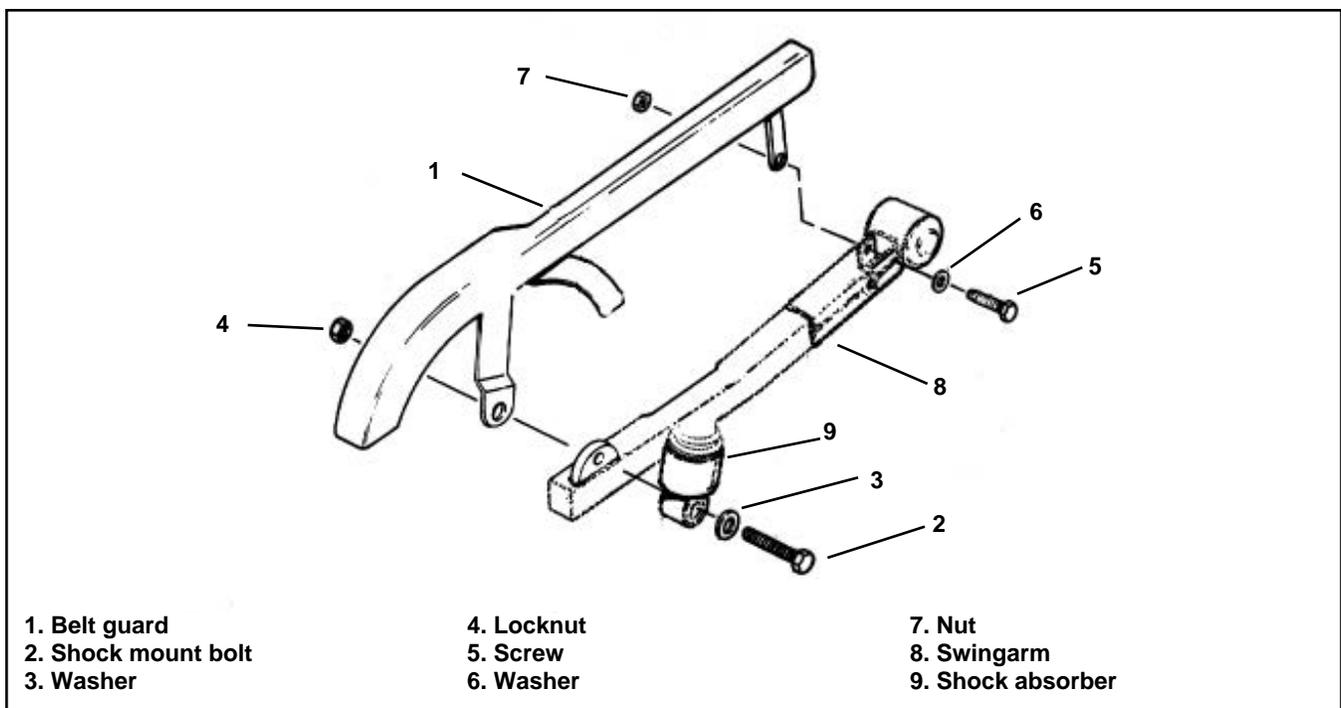


Figure 1. Belt Guard Mounting