


# Table of Contents

<b>REF: Engine Control - Sub-50B</b>	3
<b>Rico05r/JesterMotorwerkz/Rocketmangb Ignition Maps</b>	3
1682_VSS_3_25_15_Map_for_1250	4
883mapjakd	4
Andrea-s_1250_Map-base	5
basore_Map_for_1250	6
basore_Map_for_1250_2	7
Blue_Bitch_Table	7
Greg_Map_2-0	8
Hybrid_2-0	9
Hybrid_2-0_883_Version	10
jak_2	11
jak_3	12
jak_10-5	13
Jester_Delta	14
Jester_Motorwerkz_88-90_Inch_Map_Generic_Mod_1	15
Jester_Motorwerkz_88-90_Inch_Map_Generic_VSS_05_1200	16
Jester_Motorwerkz_Moscow_Map	17
Jester_Motorwerkz_Rocketman_01-15_Map	17
Jester_Motorwerkz_Rocketman_03-15_Map	18
Jester_Motorwerkz_Rocketman_04-15_Map	18
Jester_Motorwerkz_Rocketman_04-28-2015_Map	19
Jester_Motorwerkz_Rocketman_05-15_Map	20
Jester_Motorwerkz_Rocketman_12-14_Map	20
Jester_Motorwerkz_Scarecrow_Map	21
Lenster_Rico_Hybrid_Map	22
Lenster-s_Map	22
MAP_Modified_33	23
MAP_Modified_35_Revised	24
Necromancer_883_convert	25
R-D_Map_0	26
R-D_Map_1	27
R-D_Map_2	27
Rico-s_1212_1-1_1200_Gearing	28
Rico-s_1212_1-1_883_gearing	29
Rico-s_1250_Base_Map_1200_Gearing	30
Rico-s_1250_Base_Map_883_Gearing	30
Rico-s_1250_Map_4-1_1200_Gearing	31
Rico-s_1250_Map_4-1_883_Gearing	32
Rico-s_1250_Map_Smackie_Version	32
Rico-s_1250_Map_Version4-0_883_Gearing	33
Rico-s_221_Map	34
Rico-s_88inch_Map_1-0	35
Rico-s_88inch_Map_1-1	35
Rico-s_Hybrid_2-1	36

Rico-s_Hybrid_2-2 .....	37
Rico-s_Hybrid_2-2_883 .....	38
Rico-s_Jester_8_Ball_Capo_Map_06_1200_0 .....	39
Rico-s_Jester_8_Ball_Capo_Map_06_1200_1 .....	40
Rico-s_Jester_III_Map_Wedge_Mod .....	40
Rico-s_Jester_III_Map_Wedge_Mod_1 .....	41
Rico-s_Jester_III_Map_Wedge_Mod_2 .....	42
Rico-s_Jester_IV_Map .....	42
Rico-s_Jester_IV_Map_06_1200_0 .....	43
Rico-s_Jester_IV_Map_06_1200_1 .....	44
Rico-s_Jester_IV_Map_VSS_1475 .....	45
Rico-s_Jester_Motorwerkz_Map_for_Andrea_06_883_Gearing .....	45
Rico-s_Jester_V_Map_04-05_1200 .....	46
Rico-s_Jester_V_Map_04-05_883 .....	47
Rico-s_Jester_VII_Map_VSS_04-05_883 .....	47
Rico-s_Jester_VII_Map_VSS_06_883 .....	48
Rico-s_King_Jester_Map_0 .....	48
Rico-s_King_Jester_Map_1 .....	49
Rico-s_Voodoo_Map_06_1200 .....	50
RTM-Andrea_1250_Map_base-1431_2 .....	50
RTM-Andrea_1250_Map_AGGRESSIVE_Version_4-1 .....	51
RTM-Andrea_1250_Map_AGGRESSIVE-1431_2_Rev-3 .....	52
RTM-Andrea_1250_Map_Revised_aggressive .....	52
RTM-Andrea_1250_Map_Revised-aggressive-VSS_1630 .....	53
RTM-Andrea_1250_Map_Version_4-0_revised_ramp_from_0to45 .....	54
Scarecrow_1682 .....	54
SE_COPY_SORTA .....	55
WEDGE_Mod_1682 .....	56
WTF_Map_12-29-2014 .....	57

[Go To Technical Menu](#)


# REF: Engine Control - Sub-50B

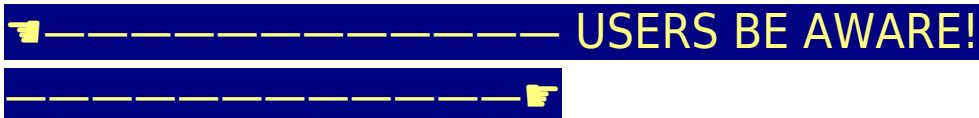

Use these maps at your own risk because there is **NO WARRANT OF USABILITY** for the MAP Files that are made available on the Sportsterpedia.

These are being hosted for evaluation by individual users and **ALL USERS MUST MAKE THEIR OWN EVALUATION** of the suitability of using these MAP Files for their intended engine configuration!

Others have benefited from using some of these maps for their particular engine configuration. However, every engine is different and an incorrect map can create engine damage. If you have been advised by the supplier of your engine parts to use a particular map, it makes sense to follow their recommendation, especially during the break-in period. If you later wish to change to some other ignition map, it still makes sense to seek their advice to learn of any concerns they might have for you to consider.

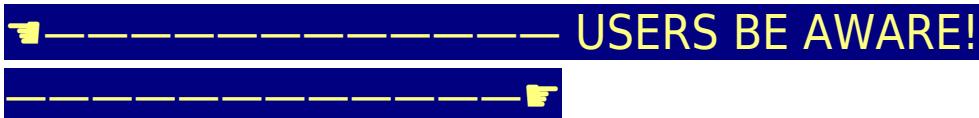

## Rico05r/JesterMotorwerkz/Rocketmangb Ignition Maps


This section was created from files supplied by XLForum member, **rocketmangb**. Many were created by XLForum member, **rico05r** and left in the care of **rocketmangb**. To get them into the Sportsterpedia, help was provided by XLForum member, **npaisnel**, who created the image files and helped with file handling. Thank you very much to all involved.

### Instructions for using the ZIPPED files:

- 1) Click the selected ZIP filename and download (save) it to a convenient directory on your local computer.
- 2) Then UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.


3) Load that '.tbl' data file into the Daytona Twin Tec PC-Link Software to map your ignition module.

## **1682\_VSS\_3\_25\_15\_Map\_for\_1250**

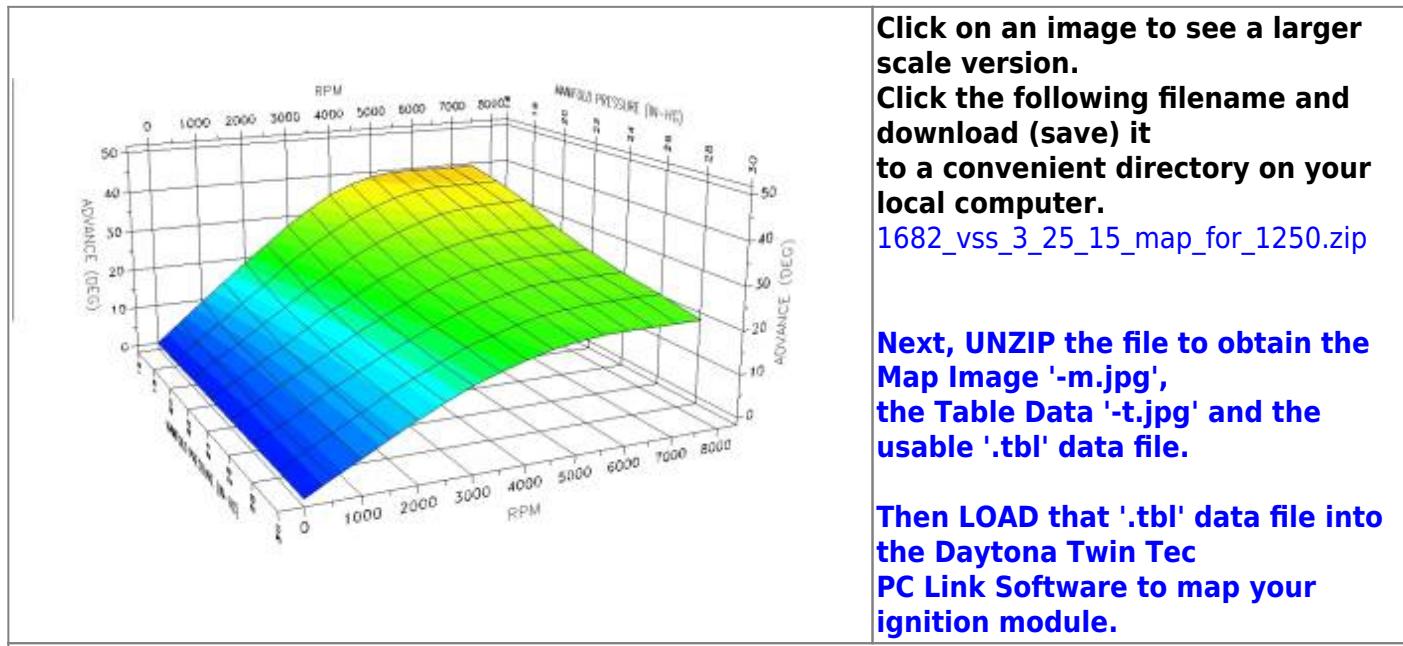

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	4.9	9.7	14.3	18.7	23.1	27.5	31.3	34.7	37.1	38.7	39.4	39.4	39.4	39.4	39.4
18	0.0	4.0	8.1	12.3	16.5	20.8	24.6	28.2	31.3	33.8	35.7	37.1	37.7	37.7	37.7	37.7
20	0.0	3.5	7.0	10.9	14.8	18.5	22.2	25.3	28.2	30.4	32.4	34.0	34.7	35.2	35.4	35.4
22	0.0	3.2	6.7	10.0	13.7	17.1	20.1	23.1	25.5	27.6	29.2	30.4	31.2	31.5	31.7	31.7
24	0.0	3.0	6.3	9.5	12.7	15.8	18.8	21.5	23.9	25.9	27.3	28.2	28.7	28.9	29.0	29.0
26	0.0	3.0	6.2	9.3	12.3	15.3	18.0	20.4	22.5	24.3	25.5	26.6	26.9	27.1	27.1	27.1
28	0.0	3.0	6.0	9.2	12.1	14.8	17.4	19.9	21.6	23.2	24.5	25.2	25.5	25.7	25.7	25.7
30	0.0	3.0	6.0	9.0	12.0	14.8	17.2	19.2	20.9	22.4	23.2	23.8	23.9	23.9	23.9	23.9

**883mapjaksd**

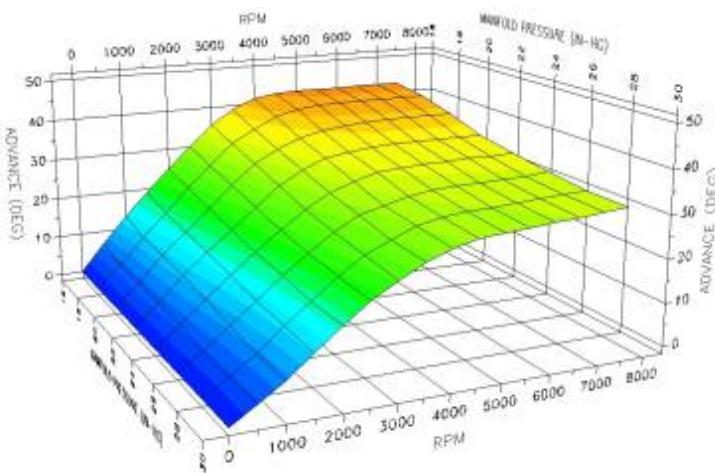


**Click on an image to see a larger scale version.  
Click the following filename and download (save) it to a convenient directory on your local computer.**  
[883mapjakd.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	6.8	13.4	19.2	24.8	30.1	35.4	39.0	41.3	42.3	42.5	42.5	42.5	42.5	42.5	42.5
18	0.0	5.6	11.8	17.4	23.2	28.2	33.4	36.6	39.4	40.7	41.3	41.5	41.5	41.5	41.5	41.5
20	0.0	5.2	11.4	16.4	21.6	26.8	31.4	34.4	36.8	38.0	38.8	39.2	39.3	39.4	39.4	39.4
22	0.0	5.2	10.6	15.6	20.2	25.0	29.4	32.6	35.0	35.7	36.4	36.7	36.7	36.7	36.7	36.7
24	0.0	4.6	9.6	14.4	19.0	23.4	27.4	30.6	32.6	34.2	34.6	34.8	35.0	35.2	35.0	35.2
26	0.0	3.8	8.6	13.2	18.0	22.2	26.2	29.2	30.7	32.0	32.8	33.2	33.2	33.4	33.4	34.0
28	0.0	3.6	7.6	12.6	17.0	21.4	25.2	27.7	30.0	31.2	31.7	31.9	32.2	32.6	32.8	33.0
30	0.0	3.6	7.4	12.2	16.8	21.0	24.3	27.3	29.3	30.6	31.0	31.4	31.8	32.0	32.6	33.0

## Andrea-s\_1250\_Map-base

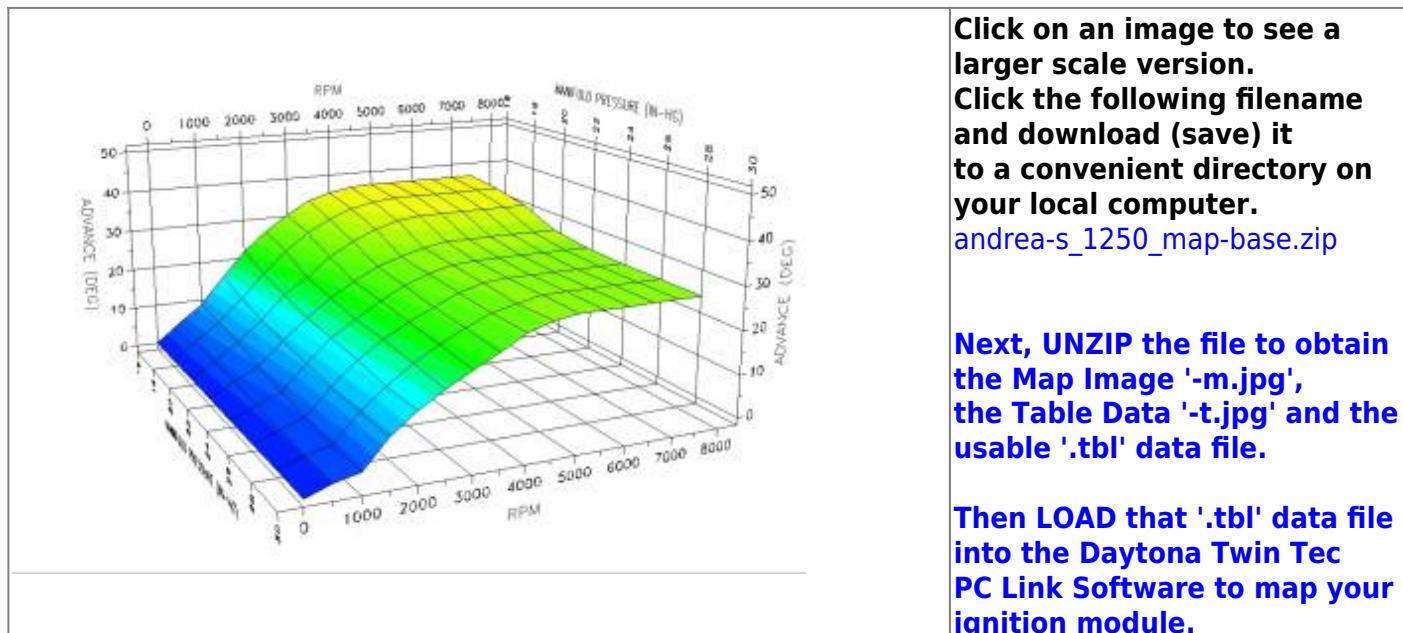


**Click on an image to see a larger scale version.  
Click the following filename and download (save) it to a convenient directory on your local computer.**  
[andrea-s\\_1250\\_map-base.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	4.6	9.0	15.6	21.8	26.6	30.4	33.6	36.2	36.5	36.5	36.5	36.5	36.5	36.5	36.5
18	0.0	4.4	8.2	13.6	19.4	24.6	28.8	31.8	34.0	35.2	35.7	35.7	35.7	35.7	35.7	35.7
20	0.0	3.4	7.4	12.2	17.8	21.6	26.0	29.2	31.8	33.4	34.0	34.0	34.0	34.0	34.0	34.0
22	0.0	3.2	6.0	11.4	16.2	20.2	23.6	26.6	28.4	29.8	30.7	30.7	30.7	30.7	30.7	30.7
24	0.0	2.4	4.6	10.4	15.6	19.2	22.8	25.6	27.8	29.2	29.5	29.5	29.5	29.5	29.5	29.5
26	0.0	2.2	4.0	10.0	15.0	18.9	21.9	24.6	27.1	28.6	29.1	29.1	29.1	29.1	29.1	29.1
28	0.0	2.0	3.3	9.4	14.0	18.0	21.4	24.1	26.7	28.0	29.1	29.1	29.1	29.1	29.1	29.1
30	0.0	2.0	3.3	9.5	13.9	17.4	20.6	23.4	26.6	28.4	29.1	29.1	29.1	29.1	29.1	29.1

## basore\_Map\_for\_1250

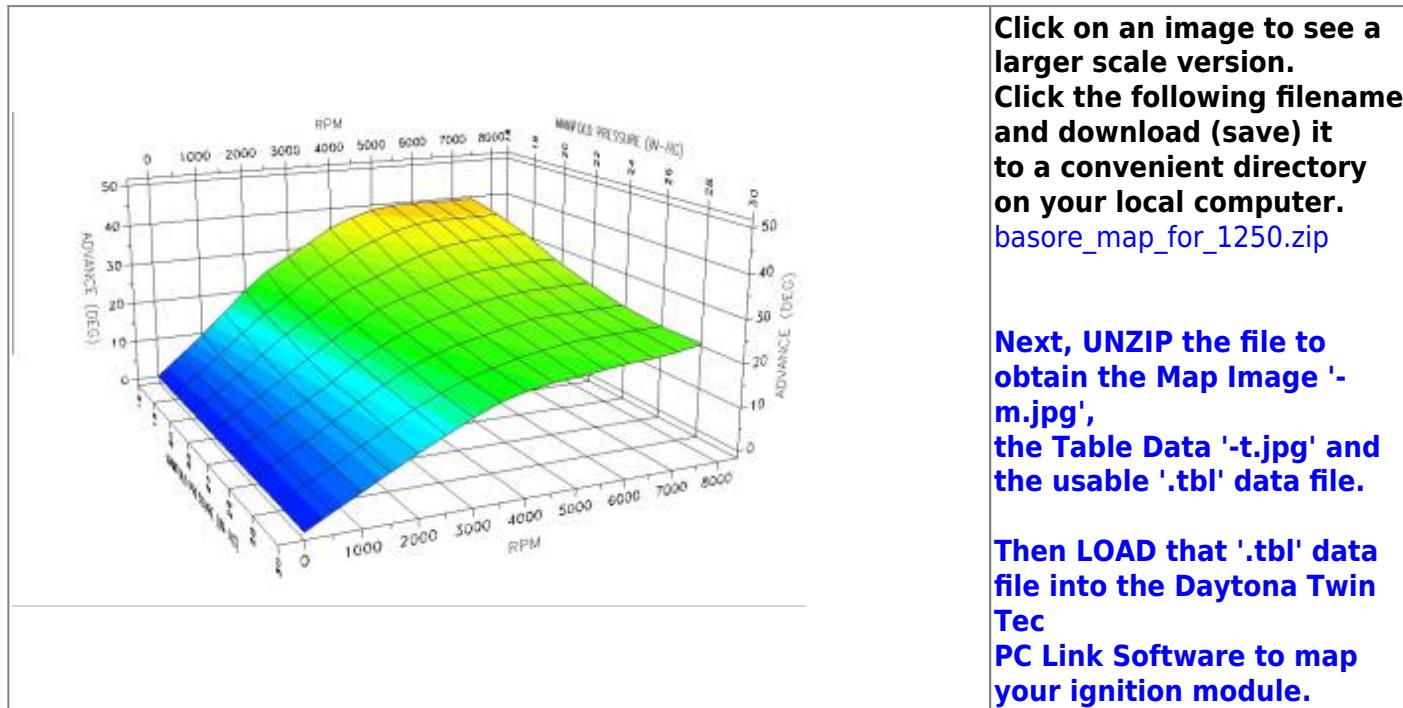


**Click on an image to see a larger scale version.  
Click the following filename and download (save) it to a convenient directory on your local computer.**  
[basore\\_map\\_for\\_1250.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	4.9	9.7	15.0	20.2	24.8	28.0	31.3	34.7	37.1	38.7	39.4	39.4	39.4	39.4	39.4
18	0.0	4.0	8.4	13.2	17.8	21.4	25.4	28.4	31.3	33.8	35.7	37.1	37.7	37.7	37.7	37.7
20	0.0	3.5	7.4	11.8	16.2	19.8	23.2	26.0	28.2	30.4	32.4	34.0	34.7	35.2	35.4	35.4
22	0.0	3.2	6.7	10.4	14.4	18.0	21.2	24.2	26.2	27.6	29.2	30.4	31.2	31.5	31.7	31.7
24	0.0	3.0	6.3	9.6	13.2	17.0	20.0	22.4	24.4	25.9	27.3	28.2	28.7	28.9	29.0	29.0
26	0.0	3.0	6.2	9.3	13.0	16.2	19.2	21.4	23.0	24.3	25.5	26.6	26.9	27.1	27.1	27.1
28	0.0	3.0	6.0	9.2	12.1	15.4	18.0	20.2	21.8	23.2	24.2	25.0	25.4	25.7	25.7	26.0
30	0.0	3.0	6.0	9.0	12.0	14.8	17.6	20.0	21.4	22.4	22.8	23.4	24.0	24.4	25.0	26.0

## basore\_Map\_for\_1250\_2

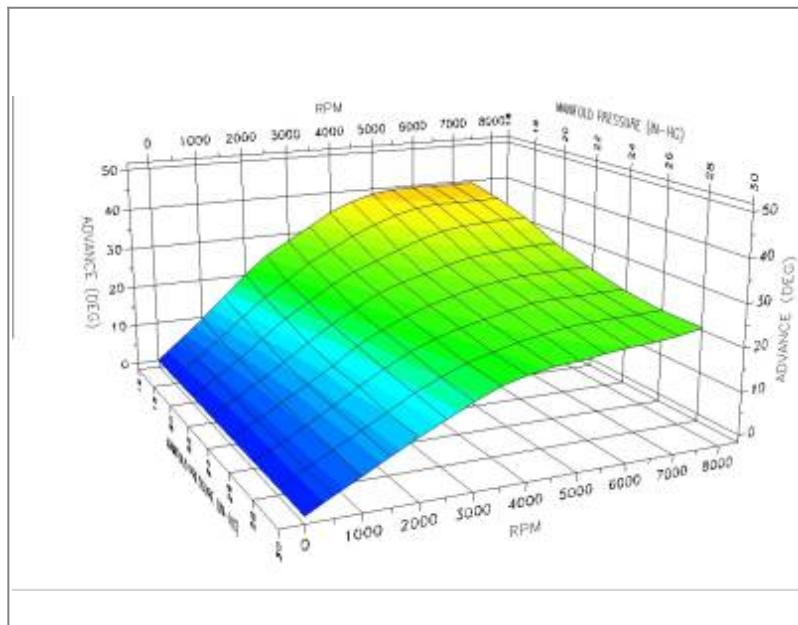


**Click on an image to see a larger scale version.  
Click the following filename and download (save) it to a convenient directory on your local computer.**  
[basore\\_map\\_for\\_1250\\_2.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec  
PC Link Software to map your ignition module.**

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	4.9	9.7	15.0	20.2	24.8	28.0	31.3	34.7	37.1	38.7	39.4	39.4	39.4	39.4	39.4
18	0.0	4.0	8.4	13.2	17.8	21.4	25.4	28.4	31.3	33.8	35.7	37.1	37.7	37.7	37.7	37.7
20	0.0	3.5	7.4	11.8	16.2	19.8	23.2	26.0	28.2	30.4	32.4	34.0	34.7	35.2	35.4	35.4
22	0.0	3.2	6.7	10.4	14.4	18.0	21.2	24.2	26.2	27.6	29.2	30.4	31.2	31.5	31.7	31.7
24	0.0	3.0	6.3	9.6	13.2	17.0	20.0	22.4	24.4	25.9	27.3	28.2	28.7	28.9	29.0	29.0
26	0.0	3.0	6.2	9.3	13.0	16.2	19.2	21.4	23.0	24.3	25.5	26.6	26.9	27.1	27.1	27.1
28	0.0	3.0	6.0	9.2	12.1	15.4	18.0	20.2	21.8	23.2	24.2	25.0	25.4	25.7	25.7	26.0
30	0.0	3.0	6.0	9.0	12.0	14.8	17.6	20.0	21.4	22.4	22.8	23.4	24.0	24.4	25.0	26.0

## Blue\_Bitch\_Table

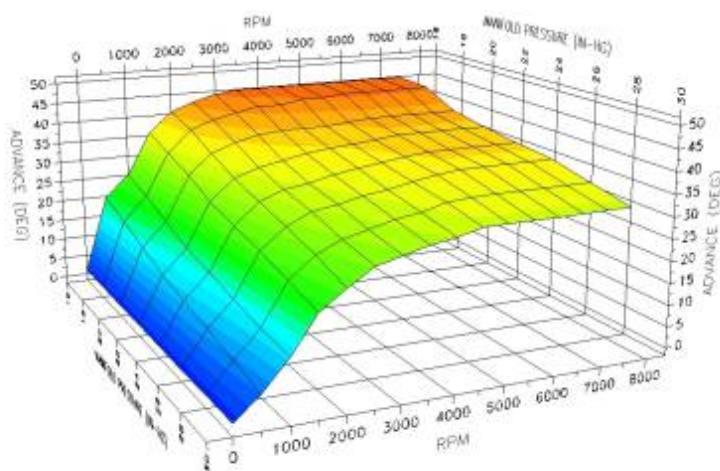


**Click on an image to see a larger scale version.  
Click the following filename and download (save) it to a convenient directory on your local computer.**  
[blue\\_bitch\\_table.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	1.1	19.7	25.2	35.6	40.5	42.6	44.2	44.9	44.9	44.9	44.9	44.9	44.9	44.9	44.9	44.9
18	1.1	17.1	23.1	33.3	38.7	40.7	42.1	43.1	43.1	44.0	44.0	44.5	44.5	44.5	44.5	44.5
20	1.1	14.6	20.2	31.0	35.9	37.8	39.2	39.8	39.8	39.8	40.3	40.8	40.8	40.8	40.8	40.8
22	1.1	12.1	17.8	28.2	33.1	35.0	36.1	37.3	37.8	38.4	38.9	39.4	39.4	39.4	39.4	39.4
24	1.1	10.7	16.4	26.2	31.2	33.3	34.1	35.4	36.3	37.0	37.8	38.4	38.4	38.4	38.4	38.4
26	1.1	9.2	15.0	24.8	29.4	31.9	32.7	34.0	34.8	35.9	37.0	37.5	37.5	37.5	37.5	37.5
28	1.1	7.6	13.4	22.7	27.3	29.7	31.2	32.6	33.4	34.8	35.4	35.4	35.4	35.4	35.4	35.4
30	1.1	6.0	12.5	20.8	24.8	28.3	29.7	31.2	32.0	33.4	33.4	33.4	33.4	33.4	33.4	33.4

## Greg\_Map\_2-0

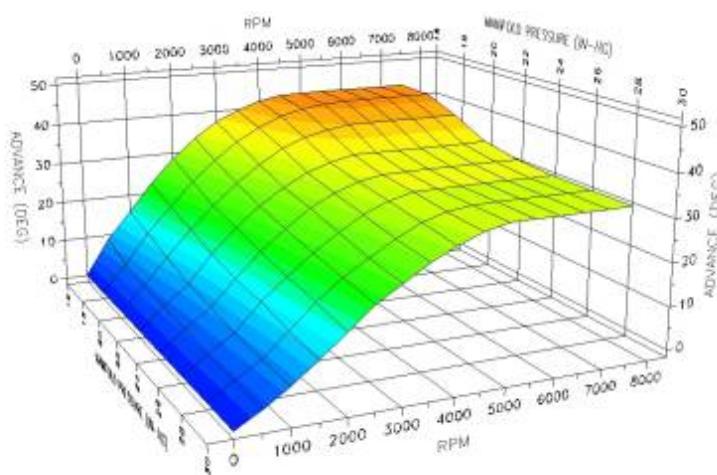


**Click on an image to see a larger scale version.**  
**Click the following filename and download (save) it to a convenient directory on your local computer.**  
[greg\\_map\\_2-0.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	9.0	15.6	22.6	28.6	33.4	37.2	39.8	41.8	42.8	43.0	43.0	43.0	43.0	43.0	43.0
18	0.0	6.4	13.8	20.0	25.0	30.6	34.8	38.0	40.4	41.8	42.6	43.0	43.0	43.0	43.0	43.0
20	0.0	5.6	11.8	18.0	23.2	28.2	32.2	35.8	37.8	39.2	40.0	40.0	40.0	40.0	40.0	40.0
22	0.0	5.0	9.6	16.0	21.6	26.2	30.0	33.0	34.8	36.0	36.0	36.0	36.0	36.0	36.0	36.0
24	0.0	4.4	8.6	14.4	20.0	24.6	28.6	31.4	33.4	34.6	34.6	34.6	34.6	34.6	34.6	34.6
26	0.0	4.0	7.8	13.8	18.6	23.0	27.0	30.2	32.6	34.0	34.0	34.0	34.0	34.0	34.0	34.0
28	0.0	3.6	7.2	12.4	17.6	22.0	25.4	28.8	31.6	33.2	34.0	34.0	34.0	34.0	34.0	34.0
30	0.0	3.2	7.0	11.4	16.2	21.0	24.4	28.0	30.6	32.8	34.0	34.0	34.0	34.0	34.0	34.0

## Hybrid\_2-0

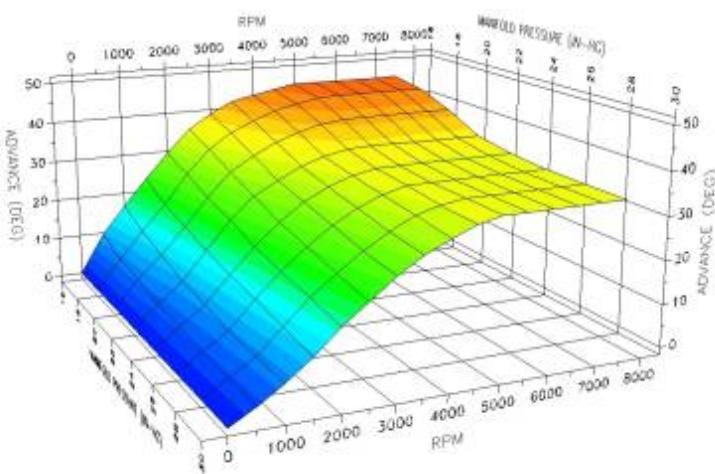


**Click on an image to see a larger scale version.  
Click the following filename and download (save) it to a convenient directory on your local computer.**  
[hybrid\\_2-0.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	9.6	16.6	23.2	29.4	35.2	39.0	41.6	43.0	44.0	45.0	45.0	45.0	45.0	45.0	45.0
18	0.0	7.2	13.8	20.0	27.2	33.0	36.8	39.4	41.4	42.8	43.8	44.0	44.0	44.0	44.0	44.0
20	0.0	6.5	11.8	18.2	24.8	30.4	34.0	36.8	38.8	40.2	41.0	41.0	41.0	41.0	41.0	41.0
22	0.0	5.0	9.6	16.4	22.8	28.0	31.2	34.0	35.8	37.0	37.2	37.2	37.0	37.0	37.0	37.0
24	0.0	4.4	8.6	14.8	20.6	25.6	29.6	32.4	34.4	35.6	35.6	35.6	35.6	35.6	35.6	35.6
26	0.0	4.0	7.8	13.8	19.2	24.0	28.0	31.2	33.6	35.0	35.0	35.0	35.0	35.0	35.0	35.0
28	0.0	3.6	7.2	12.6	18.0	22.4	26.4	29.8	32.6	34.2	35.0	35.0	35.0	35.0	35.0	35.0
30	0.0	3.2	7.0	11.4	16.8	21.0	25.4	29.0	31.6	33.8	35.0	35.0	35.0	35.0	35.0	35.0

## Hybrid\_2-0\_883\_Version

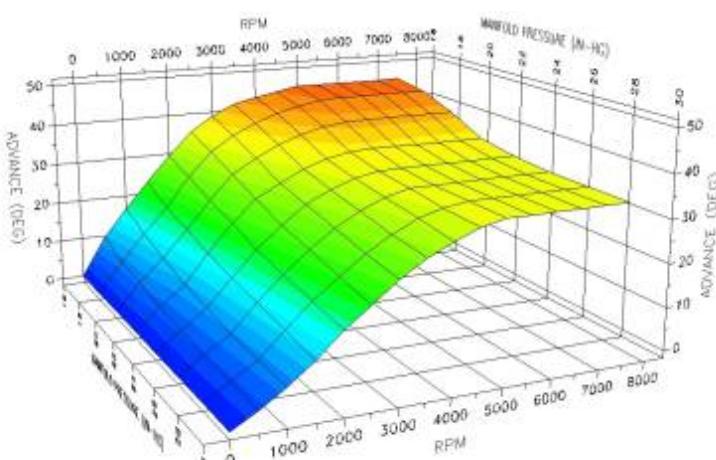


**Click on an image to see a larger scale version.  
Click the following filename and download (save) it to a convenient directory on your local computer.**  
[hybrid\\_2-0\\_883\\_version.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	9.6	16.6	23.2	29.4	35.2	39.0	41.6	43.0	44.0	45.0	45.0	45.0	45.0	45.0	45.0
18	0.0	7.2	13.8	20.0	27.2	33.0	36.8	39.4	41.4	42.8	43.8	44.0	44.0	44.0	44.0	44.0
20	0.0	6.5	11.8	18.2	24.8	30.4	34.0	36.8	38.8	40.2	41.0	41.0	41.0	41.0	41.0	41.0
22	0.0	5.0	9.6	16.4	22.8	28.0	31.2	34.0	35.8	37.0	37.2	37.2	37.0	37.0	37.0	37.0
24	0.0	4.4	8.6	14.8	20.6	25.6	29.6	32.4	34.4	35.6	35.6	35.6	35.6	35.6	35.6	35.6
26	0.0	4.0	7.8	13.8	19.2	24.0	28.0	31.2	33.6	35.0	35.0	35.0	35.0	35.0	35.0	35.0
28	0.0	3.6	7.2	12.6	18.0	22.4	26.4	29.8	32.6	34.2	35.0	35.0	35.0	35.0	35.0	35.0
30	0.0	3.2	7.0	11.4	16.8	21.0	25.4	29.0	31.6	33.8	35.0	35.0	35.0	35.0	35.0	35.0

jak\_2

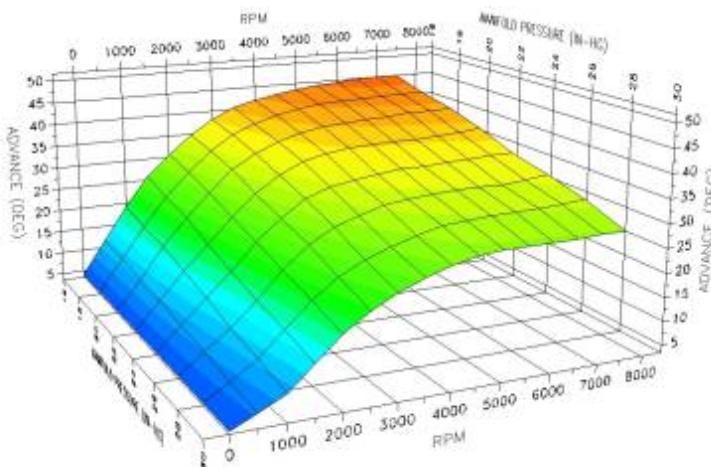


**Click on an image to see a larger scale version.  
Click the following filename and download (save) it to a convenient directory on your local computer.**  
[jak\\_2.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	4.0	11.6	19.2	25.8	30.6	34.8	38.0	40.4	41.8	42.8	43.6	44.2	44.4	45.0	45.0	45.0
18	4.0	11.0	17.8	24.2	29.4	33.8	37.0	39.0	40.6	41.6	42.4	42.6	42.8	43.0	43.0	43.0
20	4.0	10.2	17.0	22.8	27.8	32.4	35.4	37.8	39.0	40.0	40.4	40.8	41.0	41.4	41.4	41.6
22	4.0	9.8	15.4	20.6	25.8	30.2	33.6	36.0	37.2	38.0	38.2	38.4	38.4	38.6	39.0	39.4
24	4.0	8.8	13.8	18.6	24.0	28.2	31.8	33.6	34.6	35.2	35.8	35.8	36.2	36.6	36.6	36.6
26	4.0	8.0	12.0	16.8	22.2	26.4	29.4	31.0	32.6	33.2	33.6	33.8	33.8	34.2	34.8	
28	4.0	7.0	10.6	15.4	20.2	24.0	26.6	28.4	30.0	31.2	31.6	32.0	32.0	32.2	32.4	32.8
30	4.0	6.4	9.0	13.6	18.4	21.8	24.4	26.4	28.0	29.2	29.6	29.6	29.6	29.8	29.8	

## jak\_3

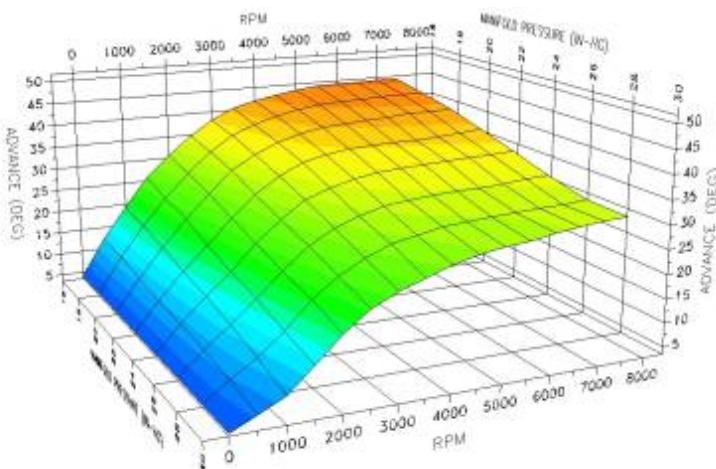


**Click on an image to see a larger scale version.  
Click the following filename and download (save) it to a convenient directory on your local computer.**  
[jak\\_3.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	4.0	12.2	19.2	25.8	30.6	34.8	38.0	40.4	41.8	42.8	43.6	44.2	44.2	44.2	44.4	44.4
18	4.0	11.8	18.2	24.2	29.4	33.8	37.0	39.0	40.6	41.6	42.4	42.6	42.8	43.0	43.0	43.0
20	4.0	10.6	17.0	22.8	27.8	32.4	35.4	37.6	39.0	40.0	40.4	40.8	41.0	41.4	41.4	41.6
22	4.0	10.0	15.6	20.6	25.8	30.2	33.6	36.0	37.2	38.0	38.2	38.4	38.4	38.6	39.0	39.4
24	4.0	9.4	14.4	18.8	24.0	28.2	31.8	33.6	35.0	35.8	36.2	36.4	36.6	36.8	37.0	37.2
26	4.0	8.8	13.0	17.4	22.2	26.4	29.4	31.2	32.6	33.2	33.6	33.8	33.8	34.2	34.6	34.8
28	4.0	7.8	11.2	15.4	20.6	24.4	27.2	29.2	30.2	31.2	31.6	32.0	32.2	32.4	32.6	33.0
30	4.0	6.4	9.0	13.6	18.6	22.4	25.0	26.6	28.4	29.6	30.4	30.8	31.6	32.2	32.6	32.8

**jak\_10-5**

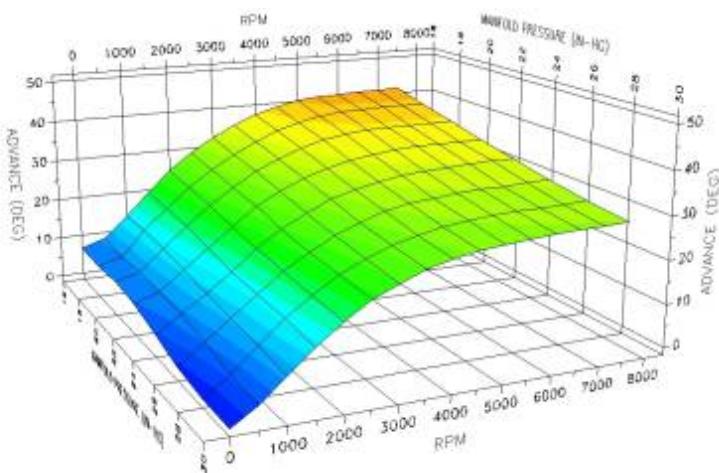


**Click on an image to see a larger scale version.  
Click the following filename and download (save) it to a convenient directory on your local computer.**  
[jak\\_10-5.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	6.6	8.4	13.8	19.4	24.6	28.8	32.2	35.0	37.4	39.0	40.2	40.8	40.8	41.2	41.2	41.4
18	6.2	7.9	13.9	18.8	23.6	27.6	30.9	33.6	36.0	37.6	38.8	39.4	39.4	39.6	39.6	39.4
20	6.6	8.2	13.2	18.2	22.6	26.4	29.8	32.4	34.4	36.0	37.0	37.6	37.6	37.6	37.6	37.6
22	5.8	7.8	12.4	16.8	21.2	25.4	28.4	30.8	32.6	34.0	34.8	35.4	35.8	35.8	35.8	35.8
24	3.6	7.4	11.4	15.4	20.2	23.8	26.8	29.4	31.0	32.2	33.0	33.4	33.8	34.0	34.2	34.0
26	1.4	6.2	10.4	14.8	19.2	22.6	25.6	27.8	29.6	30.8	31.2	31.8	32.0	32.0	32.2	32.4
28	0.2	4.4	9.6	14.4	18.4	22.0	24.6	26.8	28.2	29.4	30.0	30.4	30.6	30.8	31.0	31.0
30	0.0	3.6	8.6	13.4	17.8	21.4	23.8	26.0	27.4	28.4	28.8	29.2	29.6	29.8	30.0	30.0

## Jester\_Delta

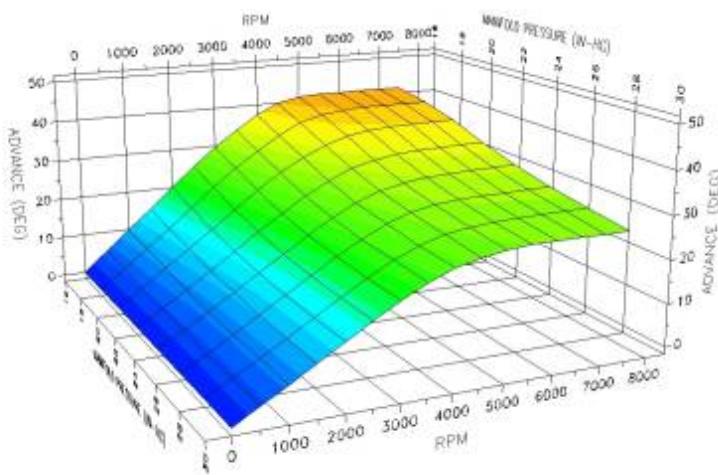


**Click on an image to see a larger scale version.  
Click the following filename and download (save) it to a convenient directory on your local computer.**  
[jester\\_delta.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	5.1	10.0	15.0	20.1	25.0	29.6	33.6	37.3	40.0	41.2	41.5	41.5	41.5	41.5	41.5
18	0.0	4.4	9.0	13.6	18.1	22.9	27.3	31.2	34.7	37.5	39.1	39.8	40.1	40.1	40.1	40.1
20	0.0	4.0	8.3	12.3	16.5	20.8	25.0	28.9	32.0	34.7	36.4	37.3	37.7	37.8	38.0	38.0
22	0.0	3.7	7.4	11.3	15.1	19.2	22.9	26.6	29.6	32.0	33.4	34.3	34.7	34.8	35.0	35.0
24	0.0	3.3	6.9	10.6	14.3	18.0	21.6	25.0	27.8	29.9	31.2	31.9	32.2	32.4	32.6	32.6
26	0.0	3.2	6.7	10.2	13.7	17.2	20.8	23.9	26.8	28.7	29.7	30.3	30.4	30.6	30.6	30.6
28	0.0	3.3	6.7	10.0	13.6	17.1	20.4	23.6	25.9	27.6	28.5	28.9	29.0	29.2	29.2	29.2
30	0.0	3.3	6.5	10.0	13.6	17.1	20.2	23.1	25.3	26.8	27.6	28.0	28.0	28.0	28.0	28.0

## Jester\_Motorwerkz\_88-90\_Inch\_Map\_Generic\_Mod\_1

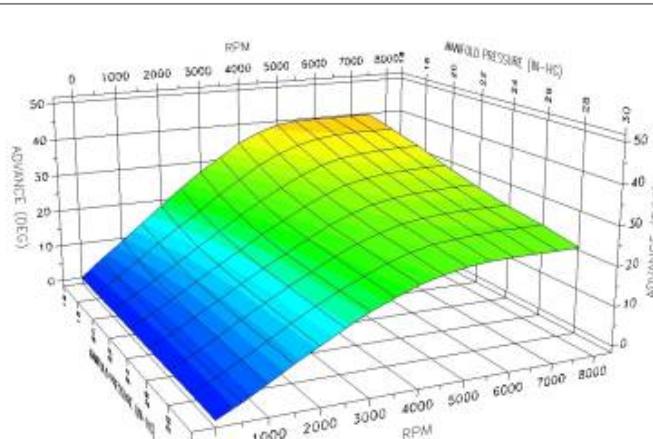

**Click on an image to see a larger scale version.  
Click the following filename and download (save) it  
to a convenient directory on your local computer.**


[jester\\_motorwerkz\\_88-90\\_inch\\_map\\_generic\\_mod\\_1.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg',  
the Table Data '-t.jpg' and the usable '.tbl' data  
file.**

**Then LOAD that '.tbl' data file into the Daytona  
Twin Tec  
PC Link Software to map your ignition module.**

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	4.8	9.3	13.8	18.4	22.8	27.0	30.8	34.4	37.0	38.8	39.7	39.7	39.7	39.7	39.7
18	0.0	3.8	7.8	12.0	15.9	19.8	23.8	27.4	31.0	33.8	35.8	37.1	37.8	37.9	37.9	37.9
20	0.0	3.3	6.8	10.4	14.1	17.7	21.4	24.8	28.0	30.7	33.0	34.3	35.2	35.6	35.8	35.8
22	0.0	3.0	6.3	9.8	13.3	16.6	20.0	23.1	26.3	28.8	30.7	32.0	32.7	33.0	33.2	33.2
24	0.0	2.8	6.0	9.4	12.8	16.0	19.1	22.0	24.9	27.2	29.0	30.1	30.7	30.9	31.1	31.1
26	0.0	2.9	6.1	9.4	12.7	15.8	18.8	21.6	24.2	26.1	27.6	28.5	28.9	29.0	29.1	29.1
28	0.0	2.8	6.0	9.3	12.6	15.7	18.6	21.2	23.5	25.2	26.5	27.1	27.5	27.7	27.7	27.7
30	0.0	2.8	6.0	9.3	12.5	15.5	18.4	20.8	22.9	24.3	25.2	25.8	26.0	26.0	26.0	26.0

## Jester\_Motorwerkz\_88-90\_Inch\_Map\_Generic\_VSS\_05\_1200

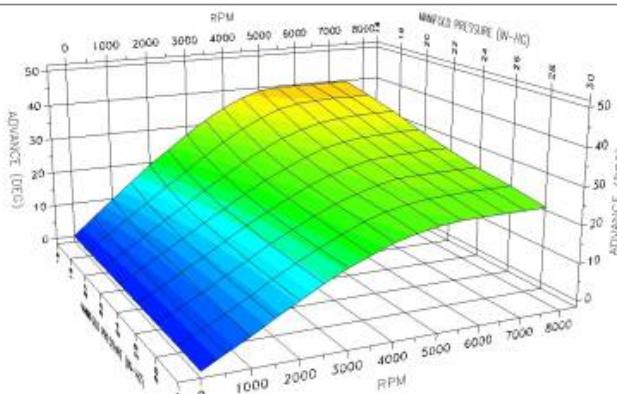

**Click on an image to see a larger scale version.  
Click the following filename and download (save) it  
to a convenient directory on your local computer.**


[jester\\_motorwerkz\\_88-90\\_inch\\_map\\_generic\\_vss\\_05\\_1200.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg',  
the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin  
Tec  
PC Link Software to map your ignition module.**

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	5.0	9.8	14.5	19.2	23.2	27.4	31.3	34.5	37.2	39.0	39.7	39.7	39.7	39.7	39.7
18	0.0	4.0	8.1	12.2	16.3	20.2	24.1	27.8	31.2	33.9	36.0	37.2	37.8	37.9	37.9	37.9
20	0.0	3.5	7.1	10.9	14.6	18.3	21.7	25.1	28.2	30.9	33.0	34.3	35.2	35.6	35.8	35.8
22	0.0	3.2	6.6	10.1	13.8	17.0	20.4	23.5	26.3	28.8	30.7	32.0	32.7	33.0	33.2	33.2
24	0.0	3.0	6.3	9.7	13.1	16.5	19.5	22.4	25.0	27.3	28.9	30.2	30.7	30.9	31.1	31.1
26	0.0	3.0	6.1	9.4	12.7	16.0	18.9	21.7	24.2	26.1	27.6	28.7	28.9	29.0	29.1	29.1
28	0.0	3.0	6.0	9.3	12.6	15.7	18.6	21.2	23.7	25.3	26.5	27.2	27.5	27.7	27.7	27.7
30	0.0	3.0	6.0	9.3	12.5	15.7	18.5	20.8	22.9	24.3	25.2	25.8	26.0	26.0	26.0	26.0

## Jester\_Motorwerkz\_Moscow\_Map

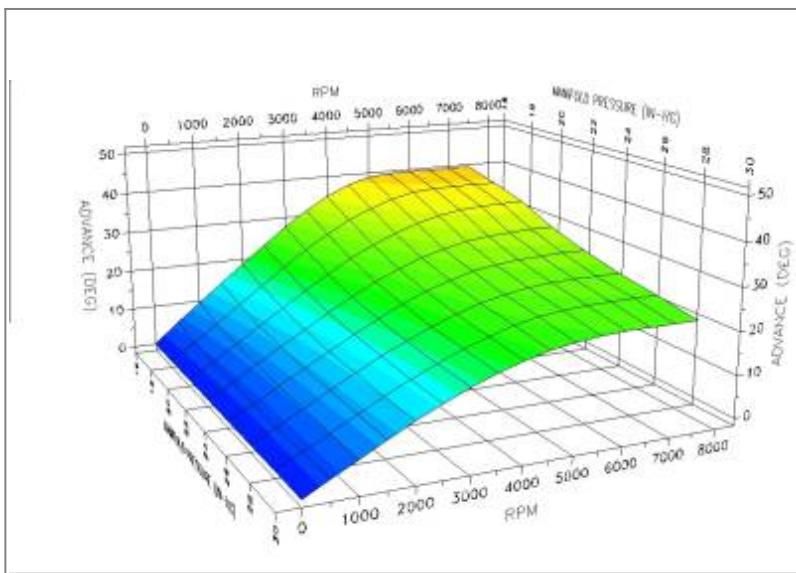

**Click on an image to see a larger scale version.**

**Click the following filename and download (save) it to a convenient directory on your local computer.**


[jester\\_motorwerkz\\_moscow\\_map.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	5.0	9.6	14.2	18.6	23.1	27.4	31.3	34.6	37.2	38.8	39.4	39.4	39.4	39.4	39.4
18	0.0	4.0	8.1	12.3	16.5	20.7	24.6	28.1	31.3	33.8	35.8	37.0	37.6	37.6	37.6	37.6
20	0.0	3.5	7.1	10.9	14.7	18.5	22.0	25.3	28.1	30.5	32.4	33.8	34.7	35.2	35.4	35.3
22	0.0	3.2	6.6	10.1	13.6	17.0	20.1	23.0	25.5	27.7	29.2	30.5	31.2	31.5	31.7	31.7
24	0.0	3.0	6.3	9.5	12.7	15.9	18.8	21.5	23.9	25.8	27.2	28.2	28.7	28.9	29.1	29.1
26	0.0	3.0	6.1	9.3	12.3	15.3	17.9	20.4	22.6	24.2	25.5	26.5	26.9	27.0	27.1	27.1
28	0.0	3.0	6.0	9.1	12.0	14.8	17.4	19.8	21.7	23.3	24.5	25.2	25.5	25.7	25.7	25.7
30	0.0	3.0	6.0	9.0	12.0	14.7	17.2	19.2	20.9	22.3	23.2	23.8	24.0	24.0	24.0	24.0

## Jester\_Motorwerkz\_Rocketman\_01-15\_Map

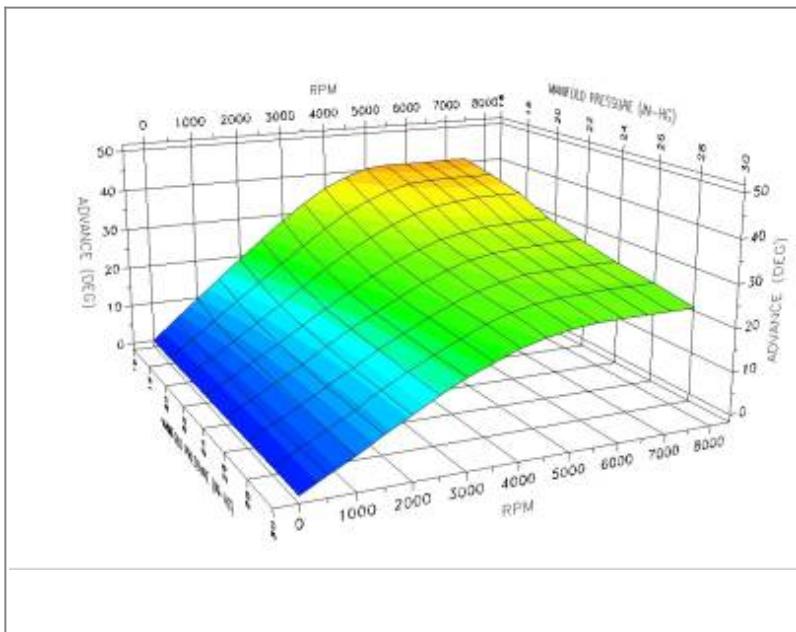

**Click on an image to see a larger scale version.**

**Click the following filename and download (save) it to a convenient directory on your local computer.**


[jester\\_motorwerkz\\_rocketman\\_01-15\\_map.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**


MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	5.0	9.8	14.5	19.2	23.9	28.4	32.5	36.0	39.7	40.4	40.9	40.9	40.9	40.9	40.9
18	0.0	4.0	8.1	12.5	16.6	20.9	24.9	28.7	32.2	35.1	37.3	38.6	39.1	39.1	39.1	39.1
20	0.0	3.5	7.1	10.9	14.8	18.7	22.5	26.0	29.2	31.9	34.0	35.5	36.3	36.7	36.9	36.9
22	0.0	3.2	6.6	10.2	13.8	17.2	20.5	23.7	26.5	28.9	30.7	32.0	32.7	33.0	33.2	33.2
24	0.0	3.1	6.3	9.7	13.1	16.5	19.5	22.4	25.0	27.4	29.1	30.2	30.7	30.9	31.1	31.1
26	0.0	3.0	6.1	9.4	12.7	16.0	18.9	21.7	24.2	26.2	27.7	28.7	28.9	29.0	29.1	29.1
28	0.0	3.0	6.0	9.3	12.6	15.7	18.6	21.2	23.7	25.3	26.5	27.2	27.5	27.7	27.7	27.7
30	0.0	3.0	6.0	9.3	12.5	15.7	18.5	20.8	22.9	24.3	25.2	25.8	26.0	26.0	26.0	26.0

## Jester\_Motorwerkz\_Rocketman\_03-15\_Map

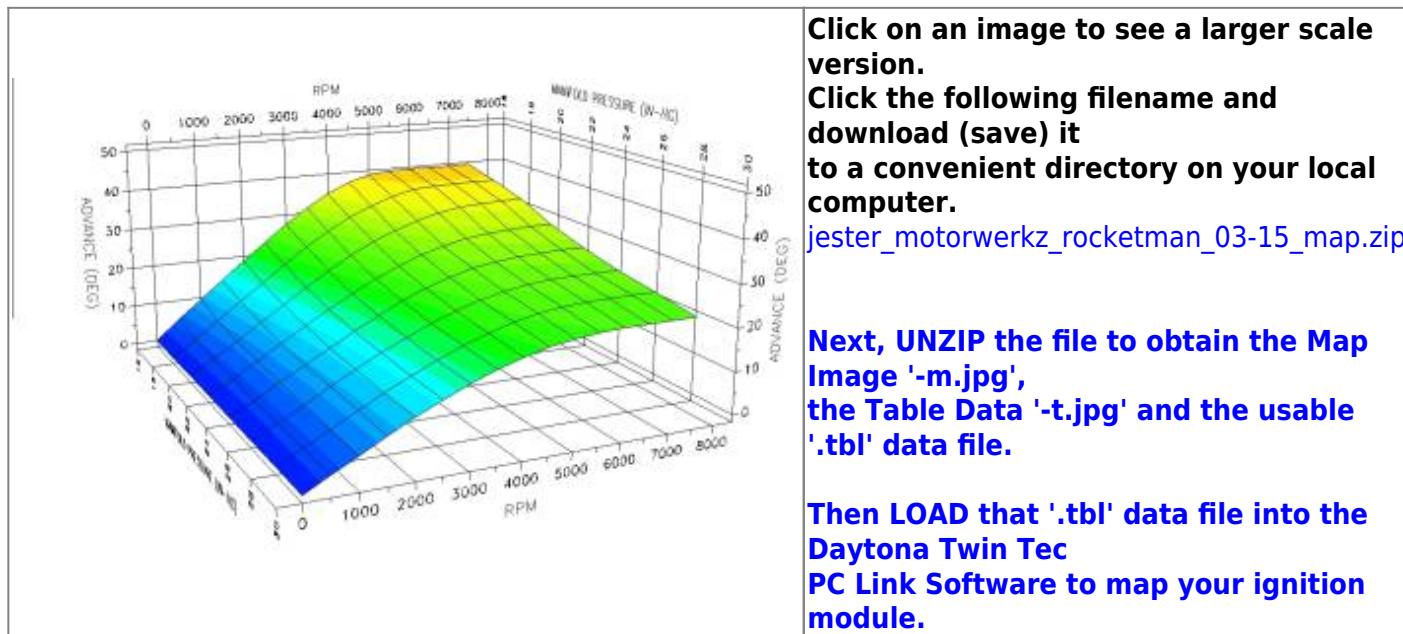

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	5.0	9.6	14.2	18.6	23.1	27.4	31.4	34.6	37.2	38.8	39.4	39.4	39.4	39.4	39.4
18	0.0	4.0	8.1	12.3	16.5	20.7	24.6	28.1	31.3	33.8	35.8	37.1	37.6	37.6	37.6	37.6
20	0.0	3.5	7.1	10.9	14.7	18.5	22.1	25.3	28.2	30.5	32.4	33.9	34.7	35.2	35.4	35.4
22	0.0	3.2	6.6	10.1	13.7	17.0	20.1	23.0	25.5	27.7	29.2	30.5	31.2	31.5	31.7	31.7
24	0.0	3.0	6.3	9.5	12.7	15.9	18.8	21.5	23.9	25.8	27.2	28.2	28.7	28.9	29.1	29.1
26	0.0	3.0	6.1	9.3	12.3	15.3	18.0	20.4	22.6	24.2	25.5	26.5	26.9	27.0	27.1	27.1
28	0.0	3.0	6.0	9.1	12.1	14.8	17.4	19.8	21.7	23.3	24.5	25.2	25.5	25.7	25.7	25.7
30	0.0	3.0	6.0	9.0	12.0	14.7	17.2	19.2	20.9	22.3	23.2	23.8	24.0	24.0	24.0	24.0

## Jester\_Motorwerkz\_Rocketman\_04-15\_Map

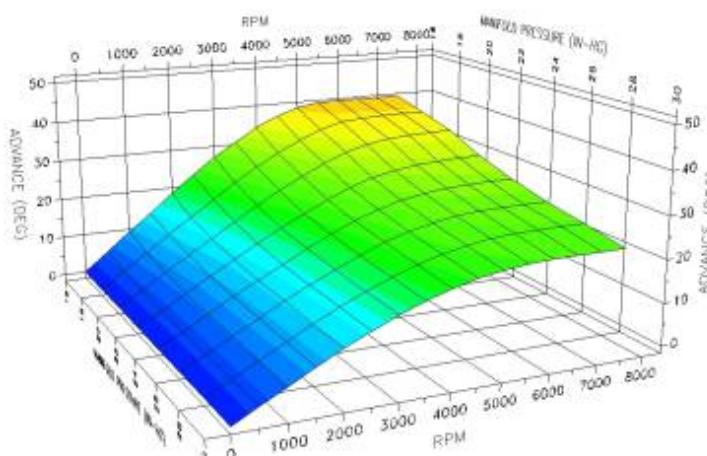


**Click on an image to see a larger scale version.**  
**Click the following filename and download (save) it to a convenient directory on your local computer.**  
[jester\\_motorwerkz\\_rocketman\\_04-15\\_map.zip](http://jester.motorwerkz.rocketman_04-15_map.zip)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	4.7	9.4	13.8	18.5	22.8	27.0	30.6	34.0	36.6	38.5	39.4	39.4	39.4	39.4	39.4
18	0.0	4.0	7.9	12.0	15.8	19.8	23.5	27.1	30.3	33.1	35.4	36.9	37.4	37.6	37.6	37.6
20	0.0	3.3	7.0	10.7	14.2	17.7	21.2	24.3	27.4	30.1	32.3	33.8	34.7	35.2	35.4	35.4
22	0.0	3.1	6.4	9.8	13.0	16.2	19.3	22.2	24.9	27.3	29.2	30.4	31.2	31.5	31.7	31.7
24	0.0	3.0	6.2	9.4	12.5	15.4	18.5	21.1	23.5	25.6	27.1	28.2	28.7	28.9	29.1	29.1
26	0.0	3.0	6.1	9.2	12.3	15.1	17.8	20.3	22.5	24.2	25.5	26.5	27.0	27.1	27.1	27.1
28	0.0	3.0	6.0	9.1	12.1	14.8	17.4	19.7	21.7	23.2	24.4	25.1	25.5	25.7	25.7	25.7
30	0.0	3.0	6.0	9.0	12.0	14.7	17.2	19.2	20.9	22.3	23.2	23.6	24.0	24.0	24.0	24.0

## Jester\_Motorwerkz\_Rocketman\_04-28-2015\_Map

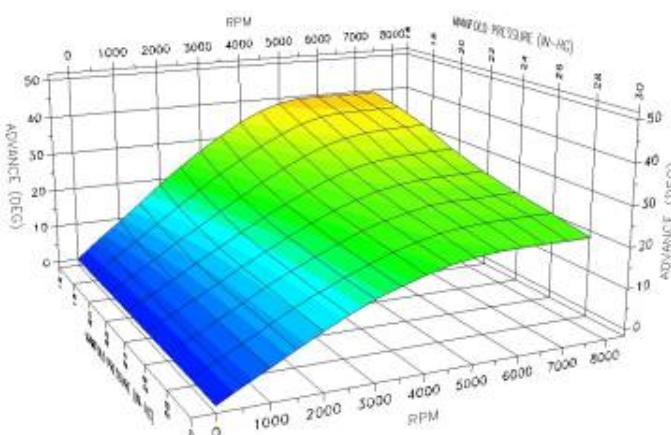


**Click on an image to see a larger scale version.**  
**Click the following filename and download (save) it to a convenient directory on your local computer.**  
[jester\\_motorwerkz\\_rocketman\\_04-28-2015\\_map.zip](http://jester.motorwerkz.rocketman_04-28-2015_map.zip)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**


MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	4.8	9.3	13.7	18.5	22.9	26.9	30.6	34.0	36.6	38.5	39.4	39.4	39.4	39.4	39.4
18	0.0	4.0	7.9	12.0	15.8	19.9	23.6	27.1	30.3	33.1	35.4	37.0	37.5	37.7	37.7	37.7
20	0.0	3.3	7.0	10.7	14.3	17.8	21.1	24.3	27.5	30.1	32.4	33.8	34.7	35.2	35.4	35.4
22	0.0	3.2	6.3	9.9	13.0	16.2	19.4	22.2	24.8	27.3	29.2	30.4	31.2	31.5	31.7	31.7
24	0.0	3.0	6.2	9.3	12.5	15.5	18.5	21.1	23.6	25.5	27.1	28.2	28.7	28.9	29.0	29.0
26	0.0	3.0	6.2	9.2	12.3	15.1	17.8	20.2	22.5	24.3	25.5	26.6	26.9	27.1	27.1	27.1
28	0.0	3.0	6.0	9.2	12.1	14.8	17.4	19.7	21.6	23.2	24.5	25.2	25.5	25.7	25.7	25.7
30	0.0	3.0	6.0	9.0	12.0	14.8	17.2	19.2	20.9	22.4	23.2	23.8	23.9	23.9	23.9	23.9

## Jester\_Motorwerkz\_Rocketman\_05-15\_Map

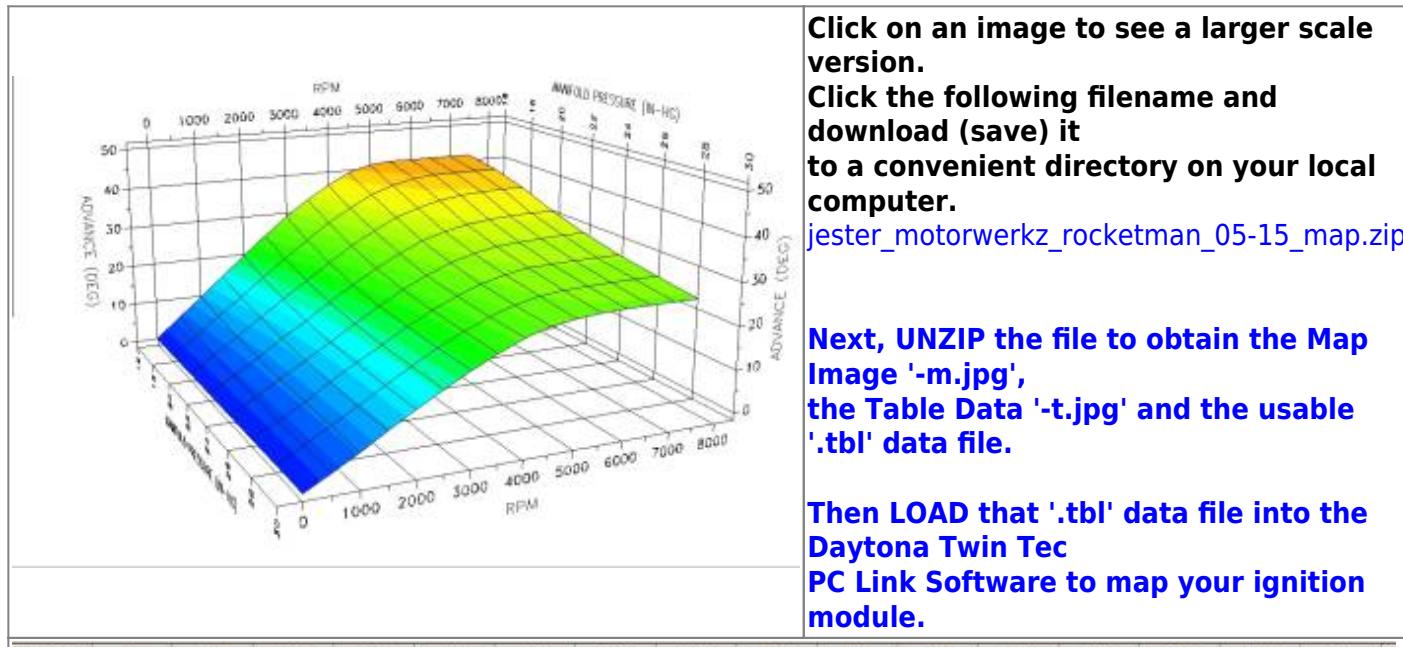


MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	5.0	9.8	14.8	19.6	24.5	29.0	33.0	36.4	39.3	41.0	41.5	41.5	41.5	41.5	41.5
18	0.0	4.4	8.7	13.0	17.5	21.8	26.0	29.9	33.3	36.3	38.2	39.5	40.0	40.1	40.1	40.1
20	0.0	3.9	7.8	11.8	15.8	19.7	23.6	27.2	30.5	33.3	35.2	36.6	37.3	37.7	37.9	37.9
22	0.0	3.5	7.1	10.8	14.4	18.2	21.8	25.1	28.1	30.6	32.4	33.6	34.2	34.5	34.7	34.7
24	0.0	3.3	6.7	10.2	13.7	17.2	20.6	23.8	26.5	28.8	30.4	31.4	31.9	32.1	32.3	32.3
26	0.0	3.1	6.5	10.0	13.4	16.7	20.0	22.9	25.4	27.5	29.0	29.9	30.1	30.2	30.3	30.3
28	0.0	3.1	6.4	9.8	13.2	16.5	19.7	22.4	24.9	26.7	27.9	28.5	28.7	28.9	28.9	28.9
30	0.0	3.1	6.3	9.8	13.2	16.4	19.5	22.2	24.6	26.2	27.1	27.6	27.7	27.7	27.7	27.7

## Jester\_Motorwerkz\_Rocketman\_12-14\_Map

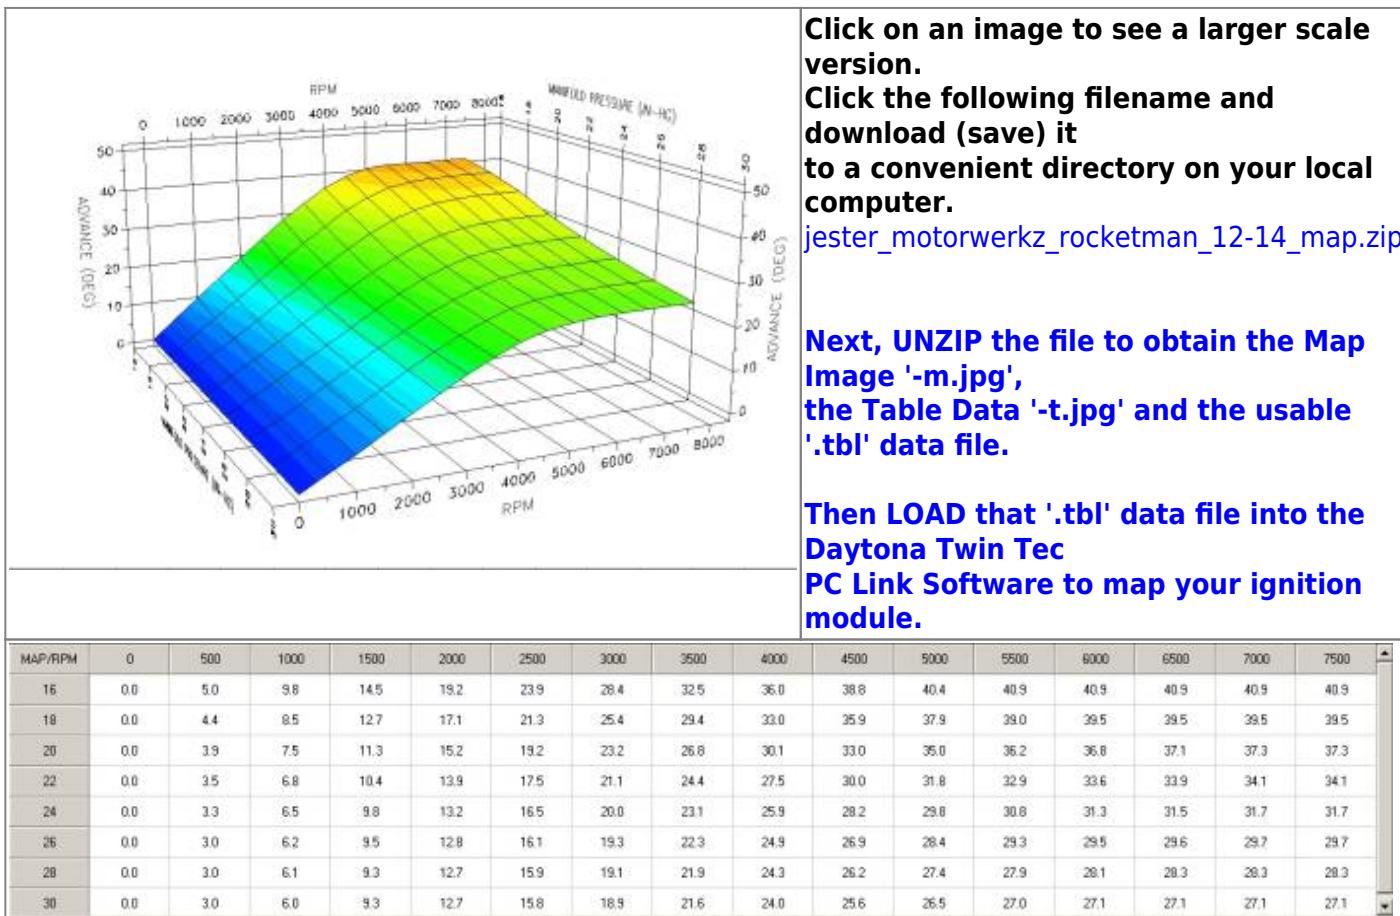


## Jester\_Motorwerkz\_Scarecrow\_Map

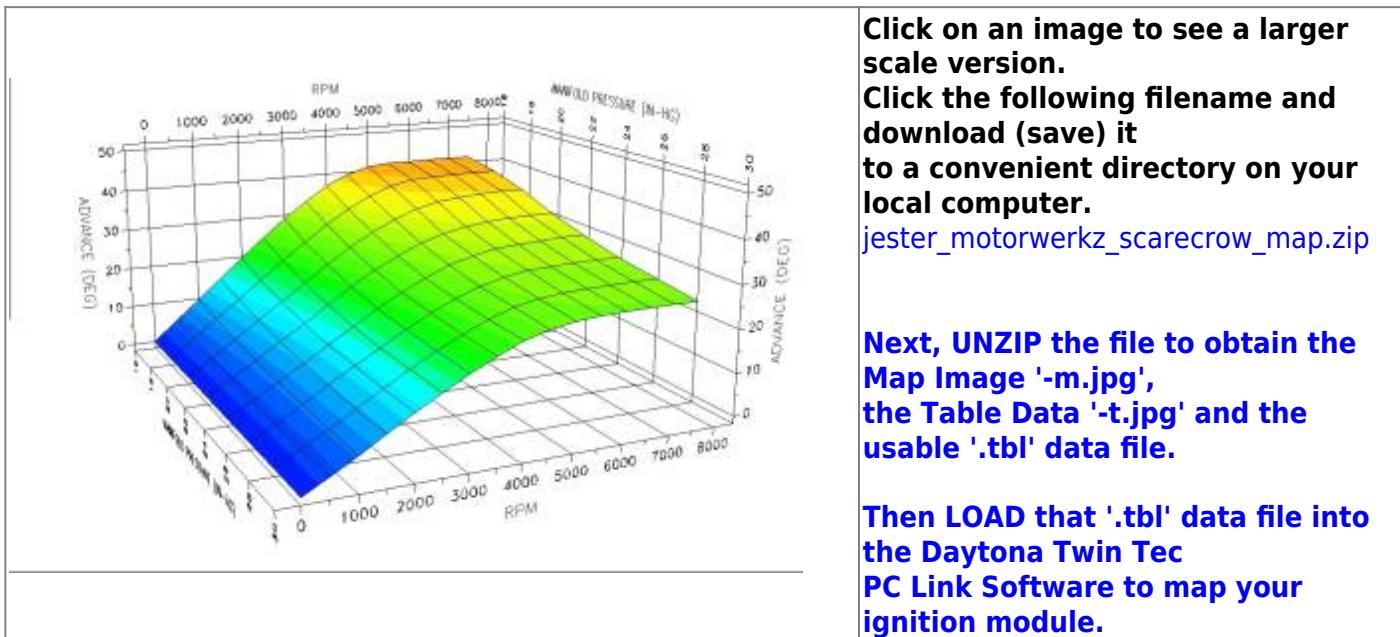


MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	5.0	9.8	14.8	19.6	24.5	29.0	33.0	36.7	39.4	41.0	41.5	41.5	41.5	41.5	41.5
18	0.0	4.4	8.7	13.1	17.5	21.9	26.0	30.0	33.5	36.5	38.6	39.7	40.0	40.1	40.1	40.1
20	0.0	3.9	7.8	11.8	15.8	19.8	23.8	27.5	30.7	33.4	35.4	36.7	37.3	37.7	37.9	37.9
22	0.0	3.5	7.1	10.8	14.5	18.2	21.9	25.3	28.2	30.7	32.4	33.6	34.2	34.5	34.7	34.7
24	0.0	3.3	6.7	10.2	13.7	17.2	20.6	23.8	26.5	28.8	30.4	31.4	31.9	32.1	32.3	32.3
26	0.0	3.1	6.5	10.0	13.4	16.7	20.0	22.9	25.4	27.5	29.0	29.9	30.1	30.2	30.3	30.3
28	0.0	3.1	6.4	9.8	13.2	16.5	19.7	22.5	24.9	26.8	28.0	28.5	28.7	28.9	28.9	28.9
30	0.0	3.1	6.3	9.8	13.2	16.4	19.5	22.2	24.6	26.2	27.1	27.6	27.7	27.7	27.7	27.7

## Lenster\_Rico\_Hybrid\_Map

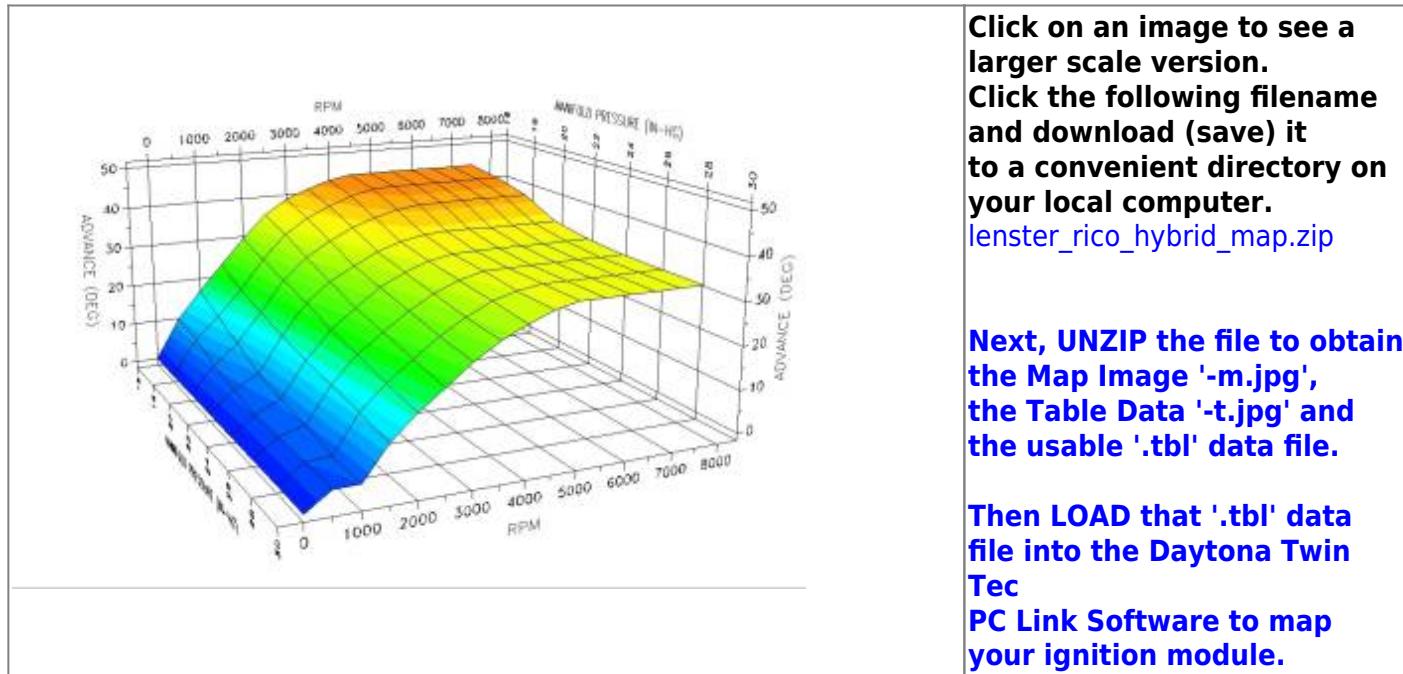

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	10.0	16.8	23.2	29.4	35.2	39.0	41.2	43.0	44.0	44.0	44.0	44.0	44.0	44.0	44.0
18	0.0	8.6	13.8	20.0	27.2	33.0	36.8	39.4	41.4	42.8	43.0	43.0	43.0	43.0	43.0	43.0
20	0.0	6.2	11.0	18.2	25.4	30.4	34.0	36.8	38.8	40.2	41.0	41.0	41.0	41.0	41.0	41.0
22	0.0	5.0	8.0	16.4	23.6	28.0	31.2	34.0	35.8	37.0	37.2	37.2	37.0	37.0	37.0	37.0
24	0.0	4.0	6.6	14.8	21.2	25.6	29.6	32.4	34.4	35.6	35.6	35.6	35.6	35.6	35.6	35.6
26	0.0	4.0	5.8	13.8	19.8	24.0	28.0	31.2	33.6	35.0	35.0	35.0	35.0	35.0	35.0	35.0
28	0.0	4.0	4.2	12.6	18.0	22.4	26.4	29.8	32.6	34.2	35.0	35.0	35.0	35.0	35.0	35.0
30	0.0	4.0	4.0	11.4	16.8	21.0	25.4	29.0	31.6	33.8	35.0	35.0	35.0	35.0	35.0	35.0

## Lenster-s\_Map

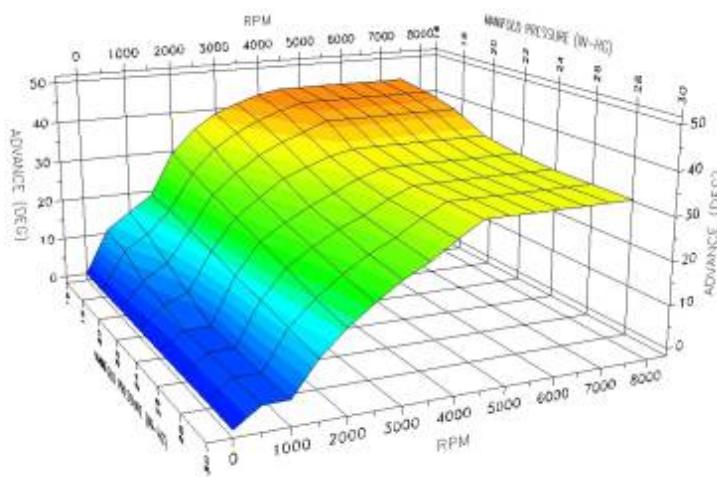


**Click on an image to see a larger scale version.  
Click the following filename and download (save) it to a convenient directory on your local computer.**  
[lenster-s\\_map.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	11.0	15.0	19.0	29.4	35.2	39.0	41.2	43.0	44.0	44.0	44.0	44.0	44.0	44.0	44.0
18	0.0	9.4	13.0	18.6	27.4	33.0	36.8	39.4	41.4	43.0	43.0	43.0	43.0	43.0	43.0	43.0
20	0.0	6.2	10.0	17.4	25.4	30.2	34.0	36.8	38.8	41.0	41.0	41.0	41.0	41.0	41.0	41.0
22	0.0	5.0	7.0	16.4	23.6	27.6	31.6	33.8	35.8	37.0	37.0	37.0	37.0	37.0	37.0	37.0
24	0.0	4.0	4.0	14.8	22.0	25.6	28.6	31.2	33.8	35.6	35.6	35.6	35.6	35.6	35.6	35.6
26	0.0	4.0	4.0	13.8	20.2	24.0	27.2	29.6	32.6	35.0	35.0	35.0	35.0	35.0	35.0	35.0
28	0.0	4.0	4.0	12.6	18.0	22.4	25.8	28.6	32.2	35.0	35.0	35.0	35.0	35.0	35.0	35.0
30	0.0	4.0	4.0	11.4	16.8	21.0	24.8	27.8	31.6	35.0	35.0	35.0	35.0	35.0	35.0	35.0

## MAP\_Modified\_33

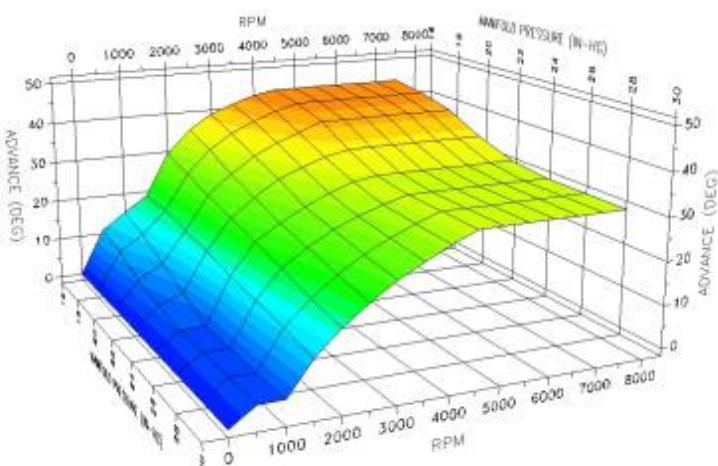


**Click on an image to see a larger scale version.  
Click the following filename and download (save) it to a convenient directory on your local computer.**  
[map\\_modified\\_33.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**


MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	11.0	15.0	19.0	29.4	35.2	39.0	41.2	43.0	44.0	44.0	44.0	44.0	44.0	44.0	44.0
18	0.0	9.4	13.0	18.6	27.4	33.0	36.8	39.4	41.4	43.0	43.0	43.0	43.0	43.0	43.0	43.0
20	0.0	6.2	10.0	17.4	25.4	30.2	34.0	36.8	38.8	41.0	41.0	41.0	41.0	41.0	41.0	41.0
22	0.0	5.0	7.0	16.4	23.6	27.8	31.6	33.8	35.8	37.0	37.0	37.0	37.0	37.0	37.0	37.0
24	0.0	4.0	4.0	14.8	22.0	25.6	28.6	31.2	33.2	34.0	34.0	34.0	34.0	34.0	34.0	34.0
26	0.0	4.0	4.0	13.8	20.2	24.0	27.2	29.6	31.4	33.0	33.0	33.0	33.0	33.0	33.0	33.0
28	0.0	4.0	4.0	12.6	18.0	22.4	25.8	28.6	31.0	33.0	33.0	33.0	33.0	33.0	33.0	33.0
30	0.0	4.0	4.0	11.4	16.8	21.0	24.8	27.8	30.6	33.0	33.0	33.0	33.0	33.0	33.0	33.0

## MAP\_Modified\_35\_Revised

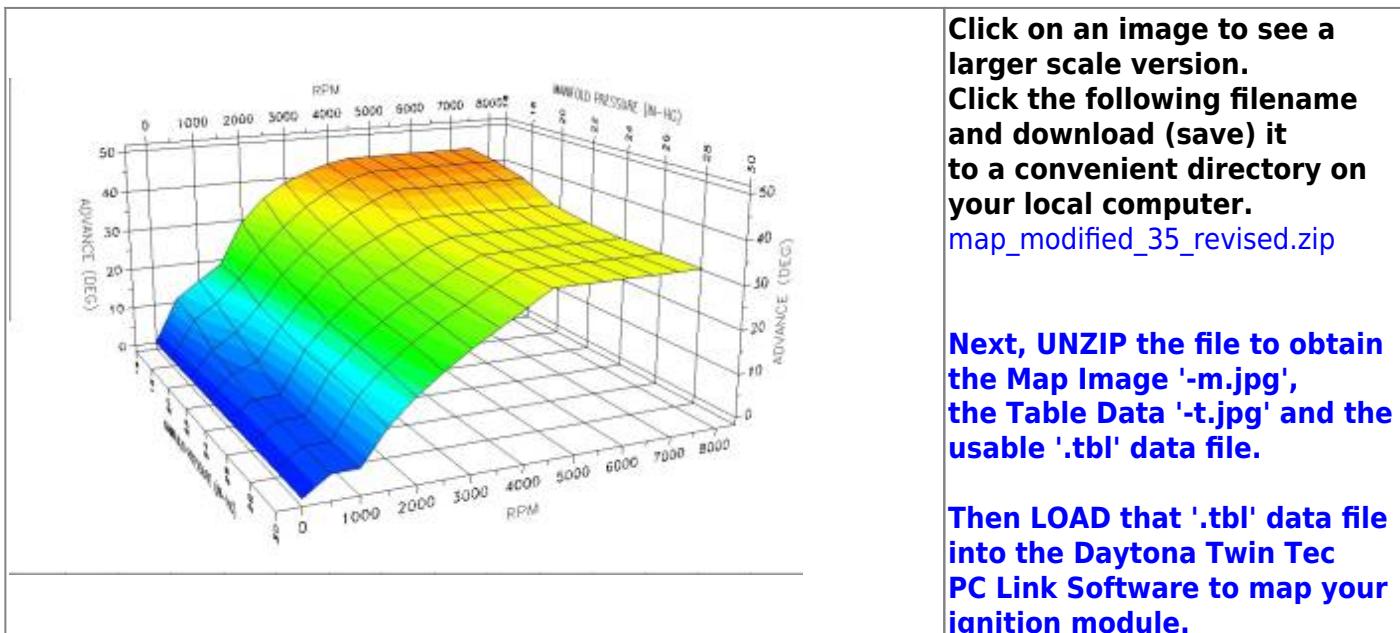


MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	11.0	15.0	19.0	29.4	35.2	39.0	41.2	43.0	44.0	44.0	44.0	44.0	44.0	44.0	44.0
18	0.0	9.4	13.0	18.6	25.4	30.6	35.4	38.8	41.4	43.0	43.0	43.0	43.0	43.0	43.0	43.0
20	0.0	6.2	10.0	15.8	22.8	28.0	32.8	36.2	38.8	41.0	41.0	41.0	41.0	41.0	41.0	41.0
22	0.0	5.0	7.0	14.6	21.2	26.4	30.4	33.2	35.8	37.0	37.0	37.0	37.0	37.0	37.0	37.0
24	0.0	4.0	4.0	13.4	19.2	24.0	28.0	30.6	33.8	35.6	35.6	35.6	35.6	35.6	35.6	35.6
26	0.0	4.0	4.0	13.0	18.6	22.8	26.4	29.4	32.6	35.0	35.0	35.0	35.0	35.0	35.0	35.0
28	0.0	4.0	4.0	12.6	18.0	22.4	25.8	28.0	32.2	35.0	35.0	35.0	35.0	35.0	35.0	35.0
30	0.0	4.0	4.0	11.4	16.8	21.0	24.8	28.2	31.6	35.0	35.0	35.0	35.0	35.0	35.0	35.0

## Necromancer\_883\_convert

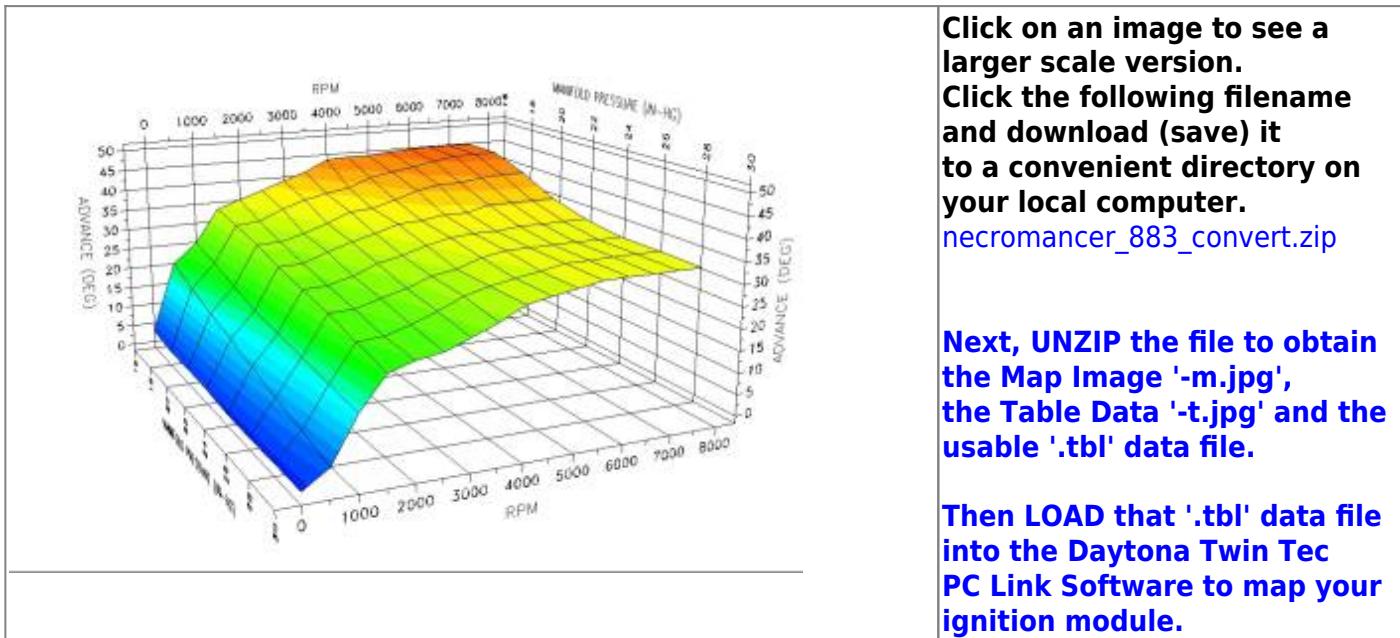


MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	3.0	20.1	25.0	33.1	35.0	37.0	39.1	41.0	43.6	44.0	44.0	44.5	44.9	44.9	44.9	44.9
18	1.9	17.1	23.1	32.0	32.6	35.0	37.0	38.0	39.1	41.0	42.1	42.9	44.0	44.9	44.9	44.9
20	1.9	15.0	20.9	30.4	30.6	32.0	34.0	36.3	36.6	38.2	40.0	41.0	41.0	41.7	42.1	42.1
22	1.9	13.0	19.0	28.7	28.9	31.0	32.7	34.1	35.7	36.1	37.0	37.0	38.2	38.2	38.2	38.2
24	1.1	11.1	18.0	27.1	27.5	28.9	31.2	32.2	34.0	35.2	35.6	35.6	36.1	36.1	36.1	36.1
26	1.1	9.0	17.1	25.9	26.0	27.6	29.2	31.2	32.0	34.0	35.0	35.0	35.0	35.0	35.0	35.0
28	1.1	7.0	16.0	23.9	24.5	26.0	28.2	30.6	32.0	33.1	34.0	35.0	35.0	35.0	35.0	35.0
30	1.1	4.9	15.0	22.2	23.9	24.8	26.9	29.2	32.0	33.1	34.0	35.0	35.0	35.0	35.0	35.0

## R-D\_Map\_0

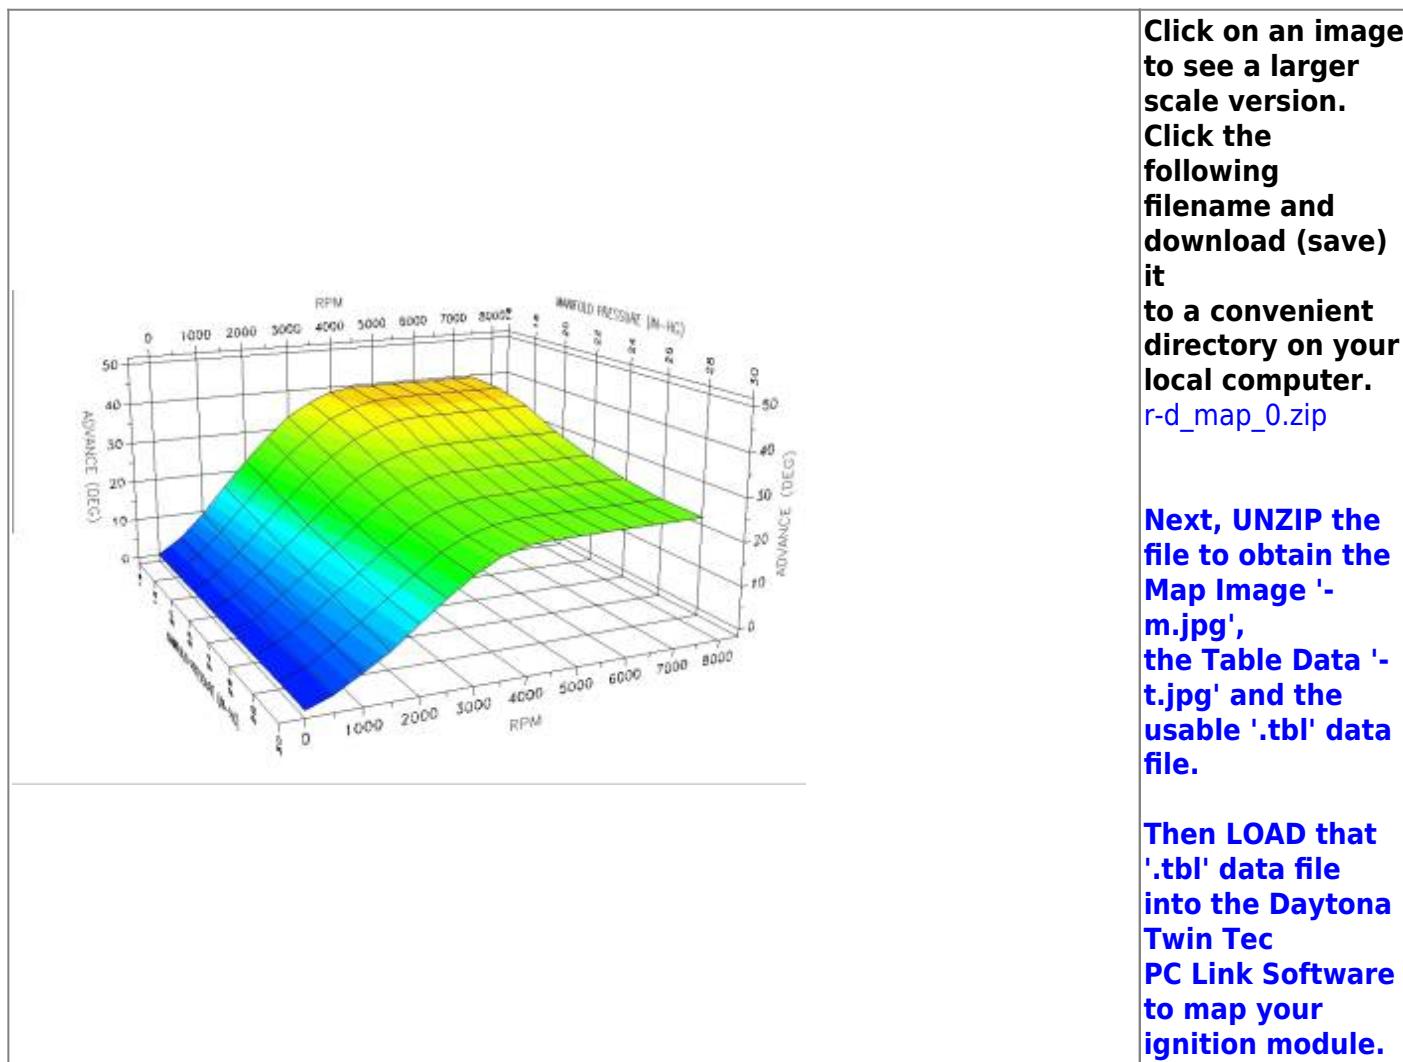

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	3.9	9.5	16.1	22.3	28.1	33.0	36.4	38.7	39.5	39.5	39.5	39.5	39.5	39.5	39.5
18	0.0	3.5	8.7	14.8	20.7	26.4	31.0	34.8	37.4	38.7	38.8	39.1	39.1	39.1	39.1	39.1
20	0.0	3.1	8.0	13.6	19.1	24.4	29.0	32.6	35.2	36.6	37.0	37.0	37.0	37.0	37.0	37.0
22	0.0	2.9	7.4	12.4	17.4	22.4	26.8	30.0	32.0	33.0	33.2	33.2	33.2	33.2	33.2	33.2
24	0.0	2.6	6.9	11.3	16.0	20.6	24.9	27.8	29.6	30.4	30.4	30.5	30.5	30.5	30.5	30.5
26	0.0	2.3	6.2	10.5	14.8	19.2	23.2	26.0	27.5	28.2	28.2	28.4	28.4	28.4	28.4	28.4
28	0.0	2.1	5.8	9.7	14.1	18.3	22.1	25.0	26.5	27.1	27.3	27.3	27.3	27.3	27.3	27.3
30	0.0	2.1	5.4	8.9	13.5	17.9	21.3	24.9	26.4	26.9	26.8	27.0	27.0	27.0	27.0	27.0

## R-D\_Map\_1

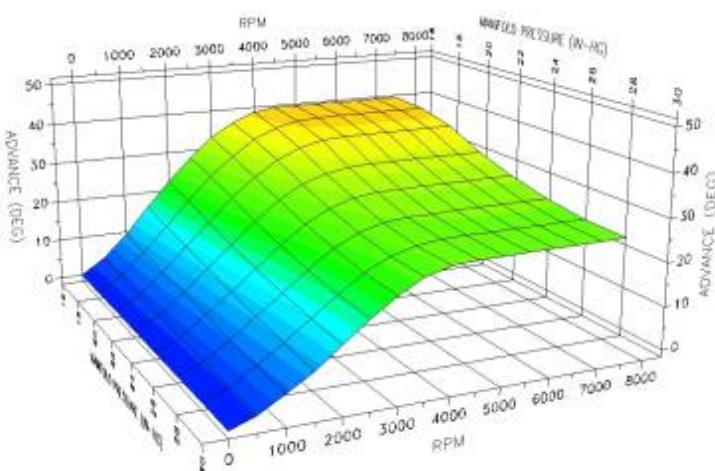


**Click on an image to see a larger scale version.  
Click the following filename and download (save) it  
to a convenient directory on your local computer.  
[r-d\\_map\\_1.zip](#)**

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	3.9	9.5	16.1	22.3	28.1	33.0	36.4	39.7	39.5	39.5	39.5	39.5	39.5	39.5	39.5
18	0.0	3.5	8.7	14.8	20.7	26.4	31.0	34.8	37.4	38.7	38.9	39.1	39.1	39.1	39.1	39.1
20	0.0	3.1	8.0	13.6	19.1	24.4	29.0	32.6	35.2	36.6	37.0	37.0	37.0	37.0	37.0	37.0
22	0.0	2.9	7.4	12.4	17.4	22.4	26.8	30.0	32.0	33.0	33.2	33.2	33.2	33.2	33.2	33.2
24	0.0	2.5	6.8	11.3	16.0	20.6	24.8	27.8	29.6	30.4	30.4	30.5	30.5	30.5	30.5	30.5
26	0.0	2.3	6.2	10.5	14.8	19.2	23.2	26.0	27.5	28.2	28.2	28.4	28.4	28.4	28.4	28.4
28	0.0	2.1	5.8	9.7	14.1	18.3	22.1	25.0	26.5	27.1	27.3	27.3	27.3	27.3	27.3	27.3
30	0.0	2.1	5.4	8.9	13.5	17.9	21.9	24.9	26.4	26.9	26.8	27.0	27.0	27.0	27.0	27.0

## R-D\_Map\_2

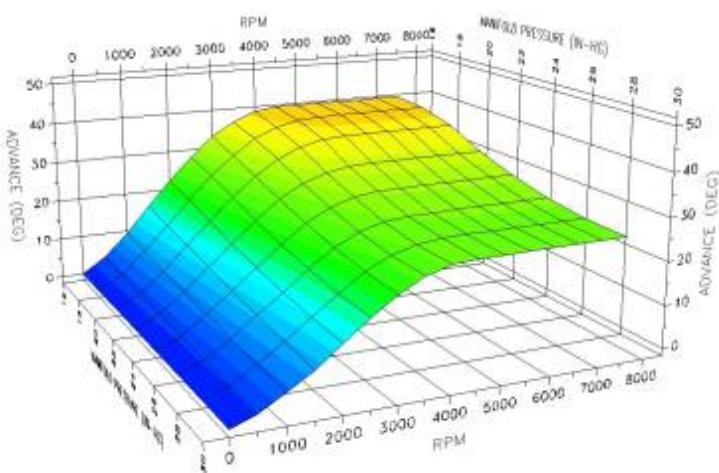


**Click on an image to see a larger scale version.  
Click the following filename and download (save) it to a convenient directory on your local computer.**  
[r-d\\_map\\_2.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	3.9	5.5	16.1	22.3	28.1	33.0	36.4	38.7	39.5	39.5	39.5	39.5	39.5	39.5	39.5
18	0.0	3.5	8.7	14.8	20.7	26.4	31.0	34.8	37.4	38.7	38.9	39.1	39.1	39.1	39.1	39.1
20	0.0	3.1	8.0	13.6	19.1	24.4	29.0	32.6	35.2	36.6	37.0	37.0	37.0	37.0	37.0	37.0
22	0.0	2.9	7.4	12.4	17.4	22.4	26.9	30.0	32.0	33.0	33.2	33.2	33.2	33.2	33.2	33.2
24	0.0	2.5	6.8	11.3	16.0	20.6	24.8	27.8	29.6	30.4	30.4	30.5	30.5	30.5	30.5	30.5
26	0.0	2.3	6.2	10.5	14.8	19.2	23.2	26.0	27.5	28.2	28.2	28.4	28.4	28.4	28.4	28.4
28	0.0	2.1	5.8	9.7	14.1	18.3	22.1	25.0	26.5	27.1	27.3	27.3	27.3	27.3	27.3	27.3
30	0.0	2.1	5.4	8.9	13.5	17.9	21.9	24.9	26.4	26.9	26.8	27.0	27.0	27.0	27.0	27.0

## Rico-s\_1212\_1-1\_1200\_Gearing

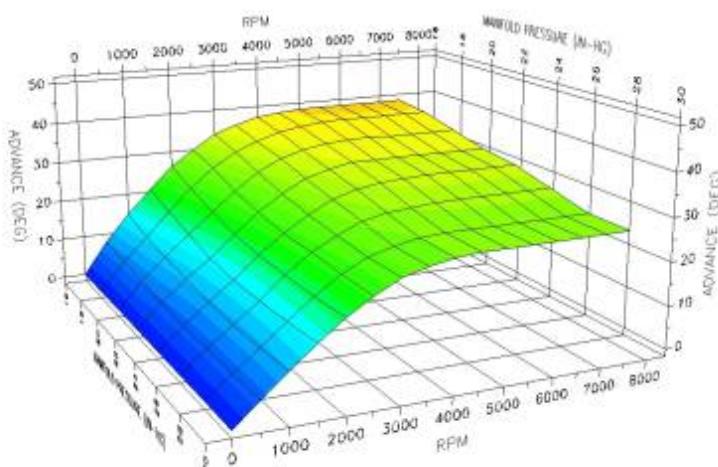


**Click on an image to see a larger scale version.**  
**Click the following filename and download (save) it to a convenient directory on your local computer.**  
[rico-s\\_1212\\_1-1\\_1200\\_gearing.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	8.2	14.6	20.6	26.2	30.0	33.6	35.6	37.1	37.8	38.4	38.4	38.4	38.4	38.4	38.4
18	0.0	6.8	12.6	18.4	23.8	28.4	32.0	34.2	36.1	36.9	37.5	37.8	37.8	37.8	37.8	37.8
20	0.0	6.4	11.5	16.6	21.4	25.8	30.0	32.8	34.5	35.5	35.9	36.1	35.7	35.7	35.7	35.7
22	0.0	5.6	10.4	14.6	19.8	24.4	28.2	31.2	32.8	34.0	34.0	34.0	34.0	34.0	34.0	34.0
24	0.0	5.0	9.6	14.0	19.0	23.2	26.8	29.8	31.4	32.4	32.8	33.0	33.0	33.0	33.0	33.0
26	0.0	5.0	9.4	13.8	18.8	23.0	26.0	28.4	29.6	30.2	30.6	30.8	30.8	30.8	30.8	30.8
28	0.0	5.0	9.4	14.2	19.6	22.6	25.4	27.0	28.0	28.4	28.4	28.4	28.4	28.4	28.4	28.4
30	0.0	5.0	9.8	14.6	19.0	22.5	25.4	27.0	28.0	28.4	28.4	28.4	28.4	28.4	28.4	28.4

## Rico-s\_1212\_1-1\_883\_gearing

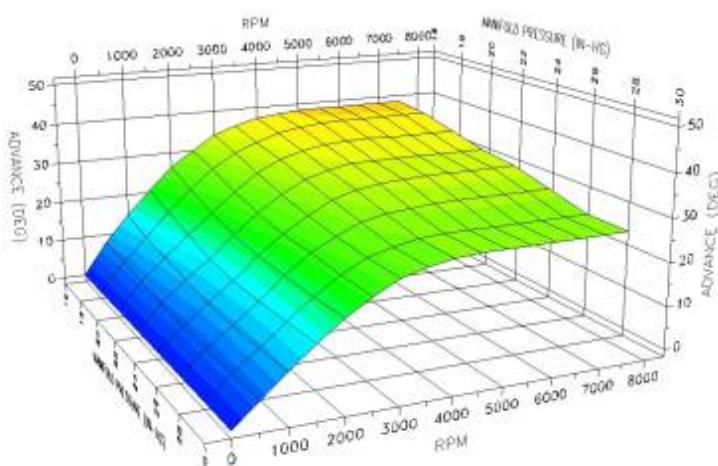


**Click on an image to see a larger scale version.**  
**Click the following filename and download (save) it to a convenient directory on your local computer.**  
[rico-s\\_1212\\_1-1\\_883\\_gearing.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**


MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	8.2	14.6	20.6	26.2	30.0	33.6	35.6	37.1	37.8	38.4	38.4	38.4	38.4	38.4	38.4
18	0.0	6.8	12.6	18.4	23.8	28.4	32.0	34.2	36.1	36.9	37.5	37.8	37.8	37.8	37.8	37.8
20	0.0	6.4	11.5	16.6	21.4	25.8	30.0	32.8	34.5	35.5	35.9	36.1	35.7	35.7	35.7	35.7
22	0.0	5.6	10.4	14.6	19.8	24.4	28.2	31.2	32.8	34.0	34.0	34.0	34.0	34.0	34.0	34.0
24	0.0	5.0	9.6	14.0	19.0	23.2	26.8	29.8	31.4	32.4	32.8	33.0	33.0	33.0	33.0	33.0
26	0.0	5.0	9.4	13.8	18.8	23.0	26.0	28.4	29.6	30.2	30.6	30.8	30.8	30.8	30.8	30.8
28	0.0	5.0	9.4	14.2	18.6	22.6	25.4	27.0	28.0	28.4	28.4	28.4	28.4	28.4	28.4	28.4
30	0.0	5.0	9.9	14.6	19.0	22.5	25.4	27.0	28.0	28.4	28.4	28.4	28.4	28.4	28.4	28.4

## Rico-s\_1250\_Base\_Map\_1200\_Gearing

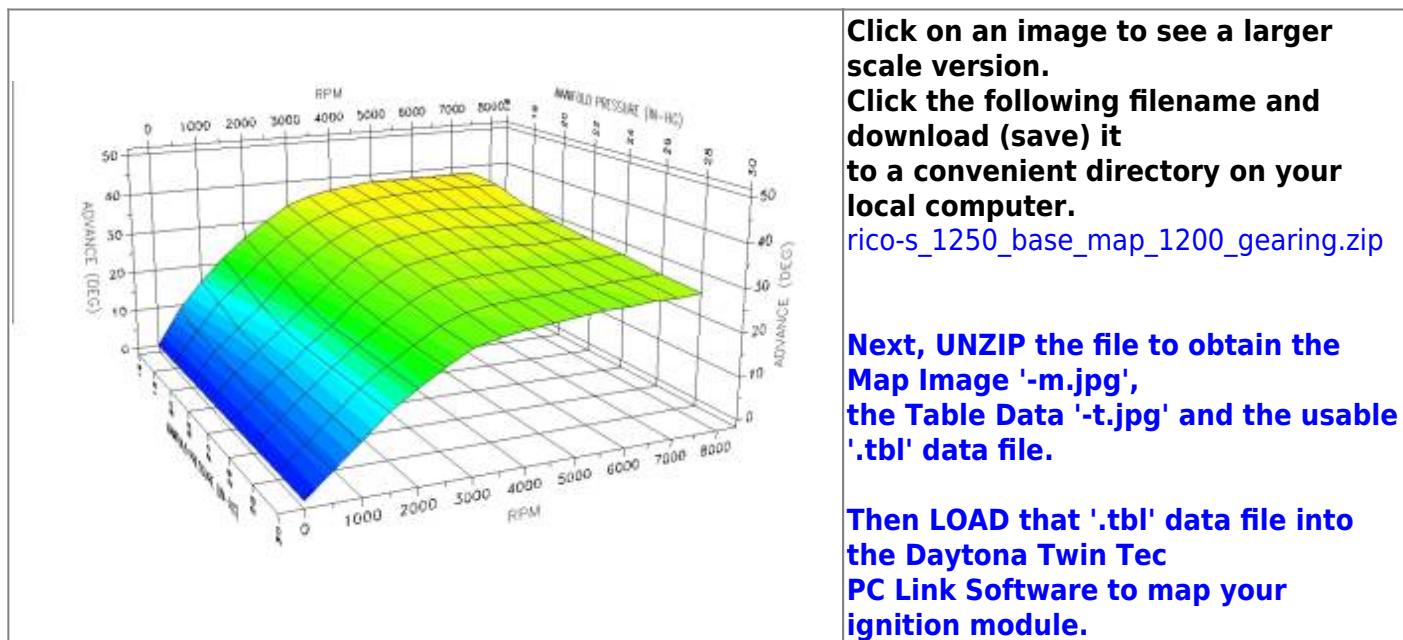

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	9.0	15.6	21.4	26.2	30.0	33.6	35.6	36.8	37.5	38.1	38.1	38.1	38.1	38.1	38.1
18	0.0	7.2	14.0	19.0	24.2	28.6	32.2	34.2	35.8	36.6	37.2	37.5	37.5	37.5	37.5	37.5
20	0.0	6.4	11.5	16.6	22.2	27.0	30.4	33.4	34.8	35.2	35.6	35.8	35.4	35.4	35.0	35.0
22	0.0	5.6	10.4	15.0	20.0	25.0	29.4	32.2	33.4	34.2	34.6	34.4	34.0	34.0	33.8	33.6
24	0.0	5.0	9.6	14.6	19.0	24.0	28.0	30.8	32.0	32.6	33.0	32.8	32.6	32.4	32.8	32.6
26	0.0	5.0	9.9	14.6	19.0	23.0	27.0	29.6	30.8	31.0	31.2	31.4	31.2	31.4	31.6	32.0
28	0.0	5.0	9.9	15.0	19.0	22.5	25.8	28.0	29.0	29.4	29.6	30.0	30.0	30.4	30.6	30.8
30	0.0	5.0	9.9	15.0	19.0	22.5	25.6	27.0	27.8	28.4	29.0	29.5	29.6	30.0	30.0	30.4

## Rico-s\_1250\_Base\_Map\_883\_Gearing

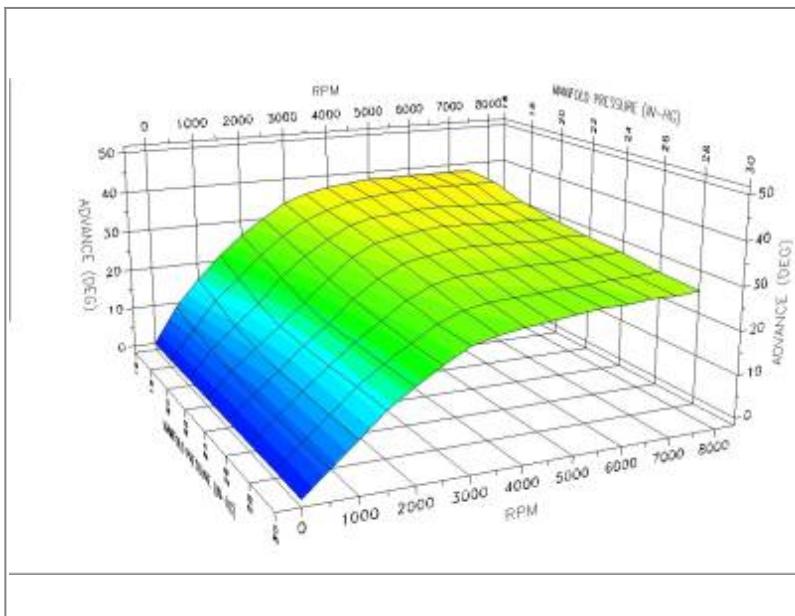

**Click on an image to see a larger scale version.**

**Click the following filename and download (save) it to a convenient directory on your local computer.**


[rico-s\\_1250\\_base\\_map\\_883\\_gearing.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	9.0	15.6	21.4	26.2	30.0	33.6	35.6	36.8	37.5	38.1	38.1	38.1	38.1	38.1	38.1
18	0.0	7.2	14.0	19.0	24.2	28.6	32.2	34.2	35.8	36.6	37.2	37.5	37.5	37.5	37.5	37.5
20	0.0	6.4	11.5	16.6	22.2	27.0	30.4	33.4	34.8	35.2	35.6	35.8	35.4	35.4	35.0	35.0
22	0.0	5.6	10.4	15.0	20.0	25.0	29.4	32.2	33.4	34.2	34.6	34.4	34.0	34.0	33.8	33.6
24	0.0	5.0	9.6	14.6	19.0	24.0	28.0	30.8	32.0	32.6	33.0	32.8	32.6	32.4	32.8	32.6
26	0.0	5.0	9.9	14.6	19.0	23.0	27.0	29.6	30.8	31.0	31.2	31.4	31.2	31.4	31.6	32.0
28	0.0	5.0	9.9	15.0	19.0	22.5	25.8	28.0	29.0	29.4	29.6	30.0	30.0	30.4	30.6	30.8
30	0.0	5.0	9.9	15.0	19.0	22.5	25.6	27.0	27.8	28.4	29.0	29.5	29.6	30.0	30.0	30.4

## Rico-s\_1250\_Map\_4-1\_1200\_Gearing

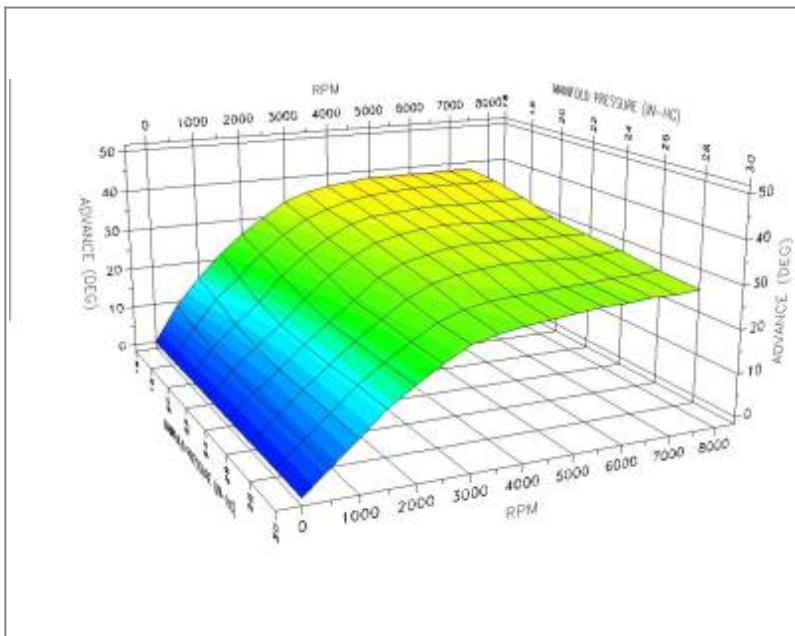

**Click on an image to see a larger scale version.**

**Click the following filename and download (save) it to a convenient directory on your local computer.**


[rico-s\\_1250\\_map\\_4-1\\_1200\\_gearing.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	9.0	15.6	21.4	26.2	30.0	33.6	35.6	36.8	37.5	38.1	38.1	38.1	38.1	38.1	38.1
18	0.0	7.2	14.0	19.0	24.2	28.6	32.2	34.2	35.8	36.6	37.2	37.5	37.5	37.5	37.5	37.5
20	0.0	6.4	11.5	16.6	22.2	27.0	30.4	33.4	34.8	35.2	35.6	35.8	35.4	35.6	35.6	35.8
22	0.0	5.6	10.4	15.0	20.4	25.2	29.2	32.0	33.4	34.2	34.6	34.4	34.0	34.0	33.8	33.6
24	0.0	5.0	9.6	14.6	19.0	23.4	28.0	30.6	32.0	33.0	33.4	33.2	33.2	32.8	32.6	32.6
26	0.0	5.0	9.9	14.6	19.0	23.0	27.0	29.6	31.0	31.6	32.0	32.0	31.8	31.4	31.6	32.0
28	0.0	5.0	9.9	15.0	19.0	22.5	25.8	27.8	29.0	29.4	29.6	30.0	30.0	30.4	30.6	30.8
30	0.0	5.0	9.9	15.0	19.0	22.5	25.6	27.0	27.8	28.4	29.0	29.5	29.6	30.0	30.0	30.4

## Rico-s\_1250\_Map\_4-1\_883\_Gearing

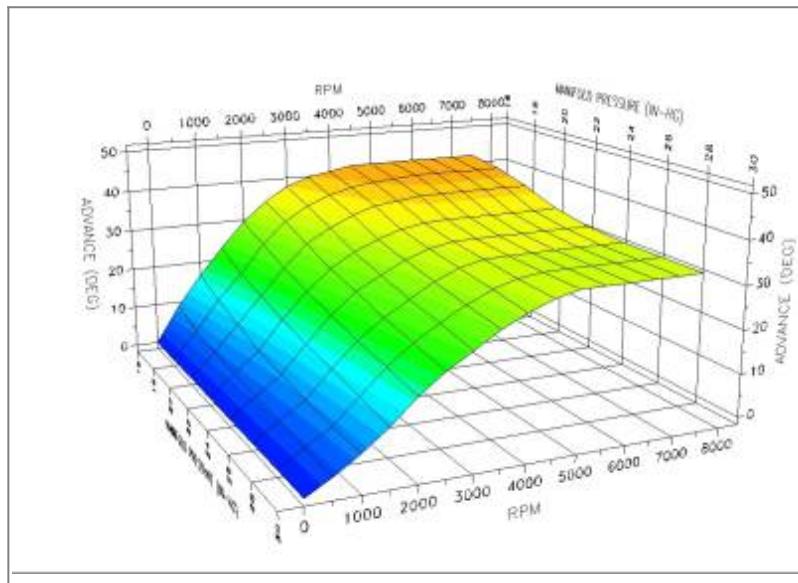

Click on an image to see a larger scale version.

Click the following filename and download (save) it to a convenient directory on your local computer.


[rico-s\\_1250\\_map\\_4-1\\_883\\_gearing.zip](#)

Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.

Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	9.0	16.6	23.2	29.4	34.4	37.8	39.8	40.8	41.8	42.0	42.0	42.0	42.0	42.0	42.0
18	0.0	6.4	13.8	20.0	26.8	32.2	35.6	37.8	39.4	40.2	40.6	41.0	41.2	41.0	41.0	41.0
20	0.0	5.6	11.8	18.2	24.4	29.8	33.0	35.8	37.4	38.2	39.0	39.0	39.0	39.0	39.0	39.0
22	0.0	5.0	9.6	16.4	22.4	27.2	30.4	33.0	34.8	35.8	36.0	36.0	36.0	36.0	36.0	36.0
24	0.0	4.4	8.6	14.8	20.8	25.6	28.6	31.4	33.4	34.6	34.6	34.6	34.6	34.6	34.6	34.6
26	0.0	4.0	7.8	13.8	19.2	23.6	27.0	30.2	32.6	33.8	34.0	34.0	34.0	34.0	34.0	34.0
28	0.0	3.6	7.2	12.6	18.0	22.4	25.8	29.0	31.6	33.2	34.0	34.0	34.0	34.0	34.0	34.0
30	0.0	3.2	7.0	11.4	16.8	21.0	24.4	28.0	30.6	32.8	34.0	34.0	34.0	34.0	34.0	34.0

## Rico-s\_1250\_Map\_Smackie\_Version

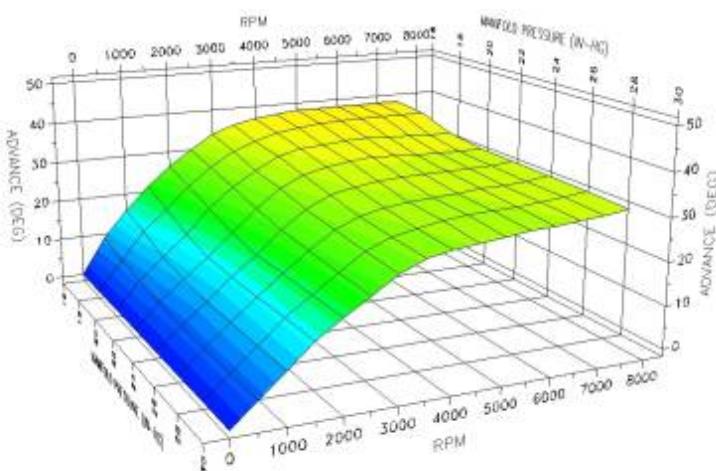

**Click on an image to see a larger scale version.**

**Click the following filename and download (save) it to a convenient directory on your local computer.**


[rico-s\\_1250\\_map\\_smackie\\_version.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	9.0	15.6	21.4	26.2	30.0	33.6	35.6	36.8	37.5	38.1	38.1	38.1	38.1	38.1	38.1
18	0.0	7.2	14.0	19.0	24.2	28.6	32.2	34.2	35.8	36.6	37.2	37.5	37.5	37.5	37.5	37.5
20	0.0	6.4	11.5	16.6	22.2	27.0	30.4	33.4	34.8	35.2	35.6	35.8	35.4	35.4	35.0	35.0
22	0.0	5.6	10.4	15.0	20.2	25.2	29.4	32.0	33.4	34.2	34.6	34.4	34.0	34.0	33.8	34.0
24	0.0	5.0	9.6	14.6	19.0	24.0	28.2	30.8	32.0	32.6	33.0	33.2	33.2	33.4	33.8	
26	0.0	5.0	9.9	14.6	19.0	23.4	27.2	29.6	30.8	31.4	31.8	32.0	32.6	33.0	33.6	
28	0.0	5.0	9.9	15.0	19.0	22.8	26.6	29.0	30.0	31.0	31.6	31.8	32.0	32.4	32.8	33.4
30	0.0	5.0	9.9	15.0	19.0	22.5	26.2	28.6	29.6	30.2	30.8	31.4	31.6	32.0	32.4	33.2

## Rico-s\_1250\_Map\_Version4-0\_883\_Gearing

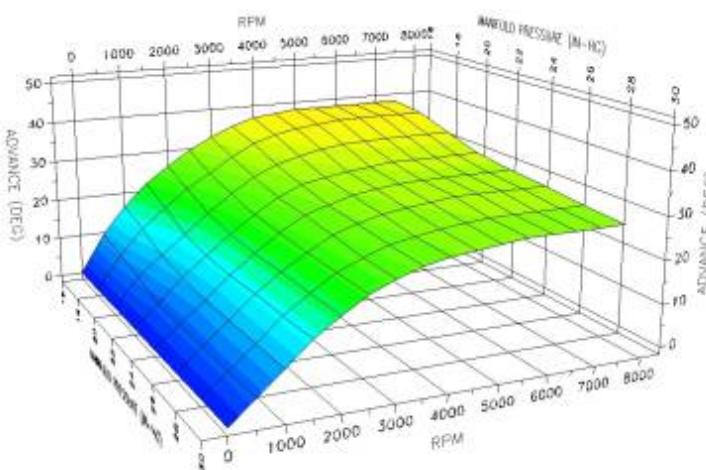

**Click on an image to see a larger scale version.**

**Click the following filename and download (save) it to a convenient directory on your local computer.**


[rico-s\\_1250\\_map\\_version4-0\\_883\\_gearing.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**


MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	9.4	16.4	22.0	26.0	29.6	32.6	35.0	36.8	37.5	38.1	38.1	38.1	38.1	38.1	38.1
18	0.0	8.2	14.4	19.0	23.4	26.6	30.4	33.4	35.0	36.3	36.8	37.5	37.5	37.5	37.5	37.5
20	0.0	7.0	11.5	16.2	20.8	25.0	28.6	31.0	32.6	33.9	34.6	34.8	35.0	35.0	35.0	35.0
22	0.0	5.0	10.4	15.0	19.4	23.5	27.0	29.4	30.6	31.4	32.0	32.6	32.6	32.6	32.6	32.6
24	0.0	5.0	9.6	14.6	19.0	23.0	26.4	28.2	29.8	30.6	31.2	31.5	31.5	31.5	31.5	31.5
26	0.0	5.0	9.3	15.0	19.0	22.5	25.8	27.6	29.0	29.8	30.4	31.0	31.0	31.0	31.0	31.0
28	0.0	5.0	9.9	15.0	19.0	22.5	25.0	27.0	28.0	28.8	29.5	30.0	30.0	30.0	30.0	30.0
30	0.0	5.0	9.3	15.0	19.0	22.5	24.8	26.6	27.8	28.4	29.0	29.5	29.5	29.5	29.5	29.5

## Rico-s\_221\_Map

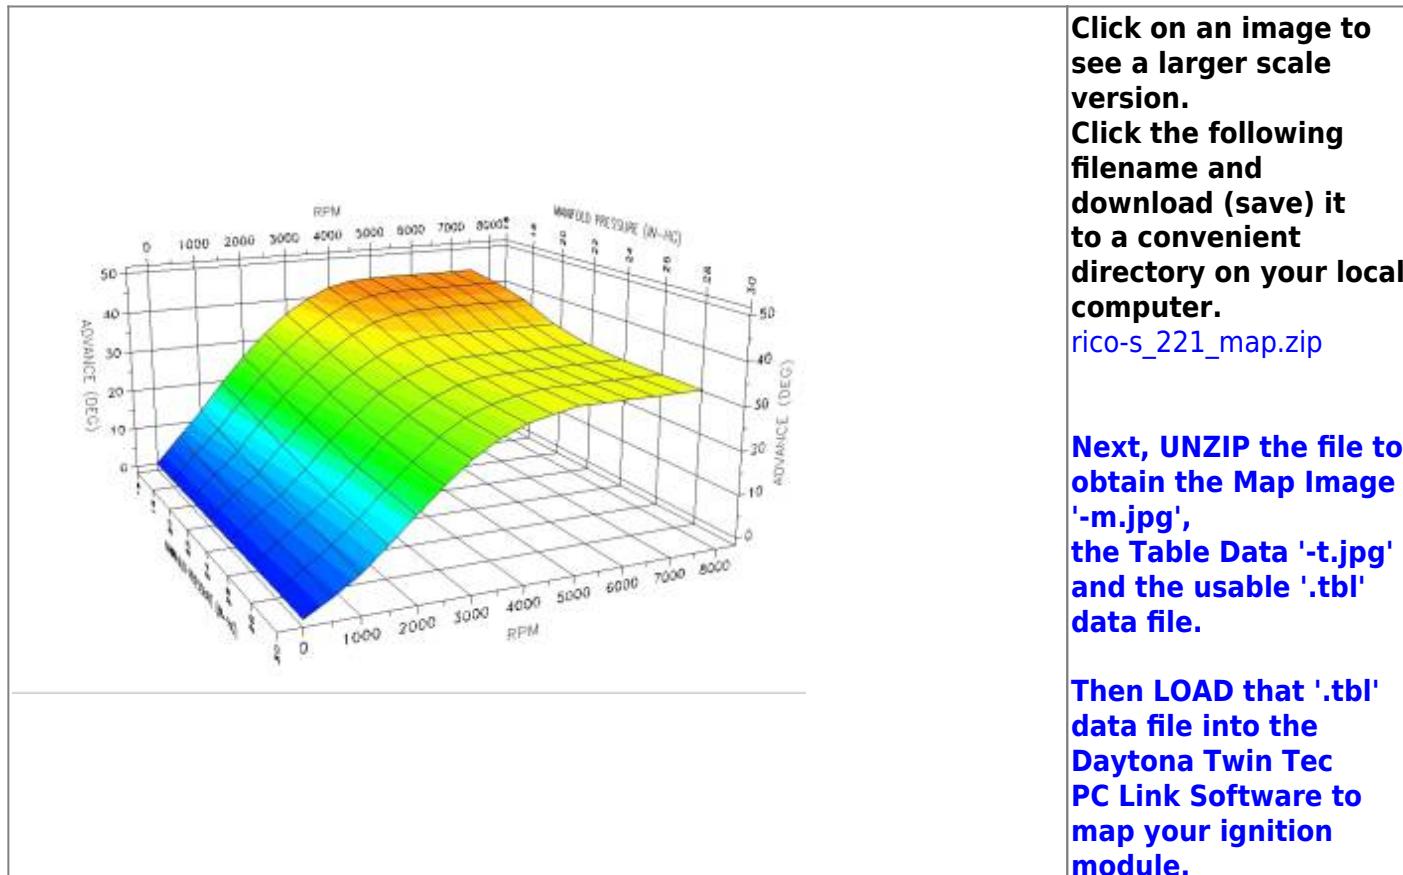


MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	6.6	12.6	19.6	26.0	31.4	36.2	39.8	42.4	43.6	44.0	44.0	44.0	44.0	44.0	44.0
18	0.0	6.0	11.8	18.4	24.4	29.8	34.6	38.2	41.0	42.4	43.0	43.0	43.0	43.0	43.0	43.0
20	0.0	5.2	10.4	16.8	22.6	28.0	32.4	36.2	38.8	40.2	41.0	41.0	41.0	41.0	41.0	41.0
22	0.0	4.8	9.4	15.4	21.0	26.4	30.6	34.0	36.4	37.4	37.6	37.6	37.6	37.6	37.6	37.6
24	0.0	4.4	8.6	14.0	19.8	24.8	29.4	32.4	34.4	35.6	35.6	35.6	35.6	35.6	35.6	35.6
26	0.0	4.0	8.2	12.8	18.2	23.8	28.2	31.4	33.6	34.6	35.0	35.0	35.0	35.0	35.0	35.0
28	0.0	3.6	7.6	12.4	17.8	22.8	27.4	30.8	33.0	34.2	35.0	35.0	35.0	35.0	35.0	35.0
30	0.0	3.2	7.0	12.0	17.4	22.4	27.0	30.4	32.8	34.0	35.0	35.0	35.0	35.0	35.0	35.0

## Rico-s\_88inch\_Map\_1-0

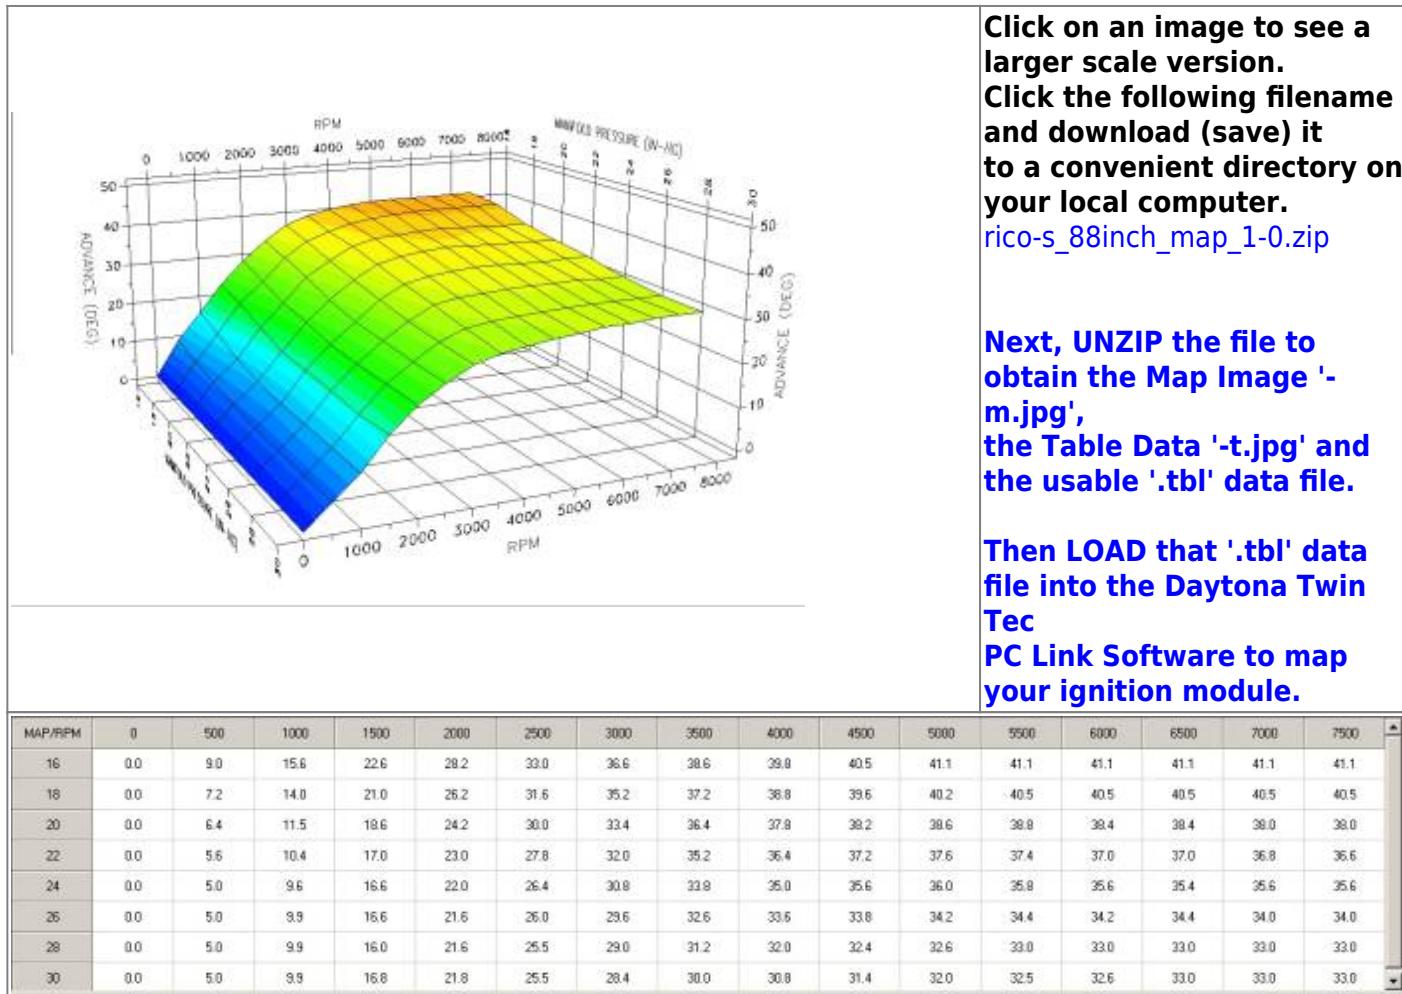


## Rico-s\_88inch\_Map\_1-1

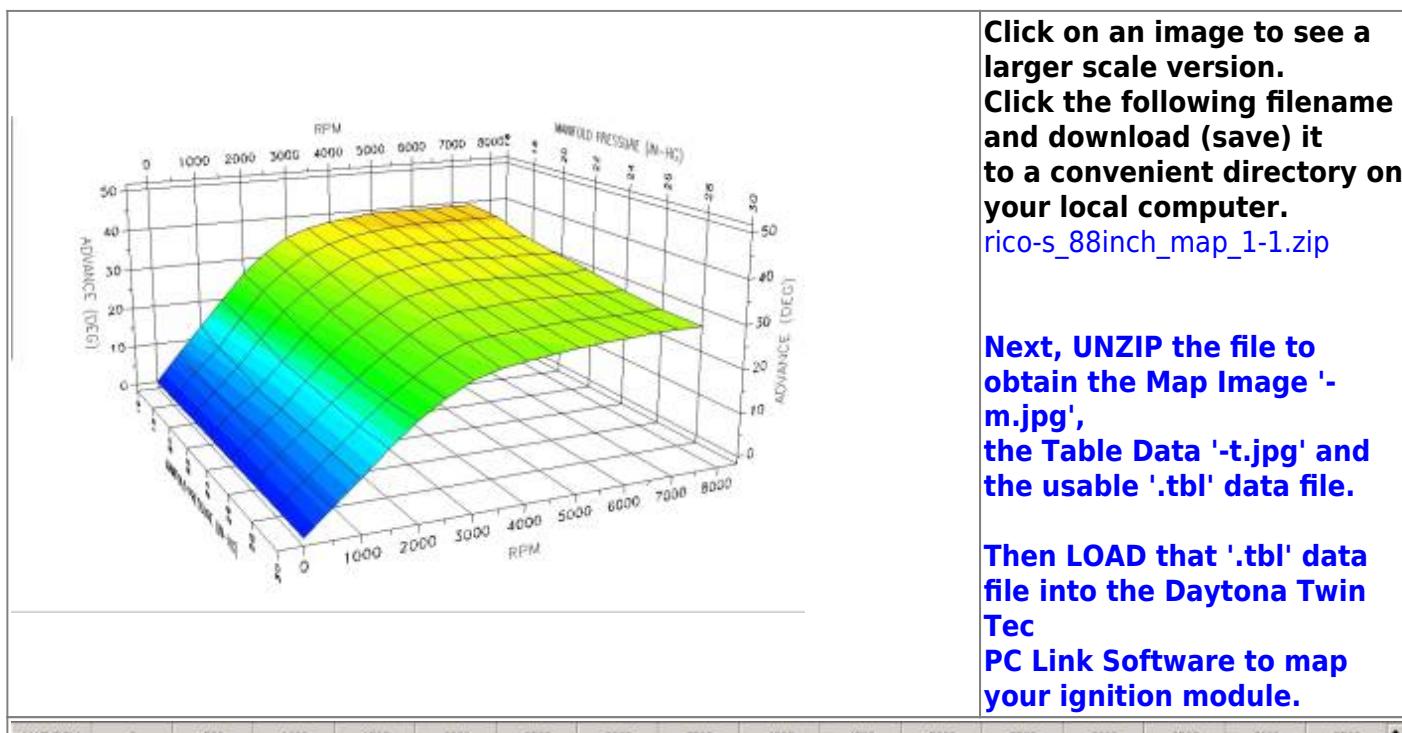

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	6.8	13.4	19.8	26.2	31.0	34.6	36.8	37.8	38.5	39.1	39.1	39.1	39.1	39.1	39.1
18	0.0	6.0	11.6	18.6	24.8	29.6	33.2	35.2	36.8	37.6	38.2	38.5	38.5	38.5	38.5	38.5
20	0.0	5.6	10.8	17.4	23.4	28.0	31.4	34.4	35.8	36.2	36.6	36.8	36.4	36.4	36.0	36.0
22	0.0	5.6	10.0	15.8	21.6	26.4	30.0	33.2	34.4	35.2	35.6	35.4	35.0	35.0	34.8	34.6
24	0.0	5.0	9.6	15.4	20.6	25.2	28.8	31.8	33.0	33.6	34.0	33.8	33.6	33.4	33.2	33.6
26	0.0	5.0	9.9	15.0	19.6	24.0	27.8	30.6	31.6	31.8	32.2	32.4	32.2	32.2	32.0	32.0
28	0.0	5.0	9.9	14.8	19.6	23.5	27.0	29.2	30.0	30.4	30.8	31.0	31.0	31.0	31.0	31.0
30	0.0	5.0	9.9	15.0	19.8	23.5	26.4	28.0	28.8	29.4	30.0	30.5	30.6	31.0	31.0	31.0

## Rico-s\_Hybrid\_2-1

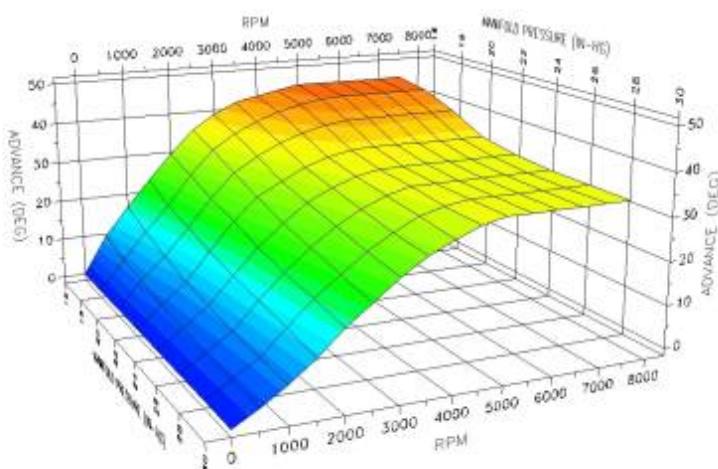


**Click on an image to see a larger scale version.  
Click the following filename and download (save) it to a convenient directory on your local computer.**  
[rico-s\\_hybrid\\_2-1.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	9.6	16.6	23.2	29.4	35.2	39.0	41.6	43.0	44.0	45.0	45.0	45.0	45.0	45.0	45.0
18	0.0	7.2	13.8	20.0	27.2	33.0	36.8	39.4	41.4	42.8	43.8	44.0	44.0	44.0	44.0	44.0
20	0.0	6.5	11.8	18.2	24.8	30.4	34.0	36.8	38.8	40.2	41.0	41.0	41.0	41.0	41.0	41.0
22	0.0	5.0	9.6	16.4	22.8	28.0	31.2	34.0	35.8	37.0	37.2	37.2	37.0	37.0	37.0	37.0
24	0.0	4.4	8.6	14.8	20.6	25.6	29.6	32.4	34.4	35.6	35.6	35.6	35.6	35.6	35.6	35.6
26	0.0	4.0	7.8	13.8	19.2	24.0	28.0	31.2	33.6	35.0	35.0	35.0	35.0	35.0	35.0	35.0
28	0.0	3.6	7.2	12.6	18.0	22.4	26.4	29.8	32.6	34.2	35.0	35.0	35.0	35.0	35.0	35.0
30	0.0	3.2	7.0	11.4	16.8	21.0	25.4	29.0	31.6	33.8	35.0	35.0	35.0	35.0	35.0	35.0

## Rico-s\_Hybrid\_2-2

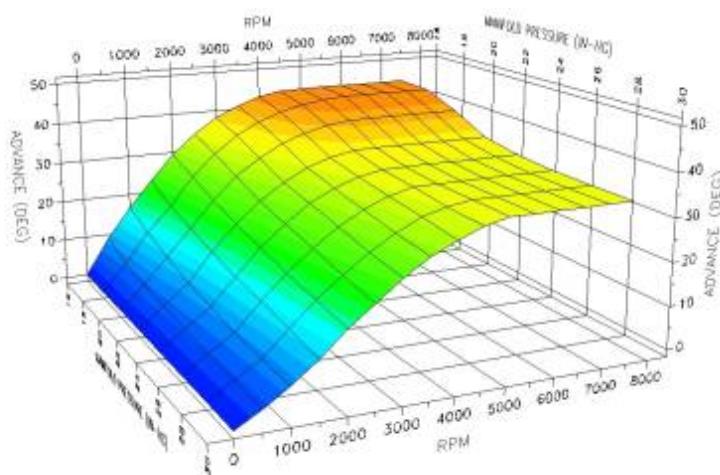


**Click on an image to see a larger scale version.**  
**Click the following filename and download (save) it to a convenient directory on your local computer.**  
[rico-s\\_hybrid\\_2-2.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**


MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	9.0	16.6	23.2	29.4	34.4	38.2	40.8	42.8	43.8	44.0	44.0	44.0	44.0	44.0	44.0
18	0.0	6.4	13.8	20.0	26.8	32.2	36.4	39.4	41.4	42.8	43.6	44.0	44.0	44.0	44.0	44.0
20	0.0	5.6	11.8	18.2	24.4	29.8	33.6	36.8	38.8	40.2	41.0	41.0	41.0	41.0	41.0	41.0
22	0.0	5.0	9.6	16.4	22.4	27.2	31.0	34.0	35.8	37.0	37.0	37.0	37.0	37.0	37.0	37.0
24	0.0	4.4	8.6	14.8	20.8	25.6	29.6	32.4	34.4	35.6	35.6	35.6	35.6	35.6	35.6	35.6
26	0.0	4.0	7.8	13.8	19.2	24.0	28.0	31.2	33.6	35.0	35.0	35.0	35.0	35.0	35.0	35.0
28	0.0	3.6	7.2	12.6	18.0	22.4	26.4	29.8	32.6	34.2	35.0	35.0	35.0	35.0	35.0	35.0
30	0.0	3.2	7.0	11.4	16.8	21.0	25.4	29.0	31.6	33.8	35.0	35.0	35.0	35.0	35.0	35.0

## Rico-s\_Hybrid\_2-2\_883

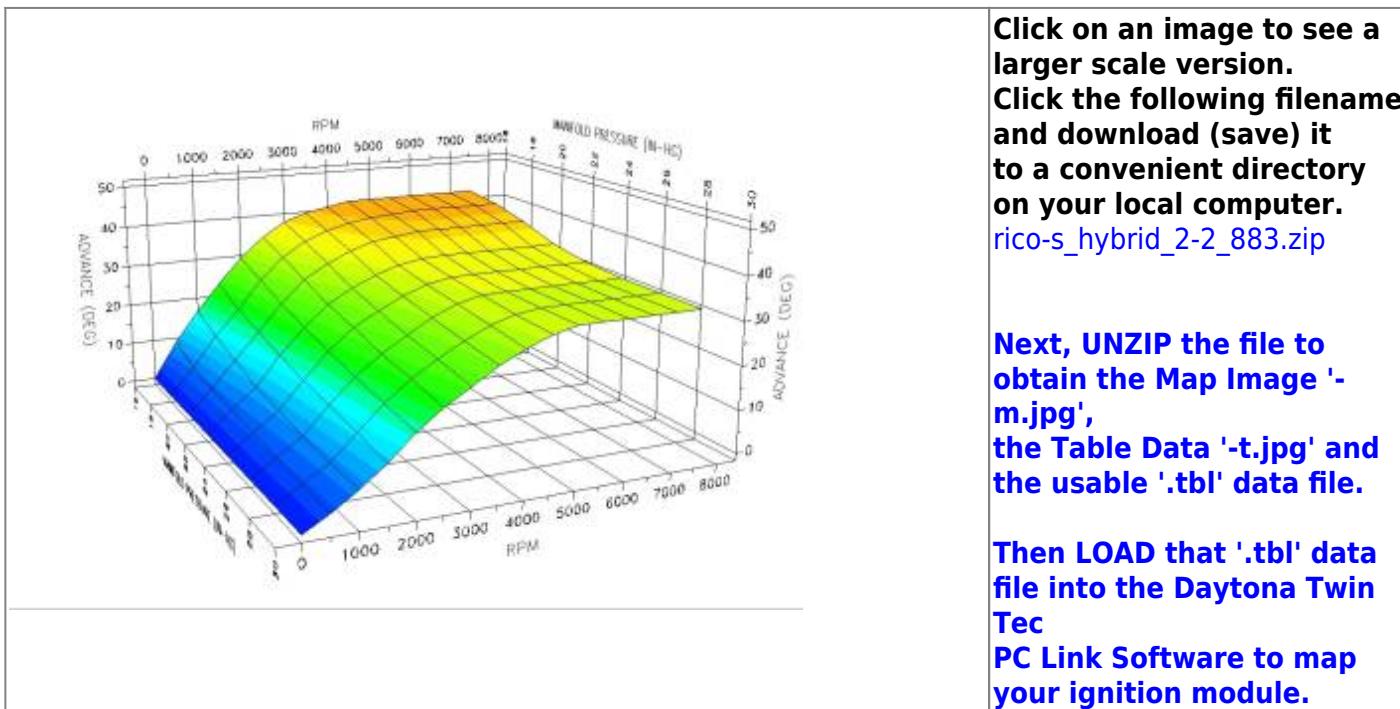


MAP/RPM	.0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	9.0	16.6	23.2	29.4	34.4	37.8	39.8	40.8	41.8	42.0	42.0	42.0	42.0	42.0	42.0
18	0.0	6.4	13.8	20.0	26.8	32.2	35.6	37.8	39.4	40.2	40.6	41.0	41.2	41.0	41.0	41.0
20	0.0	5.6	11.8	18.2	24.4	29.8	33.0	35.8	37.4	38.2	39.0	39.0	39.0	39.0	39.0	39.0
22	0.0	5.0	9.6	16.4	22.4	27.2	30.4	33.0	34.8	35.8	36.0	36.0	36.0	36.0	36.0	36.0
24	0.0	4.4	8.6	14.8	20.8	25.6	28.6	31.4	33.4	34.6	34.6	34.6	34.6	34.6	34.6	34.6
26	0.0	4.0	7.8	13.8	19.2	23.6	27.0	30.2	32.6	33.8	34.0	34.0	34.0	34.0	34.0	34.0
28	0.0	3.6	7.2	12.6	18.0	22.4	25.8	29.0	31.6	33.2	34.0	34.0	34.0	34.0	34.0	34.0
30	0.0	3.2	7.0	11.4	16.8	21.0	24.4	28.0	30.6	32.8	34.0	34.0	34.0	34.0	34.0	34.0

## Rico-s\_Jester\_8\_Ball\_Capo\_Map\_06\_1200\_0

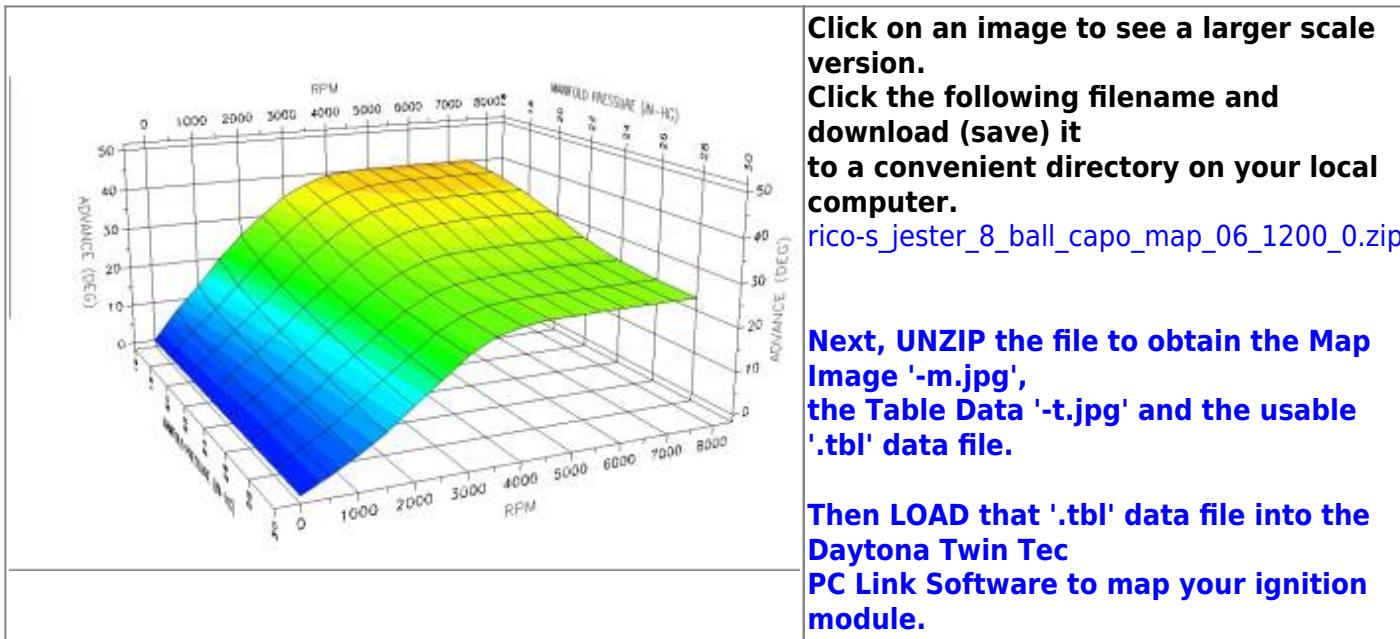

MAP/RPM	.0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	7.2	13.2	19.8	25.4	30.2	34.6	37.4	39.2	40.0	40.2	40.2	40.2	40.2	40.2	40.2
18	0.0	5.8	10.9	16.7	22.3	27.6	32.0	35.4	37.6	38.8	39.2	39.5	39.5	39.5	39.5	39.5
20	0.0	4.8	9.6	14.6	19.8	24.9	29.2	32.8	35.4	36.8	37.3	37.5	37.5	37.5	37.5	37.5
22	0.0	4.2	8.6	13.1	18.1	22.6	27.0	30.3	32.9	34.1	34.7	35.1	35.1	35.1	35.1	34.9
24	0.0	3.4	7.4	12.0	16.7	21.0	25.0	28.1	30.2	31.2	31.4	31.6	31.6	31.6	31.6	31.6
26	0.0	3.0	6.8	11.2	15.5	19.9	23.9	26.8	28.4	29.0	29.3	29.5	29.5	29.5	29.5	29.5
28	0.0	3.0	6.3	10.4	14.8	19.0	23.2	26.2	27.6	28.2	28.4	28.4	28.4	28.4	28.4	28.4
30	0.0	2.8	5.9	9.6	14.2	18.6	23.1	26.0	27.4	28.1	28.0	28.2	28.2	28.2	28.2	28.2

## Rico-s\_Jester\_8\_Ball\_Capo\_Map\_06\_1200\_1

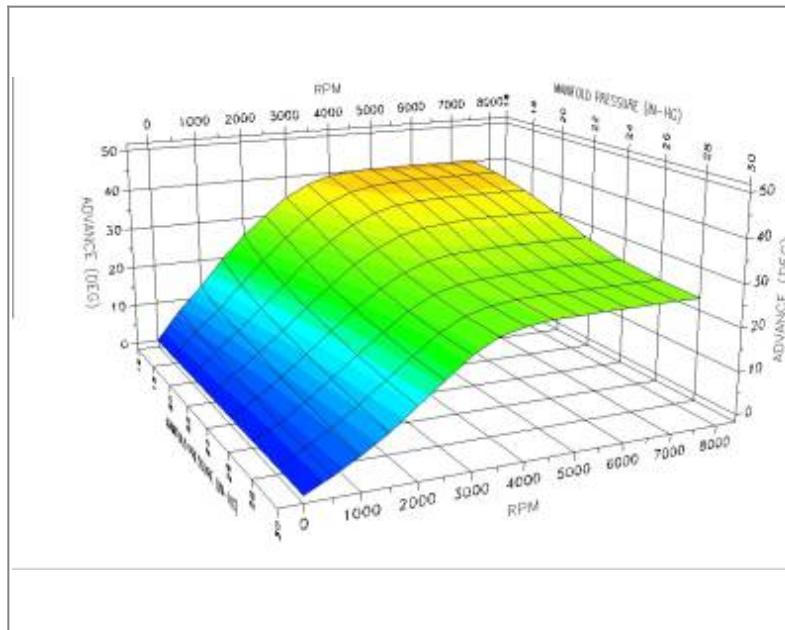

**Click on an image to see a larger scale version.**

**Click the following filename and download (save) it to a convenient directory on your local computer.**


[rico-s\\_jester\\_8\\_ball\\_capo\\_map\\_06\\_1200\\_1.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**

MAP/RPM	.0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	7.2	13.2	19.8	25.4	30.2	34.6	37.4	39.2	40.0	40.2	40.2	40.2	40.2	40.2	40.2
18	0.0	5.8	10.9	16.7	22.3	27.6	32.0	35.4	37.6	38.8	39.2	39.5	39.5	39.5	39.5	39.5
20	0.0	4.8	9.6	14.6	19.8	24.9	29.2	32.8	35.4	36.8	37.3	37.5	37.5	37.5	37.5	37.5
22	0.0	4.2	8.6	13.1	18.1	22.6	27.0	30.3	32.9	34.1	34.7	35.1	35.1	35.1	35.1	34.9
24	0.0	3.4	7.4	12.0	16.7	21.0	25.0	28.1	30.2	31.2	31.4	31.6	31.6	31.6	31.6	31.6
26	0.0	3.0	6.8	11.2	15.5	19.9	23.9	26.8	28.4	29.0	29.3	29.5	29.5	29.5	29.5	29.5
28	0.0	3.0	6.3	10.4	14.8	19.0	23.2	26.2	27.6	28.2	28.4	28.4	28.4	28.4	28.4	28.4
30	0.0	2.8	5.9	9.6	14.2	18.6	23.1	26.0	27.4	28.1	28.0	28.2	28.2	28.2	28.2	28.2

## Rico-s\_Jester\_III\_Map\_Wedge\_Mod

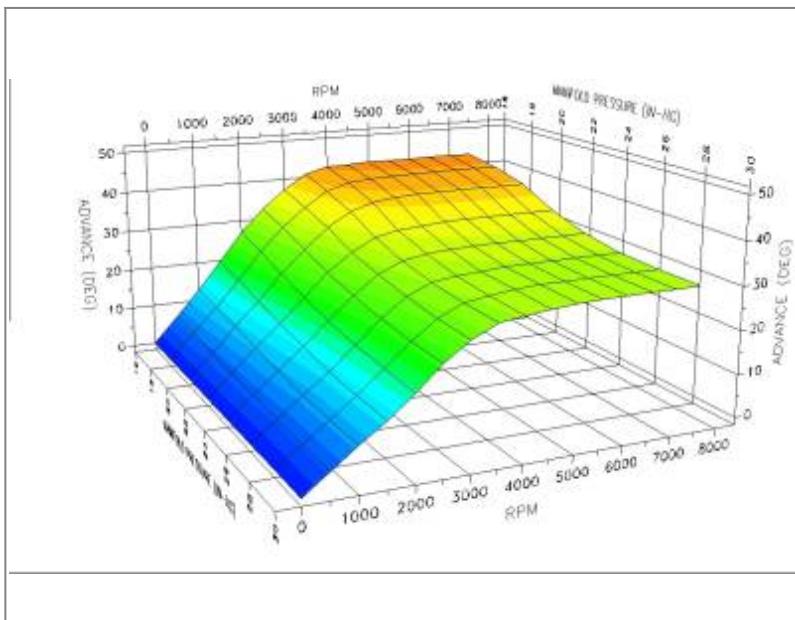

**Click on an image to see a larger scale version.**

**Click the following filename and download (save) it to a convenient directory on your local computer.**


[rico-s\\_jester\\_iii\\_map\\_wedge\\_mod.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	6.4	12.8	19.8	27.0	32.6	37.2	40.9	42.4	42.5	42.7	42.7	42.7	42.7	42.7	42.7
18	0.0	6.4	12.2	18.4	25.2	30.8	35.4	39.2	40.8	41.3	41.5	41.7	41.7	41.7	41.7	41.7
20	0.0	5.4	11.4	17.0	23.2	28.6	33.4	36.8	38.6	39.3	39.7	39.7	39.7	39.7	39.7	39.7
22	0.0	5.2	10.4	15.5	21.1	26.4	30.6	33.6	34.8	35.2	35.6	35.8	35.8	35.8	35.8	35.8
24	0.0	5.0	9.7	14.4	19.6	24.7	28.9	31.4	32.4	32.8	33.0	33.1	33.1	33.1	33.1	33.1
26	0.0	4.4	8.9	13.2	18.5	23.5	27.7	30.2	31.0	31.3	31.7	31.7	31.7	31.7	31.7	31.7
28	0.0	4.4	8.7	13.0	17.9	22.9	26.9	29.6	30.4	31.0	31.4	31.4	31.4	31.4	31.4	31.4
30	0.0	4.4	8.7	12.7	17.5	22.7	26.7	29.4	30.2	30.7	31.2	31.4	31.4	31.4	31.4	31.4

## Rico-s\_Jester\_III\_Map\_Wedge\_Mod\_1

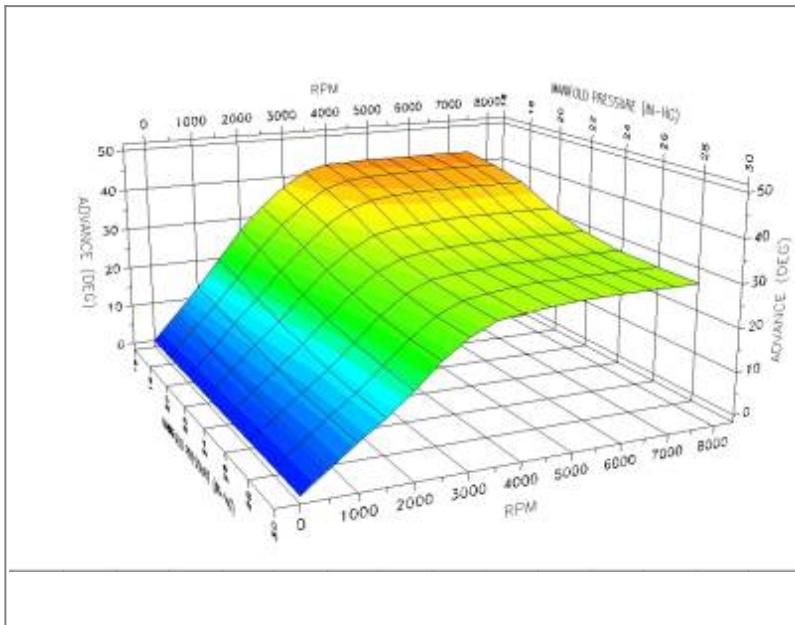

**Click on an image to see a larger scale version.**

**Click the following filename and download (save) it to a convenient directory on your local computer.**


[rico-s\\_jester\\_iii\\_map\\_wedge\\_mod\\_1.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	6.4	12.8	19.8	27.0	32.6	37.2	40.9	42.4	42.5	42.7	42.7	42.7	42.7	42.7	42.7
18	0.0	6.4	12.2	18.4	25.2	30.8	35.4	39.2	40.8	41.3	41.5	41.7	41.7	41.7	41.7	41.7
20	0.0	5.4	11.4	17.0	23.2	28.6	33.4	36.8	38.6	39.3	39.7	39.7	39.7	39.7	39.7	39.7
22	0.0	5.2	10.4	15.5	21.1	26.4	30.6	33.6	34.8	35.2	35.6	35.8	35.8	35.8	35.8	35.8
24	0.0	5.0	9.7	14.4	19.6	24.7	28.9	31.4	32.4	32.8	33.0	33.1	33.1	33.1	33.1	33.1
26	0.0	4.4	8.9	13.2	18.5	23.5	27.7	30.2	31.0	31.3	31.7	31.7	31.7	31.7	31.7	31.7
28	0.0	4.4	8.7	13.0	17.9	22.9	26.9	29.6	30.4	31.0	31.4	31.4	31.4	31.4	31.4	31.4
30	0.0	4.4	8.7	12.7	17.5	22.7	26.7	29.4	30.2	30.7	31.2	31.4	31.4	31.4	31.4	31.4

## Rico-s\_Jester\_III\_Map\_Wedge\_Mod\_2

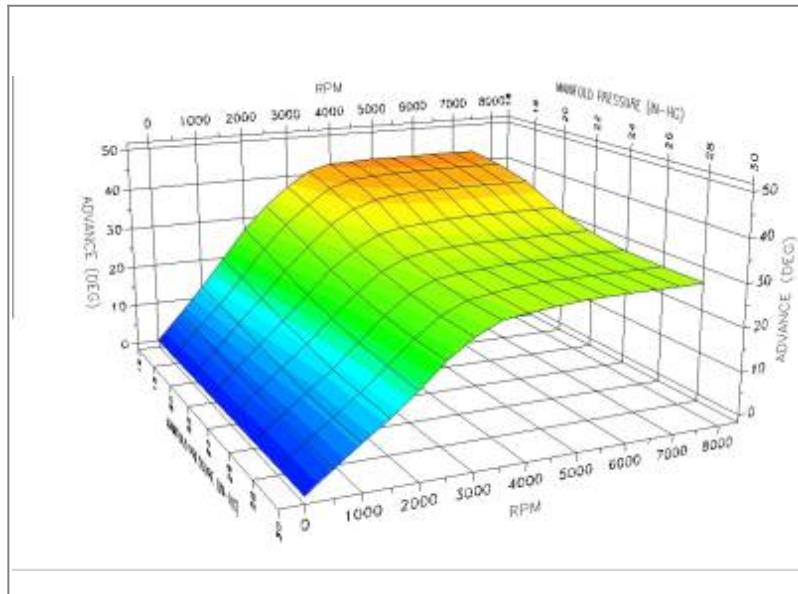

**Click on an image to see a larger scale version.**

**Click the following filename and download (save) it to a convenient directory on your local computer.**


[rico-s\\_jester\\_iii\\_map\\_wedge\\_mod\\_2.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**


**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	6.4	12.8	19.8	27.0	32.6	37.2	40.9	42.4	42.5	42.7	42.7	42.7	42.7	42.7	42.7
18	0.0	6.4	12.2	18.4	25.2	30.8	35.4	39.2	40.8	41.3	41.5	41.7	41.7	41.7	41.7	41.7
20	0.0	5.4	11.4	17.0	23.2	28.6	33.4	36.8	38.6	39.3	39.7	39.7	39.7	39.7	39.7	39.7
22	0.0	5.2	10.4	15.5	21.1	26.4	30.6	33.6	34.8	35.2	35.6	35.8	35.8	35.8	35.8	35.8
24	0.0	5.0	9.7	14.4	19.6	24.7	28.9	31.4	32.4	32.8	33.0	33.1	33.1	33.1	33.1	33.1
26	0.0	4.4	8.9	13.2	18.5	23.5	27.7	30.2	31.0	31.3	31.7	31.7	31.7	31.7	31.7	31.7
28	0.0	4.4	8.7	13.0	17.9	22.9	26.9	29.6	30.4	31.0	31.4	31.4	31.4	31.4	31.4	31.4
30	0.0	4.4	8.7	12.7	17.5	22.7	26.7	29.4	30.2	30.7	31.2	31.4	31.4	31.4	31.4	31.4

## Rico-s\_Jester\_IV\_Map

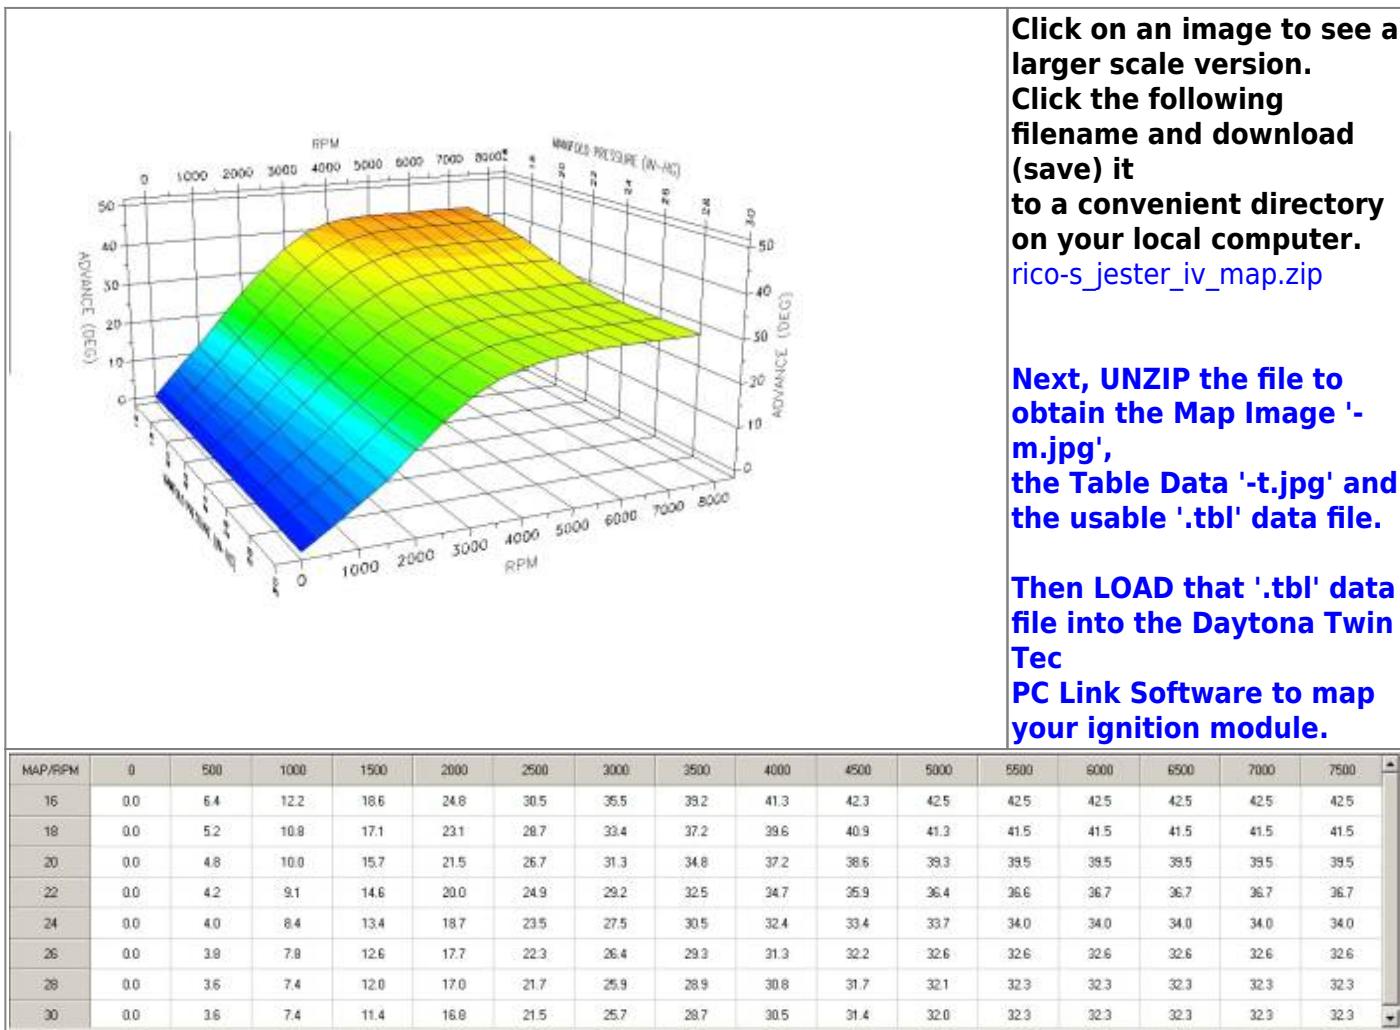


## Rico-s\_Jester\_IV\_Map\_06\_1200\_0

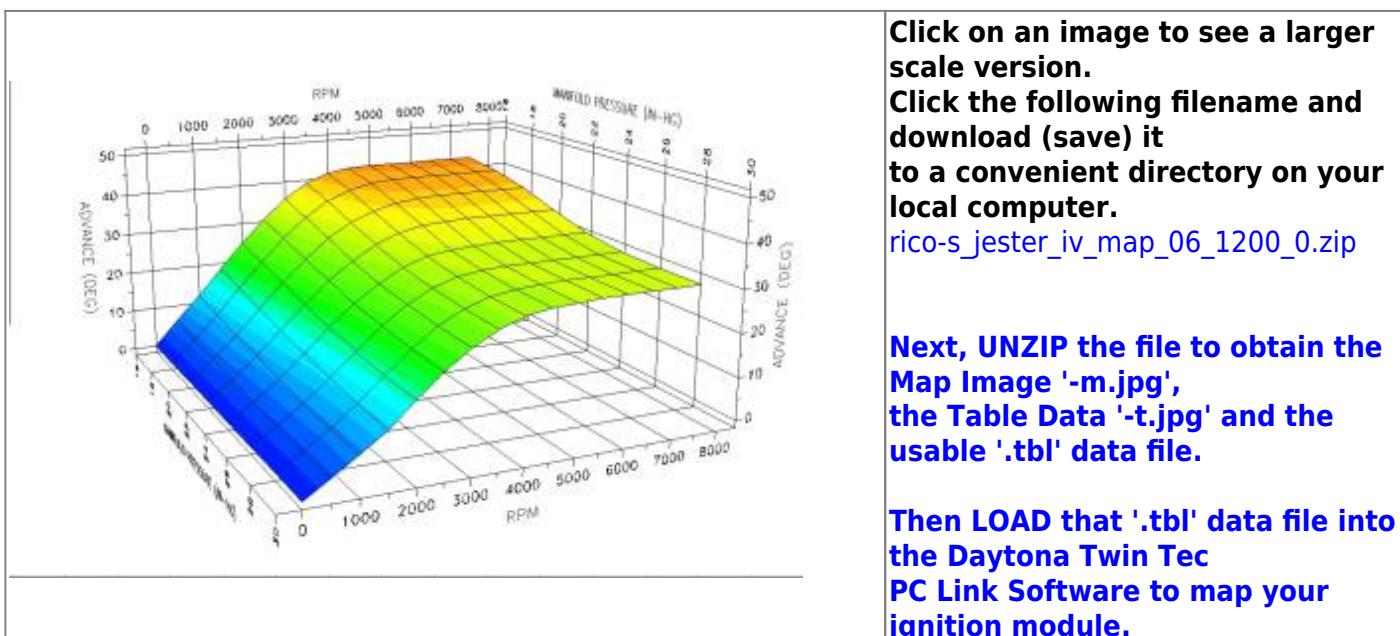


MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	6.4	12.2	18.6	24.8	30.6	35.6	39.2	41.3	42.3	42.5	42.5	42.5	42.5	42.5	42.5
18	0.0	5.2	10.8	17.2	23.2	28.8	33.5	37.2	39.6	40.9	41.3	41.5	41.5	41.5	41.5	41.5
20	0.0	4.8	10.0	15.8	21.8	26.8	31.4	34.8	37.2	38.6	39.3	39.5	39.5	39.5	39.5	39.5
22	0.0	4.2	9.2	14.6	20.2	25.2	29.3	32.6	34.8	36.0	36.4	36.7	36.7	36.7	36.7	36.7
24	0.0	4.0	8.4	13.4	18.8	23.5	27.5	30.6	32.6	33.4	33.7	34.0	34.0	34.0	34.0	34.0
26	0.0	3.8	7.8	12.6	17.7	22.5	26.6	29.6	31.4	32.2	32.6	32.6	32.6	32.6	32.6	32.6
28	0.0	3.6	7.4	12.0	17.0	21.9	26.0	29.0	30.8	31.7	32.1	32.3	32.3	32.3	32.3	32.3
30	0.0	3.6	7.4	11.4	16.8	21.5	25.7	28.7	30.7	31.6	32.0	32.3	32.3	32.3	32.3	32.3

## Rico-s Jester IV Map\_06\_1200\_1

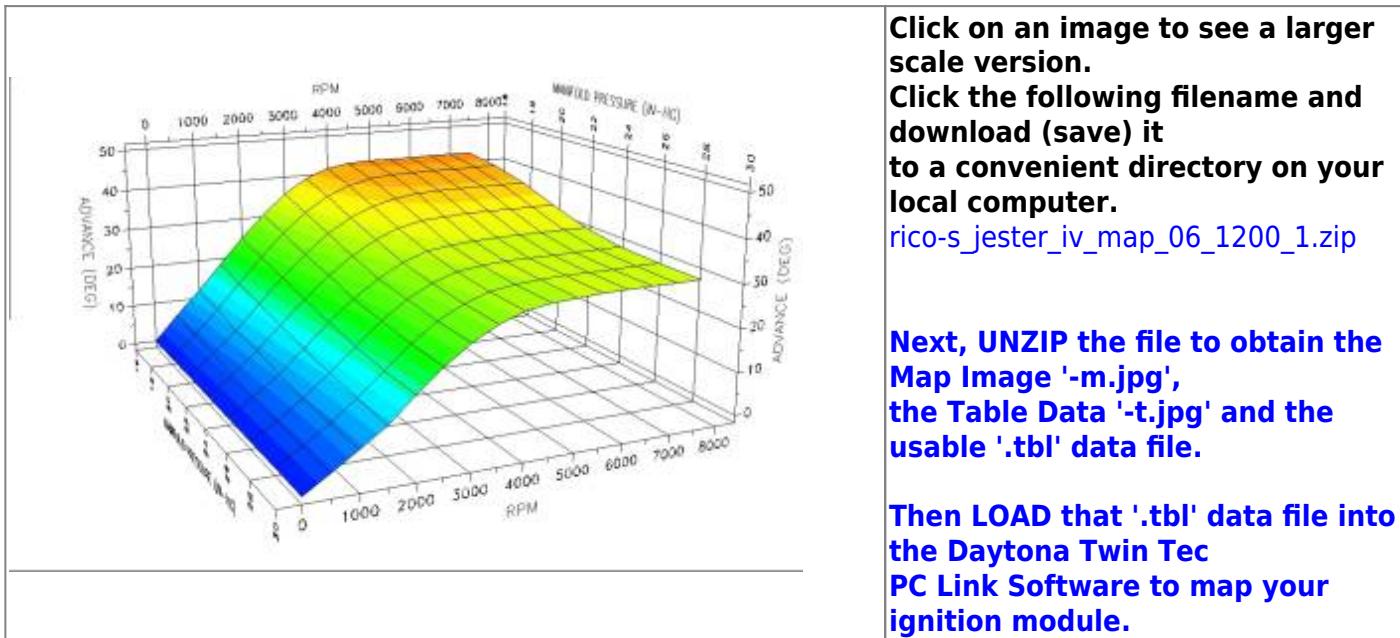

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	6.4	12.2	18.6	24.8	30.6	35.6	39.2	41.3	42.3	42.5	42.5	42.5	42.5	42.5	42.5
18	0.0	5.2	10.8	17.2	23.2	28.8	33.5	37.2	39.6	40.9	41.3	41.5	41.5	41.5	41.5	41.5
20	0.0	4.8	10.0	15.9	21.8	26.8	31.4	34.8	37.2	38.6	39.3	39.5	39.5	39.5	39.5	39.5
22	0.0	4.2	9.2	14.6	20.2	25.2	29.3	32.6	34.8	36.0	36.4	36.7	36.7	36.7	36.7	36.7
24	0.0	4.0	8.4	13.4	18.8	23.5	27.5	30.6	32.6	33.4	33.7	34.0	34.0	34.0	34.0	34.0
26	0.0	3.8	7.8	12.6	17.7	22.5	26.6	29.6	31.4	32.2	32.6	32.6	32.6	32.6	32.6	32.6
28	0.0	3.6	7.4	12.0	17.0	21.9	26.0	29.0	30.8	31.7	32.1	32.3	32.3	32.3	32.3	32.3
30	0.0	3.6	7.4	11.4	16.8	21.5	25.7	28.7	30.7	31.6	32.0	32.3	32.3	32.3	32.3	32.3

## Rico-s\_Jester\_IV\_Map\_VSS\_1475

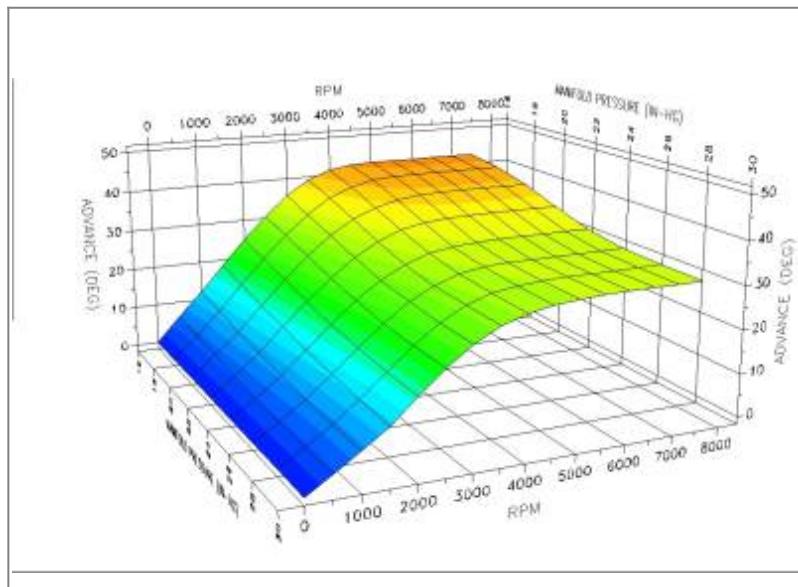

**Click on an image to see a larger scale version.**

**Click the following filename and download (save) it to a convenient directory on your local computer.**


[rico-s\\_jester\\_iv\\_map\\_vss\\_1475.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**


**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**


MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	6.4	12.2	18.6	24.8	30.5	35.5	39.2	41.3	42.3	42.5	42.5	42.5	42.5	42.5	42.5
18	0.0	5.2	10.8	17.1	23.1	28.7	33.4	37.2	39.6	40.9	41.3	41.5	41.5	41.5	41.5	41.5
20	0.0	4.8	10.0	15.7	21.5	26.7	31.3	34.8	37.2	38.6	39.3	39.5	39.5	39.5	39.5	39.5
22	0.0	4.2	9.1	14.6	20.0	24.9	29.2	32.5	34.7	35.9	36.4	36.6	36.7	36.7	36.7	36.7
24	0.0	4.0	8.4	13.4	18.7	23.5	27.5	30.5	32.4	33.4	33.7	34.0	34.0	34.0	34.0	34.0
26	0.0	3.8	7.8	12.6	17.7	22.3	26.4	29.3	31.3	32.2	32.6	32.6	32.6	32.6	32.6	32.6
28	0.0	3.6	7.4	12.0	17.0	21.7	25.9	28.9	30.8	31.7	32.1	32.3	32.3	32.3	32.3	32.3
30	0.0	3.6	7.4	11.4	16.8	21.5	25.7	28.7	30.5	31.4	32.0	32.3	32.3	32.3	32.3	32.3

## Rico-s\_Jester\_Motorwerkz\_Map\_for\_Andrea\_06\_883\_Gearing

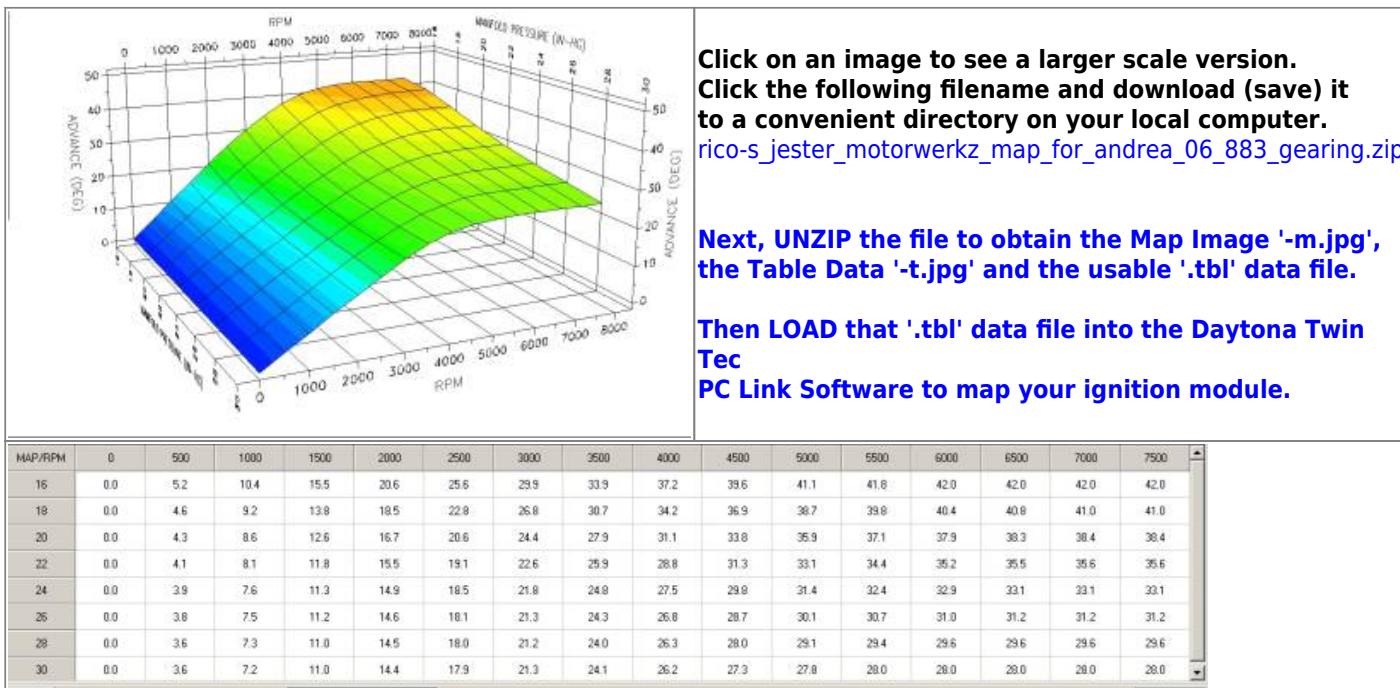


## Rico-s Jester\_V\_Map\_04-05\_1200

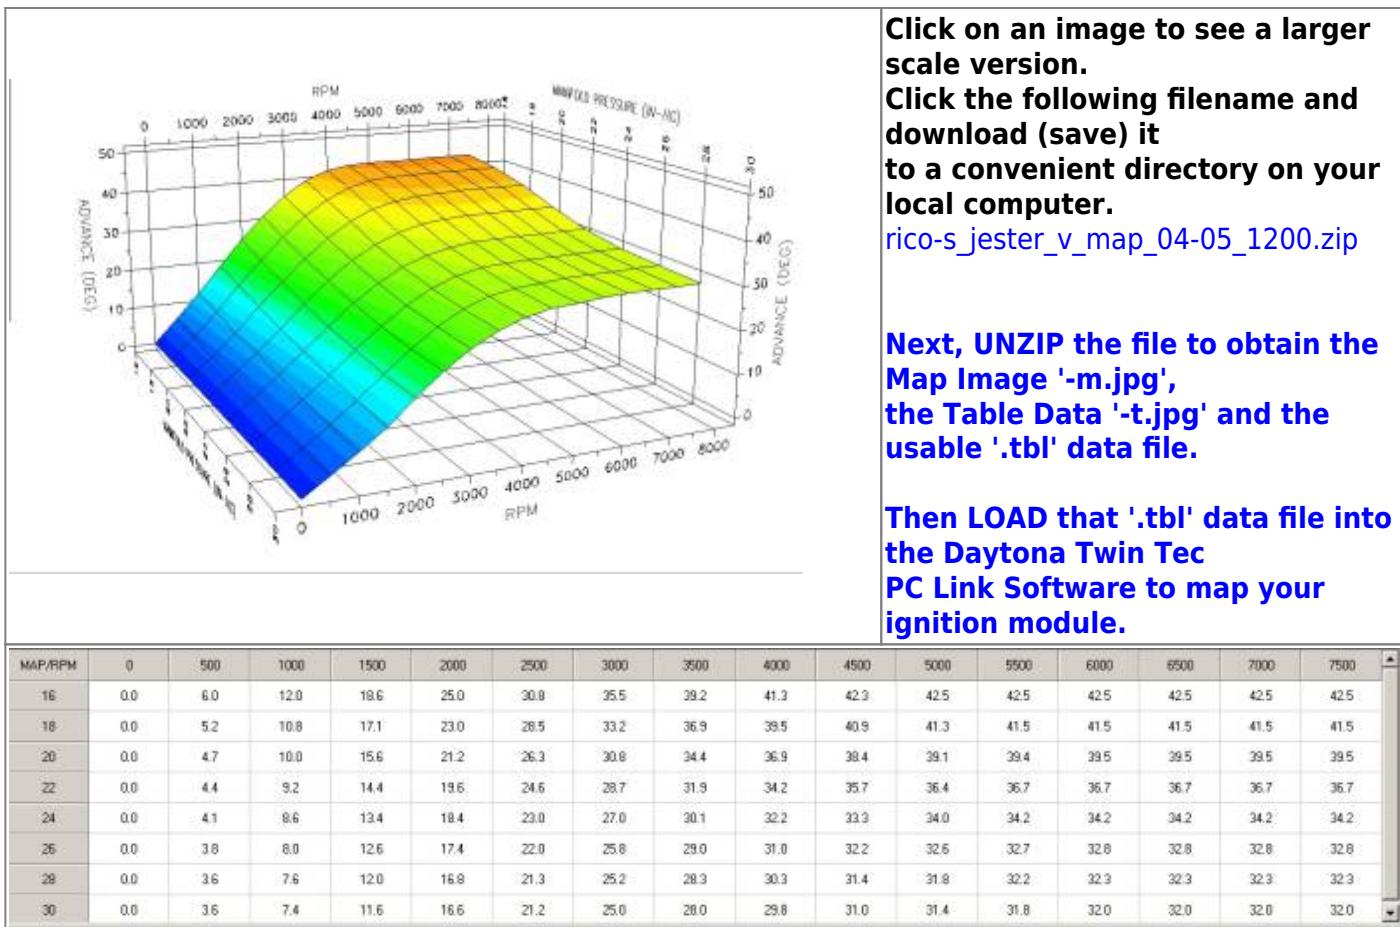

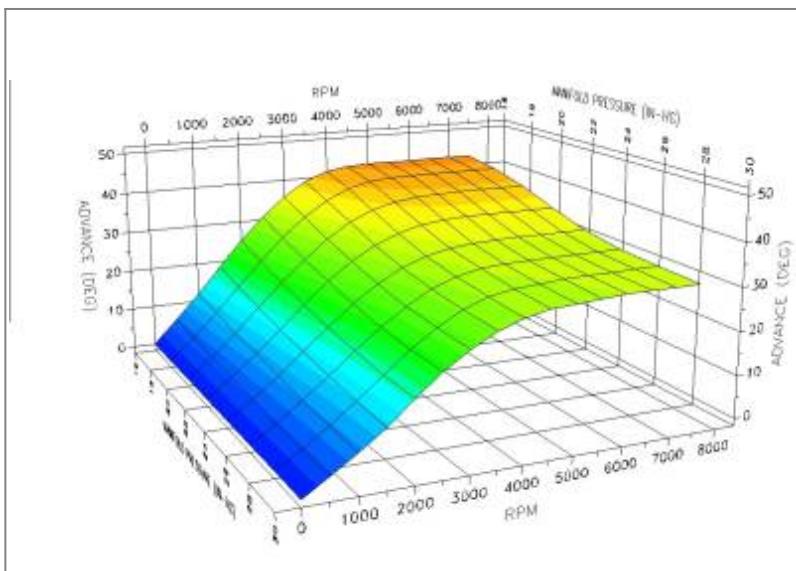**Rico-s\_Jester\_V\_Map\_04-05\_883**

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	6.0	12.0	18.6	25.0	30.8	35.5	39.2	41.3	42.3	42.5	42.5	42.5	42.5	42.5	42.5
18	0.0	5.2	10.8	17.0	23.0	28.5	33.2	36.9	39.5	40.9	41.3	41.5	41.5	41.5	41.5	41.5
20	0.0	4.7	10.0	15.6	21.2	26.3	30.8	34.4	37.0	38.4	39.1	39.4	39.5	39.5	39.5	39.5
22	0.0	4.4	9.2	14.4	19.6	24.5	28.7	31.9	34.2	35.7	36.4	36.7	36.7	36.7	36.7	36.7
24	0.0	4.1	8.6	13.4	18.4	23.0	27.0	30.1	32.2	33.3	33.9	34.2	34.2	34.2	34.2	34.2
26	0.0	3.8	8.0	12.6	17.3	21.8	25.7	28.9	31.0	32.2	32.6	32.7	32.8	32.8	32.8	32.8
28	0.0	3.6	7.6	12.0	16.7	21.3	25.2	28.3	30.3	31.4	31.8	32.2	32.3	32.3	32.3	32.3
30	0.0	3.6	7.4	11.6	16.6	21.2	25.0	28.0	29.8	31.0	31.4	31.6	32.0	32.0	32.0	32.0

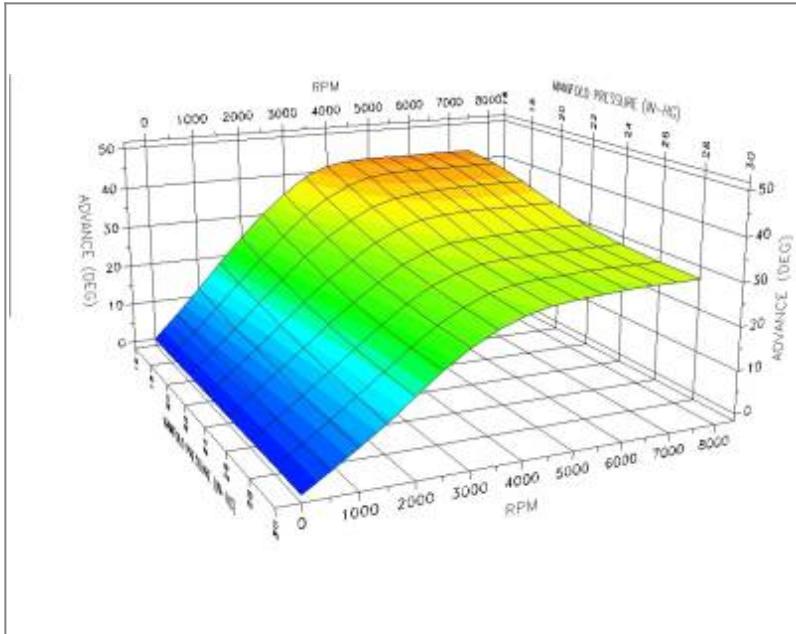**Rico-s\_Jester\_VII\_Map\_VSS\_04-05\_883**

**Click on an image to see a larger scale version.**

**Click the following filename and download (save) it to a convenient directory on your local computer.**


[rico-s\\_jester\\_v\\_map\\_04-05\\_883.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	6.0	12.0	18.4	24.4	30.1	34.9	39.0	41.3	42.3	42.5	42.5	42.5	42.5	42.5	42.5
18	0.0	5.2	10.8	16.6	22.3	27.5	32.3	36.2	39.0	40.7	41.3	41.5	41.5	41.5	41.5	41.5
20	0.0	4.9	10.0	15.4	20.6	25.6	29.8	33.5	36.4	38.0	38.8	39.2	39.3	39.4	39.4	39.4
22	0.0	4.6	9.2	14.2	19.1	23.7	27.7	31.3	34.1	35.7	36.4	36.7	36.7	36.7	36.7	36.7
24	0.0	4.2	8.6	13.2	17.8	22.2	26.2	29.6	32.0	33.3	33.8	34.0	34.2	34.2	34.2	34.2
26	0.0	3.8	8.1	12.4	16.8	21.2	25.2	28.4	30.7	32.0	32.5	32.6	32.8	32.8	32.8	32.8
28	0.0	3.6	7.6	12.0	16.3	20.7	24.6	27.7	30.0	31.2	31.7	31.9	32.2	32.2	32.2	32.2
30	0.0	3.6	7.4	11.4	16.0	20.5	24.3	27.3	29.3	30.6	31.2	31.5	31.8	32.0	32.0	32.0

## Rico-s\_Jester\_VII\_Map\_VSS\_06\_883

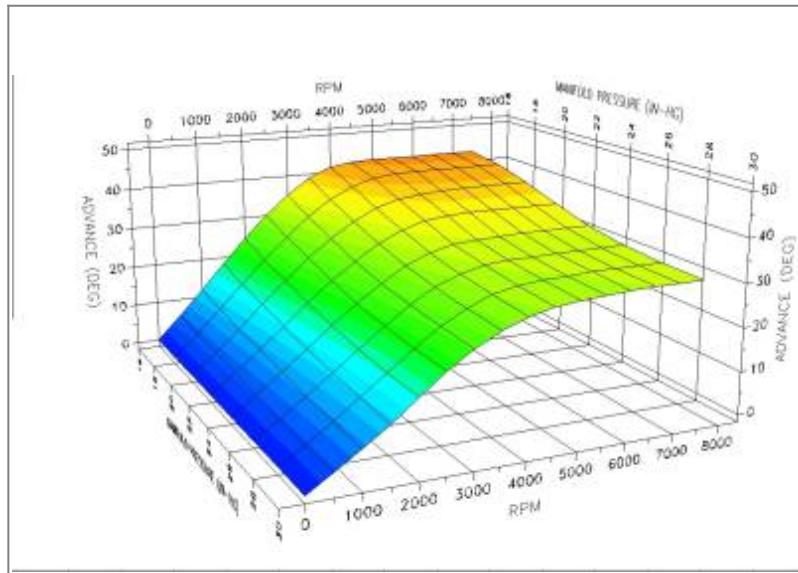

**Click on an image to see a larger scale version.**

**Click the following filename and download (save) it to a convenient directory on your local computer.**


[rico-s\\_jester\\_vii\\_map\\_vss\\_06\\_883.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**


MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	6.0	12.0	18.4	24.4	30.1	34.9	39.0	41.3	42.3	42.5	42.5	42.5	42.5	42.5	42.5
18	0.0	5.2	10.8	16.6	22.3	27.5	32.3	36.2	39.0	40.7	41.3	41.5	41.5	41.5	41.5	41.5
20	0.0	4.9	10.0	15.4	20.6	25.6	29.8	33.5	36.4	38.0	38.8	39.2	39.3	39.4	39.4	39.4
22	0.0	4.6	9.2	14.2	19.1	23.7	27.7	31.3	34.1	35.7	36.4	36.7	36.7	36.7	36.7	36.7
24	0.0	4.2	8.6	13.2	17.8	22.2	26.2	29.6	32.0	33.3	33.8	34.0	34.2	34.2	34.2	34.2
26	0.0	3.8	8.1	12.4	16.8	21.2	25.2	28.4	30.7	32.0	32.5	32.6	32.8	32.8	32.8	32.8
28	0.0	3.6	7.6	12.0	16.3	20.7	24.6	27.7	30.0	31.2	31.7	31.9	32.2	32.2	32.2	32.2
30	0.0	3.6	7.4	11.4	16.0	20.5	24.3	27.3	29.3	30.6	31.2	31.5	31.8	32.0	32.0	32.0

## Rico-s\_King\_Jester\_Map\_0

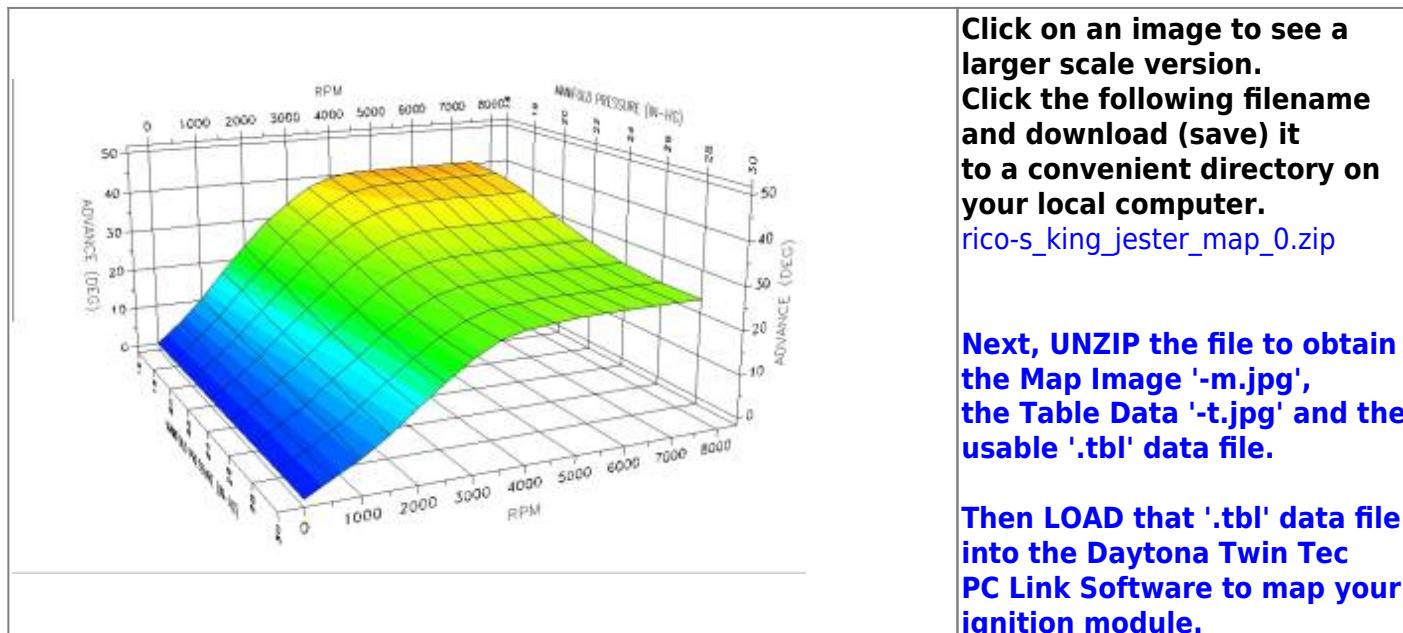


MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	4.9	10.5	17.1	23.3	29.1	33.5	37.2	39.5	40.3	40.5	40.5	40.5	40.5	40.5	40.5
18	0.0	4.5	9.7	15.8	21.7	27.4	32.0	35.7	38.2	39.4	39.6	39.8	39.8	39.8	39.8	39.8
20	0.0	4.1	9.0	14.6	20.1	25.2	30.0	33.6	35.8	37.2	37.6	37.8	37.8	37.8	37.8	37.8
22	0.0	3.9	8.4	13.4	18.4	23.4	27.8	31.0	33.0	34.0	34.2	34.2	34.2	34.2	34.2	34.2
24	0.0	3.5	7.6	12.3	17.0	21.6	25.8	28.8	30.4	31.2	31.4	31.5	31.5	31.5	31.5	31.5
26	0.0	3.3	7.0	11.5	15.8	20.2	24.2	27.0	28.5	29.0	29.2	29.4	29.4	29.4	29.4	29.4
28	0.0	3.1	6.5	10.7	15.1	19.3	23.1	25.9	27.5	28.1	28.5	28.5	28.5	28.5	28.5	28.5
30	0.0	3.1	6.1	9.9	14.5	18.9	22.9	25.9	27.4	27.9	28.3	28.5	28.5	28.5	28.5	28.5

## Rico-s\_King\_Jester\_Map\_1

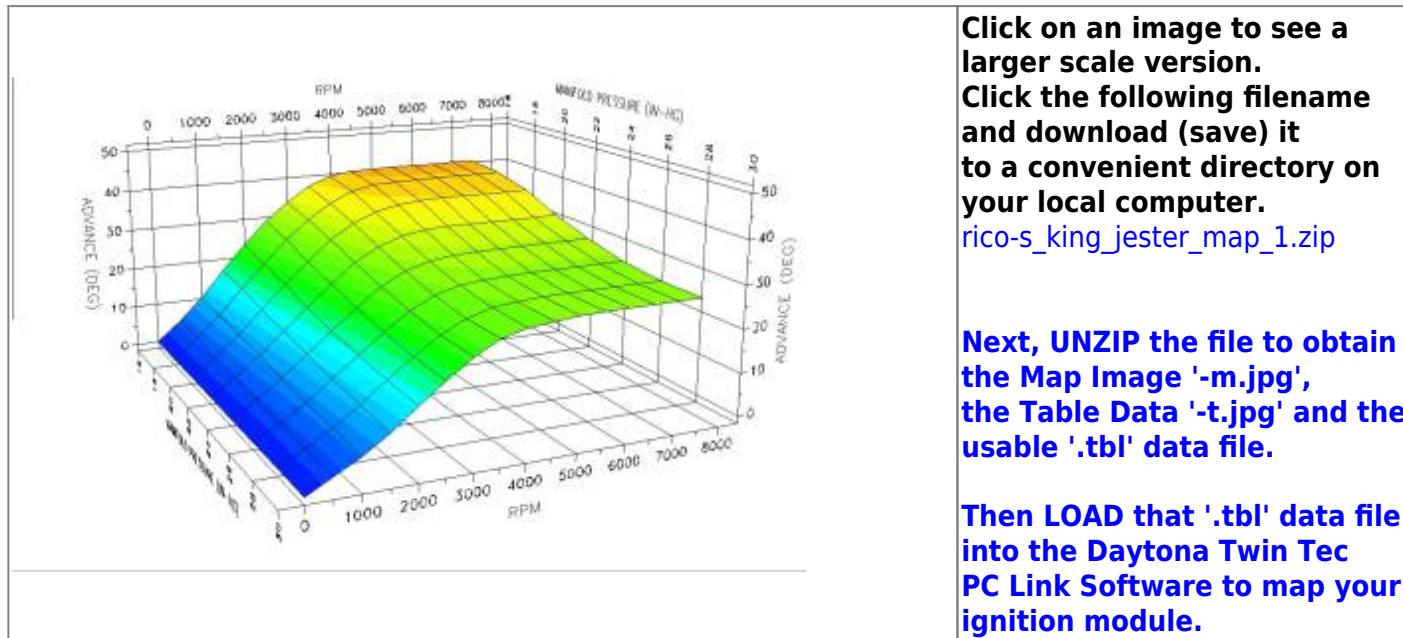

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	4.9	10.5	17.1	23.3	29.1	33.5	37.2	39.5	40.3	40.5	40.5	40.5	40.5	40.5	40.5
18	0.0	4.5	9.7	15.8	21.7	27.4	32.0	35.7	38.2	39.4	39.6	39.8	39.8	39.8	39.8	39.8
20	0.0	4.1	9.0	14.6	20.1	25.2	30.0	33.6	35.8	37.2	37.6	37.8	37.8	37.8	37.8	37.8
22	0.0	3.9	8.4	13.4	18.4	23.4	27.8	31.0	33.0	34.0	34.2	34.2	34.2	34.2	34.2	34.2
24	0.0	3.5	7.6	12.3	17.0	21.6	25.8	28.8	30.4	31.2	31.4	31.5	31.5	31.5	31.5	31.5
26	0.0	3.3	7.0	11.5	15.8	20.2	24.2	27.0	28.5	29.0	29.2	29.4	29.4	29.4	29.4	29.4
28	0.0	3.1	6.5	10.7	15.1	19.3	23.1	25.9	27.5	28.1	28.5	28.5	28.5	28.5	28.5	28.5
30	0.0	3.1	6.1	9.9	14.5	18.9	22.9	25.9	27.4	27.9	28.3	28.5	28.5	28.5	28.5	28.5

## Rico-s\_Voodoo\_Map\_06\_1200

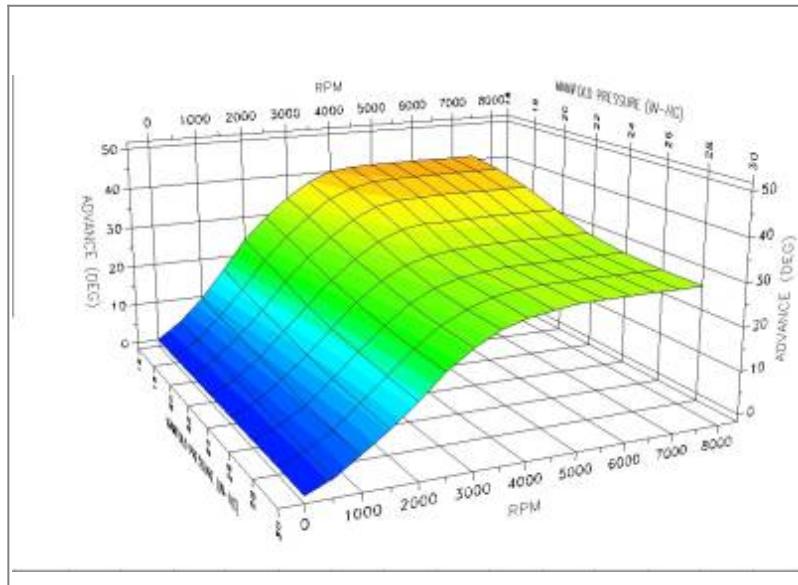


**Click on an image to see a larger scale version.  
Click the following filename and download (save) it to a convenient directory on your local computer.**  
[rico-s\\_voodoo\\_map\\_06\\_1200.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**


**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	4.0	9.6	16.6	23.8	29.4	34.0	37.7	40.0	40.8	41.0	41.0	41.0	41.0	41.0	41.0
18	0.0	3.6	8.8	15.2	22.0	27.6	32.2	36.1	38.4	39.6	39.8	40.0	40.0	40.0	40.0	40.0
20	0.0	3.2	8.2	13.8	20.2	25.6	30.0	34.0	36.5	37.7	37.8	38.0	38.0	38.0	38.0	38.0
22	0.0	3.0	7.4	12.8	18.4	23.8	28.2	31.8	34.0	34.8	34.8	35.0	35.0	35.0	35.0	35.0
24	0.0	2.6	6.8	11.8	17.0	22.4	26.7	29.6	31.2	31.8	32.2	32.3	32.3	32.3	32.3	32.3
26	0.0	2.6	6.2	11.0	16.2	21.2	25.4	28.1	29.7	30.5	30.9	30.9	30.9	30.9	30.9	30.9
28	0.0	2.4	5.8	10.6	15.6	20.6	24.6	27.4	29.2	30.2	30.6	30.6	30.6	30.6	30.6	30.6
30	0.0	2.4	6.2	10.4	15.2	20.4	24.4	27.4	29.0	29.9	30.6	30.6	30.6	30.6	30.6	30.6

## RTM-Andrea\_1250\_Map\_base-1431\_2

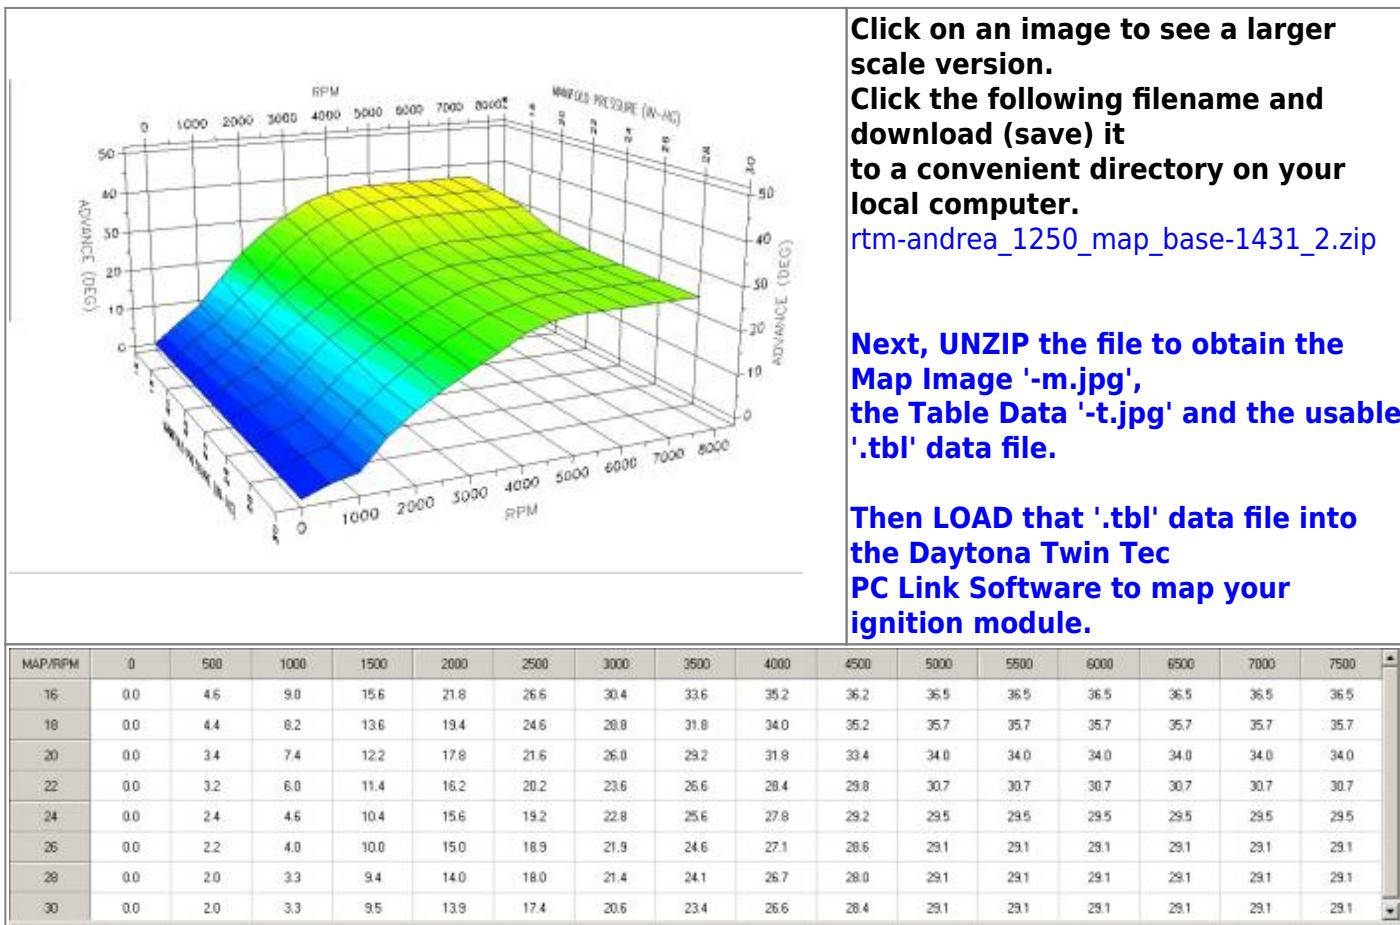


## RTM-Andrea\_1250\_Map\_AGGRESSIVE\_Version\_4-1

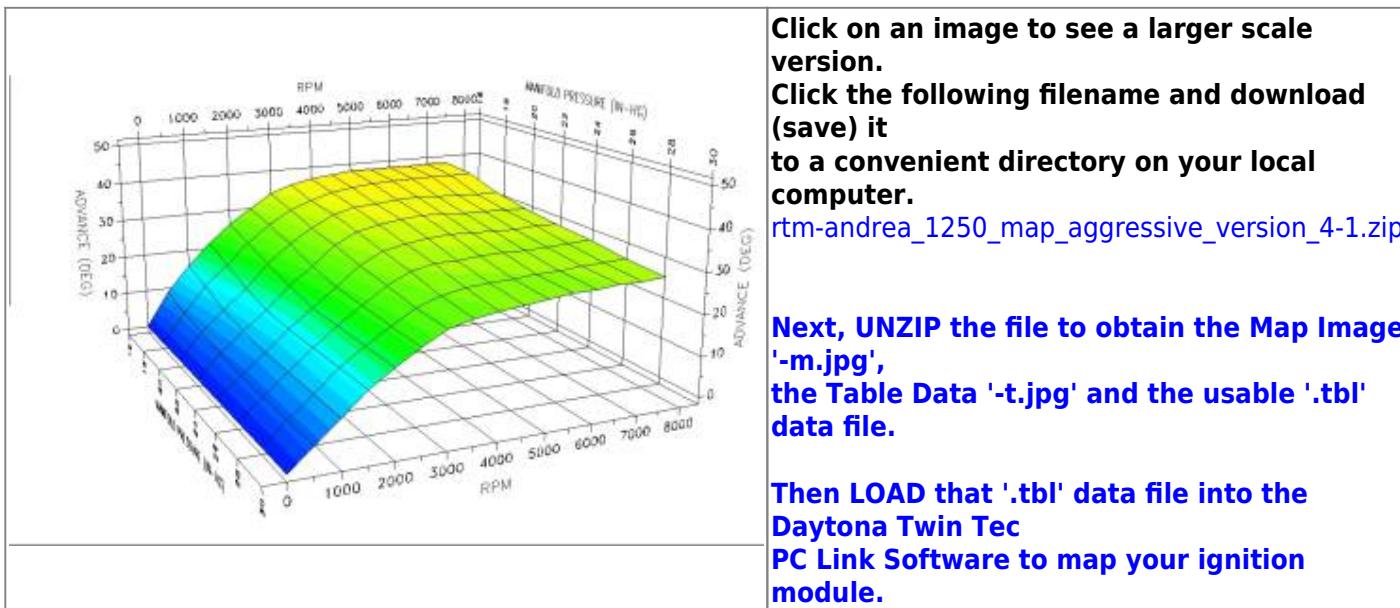


MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	9.0	15.6	21.4	26.2	30.0	33.6	35.6	36.8	37.5	38.1	38.1	38.1	38.1	38.1	38.1
18	0.0	7.2	14.0	19.0	24.2	28.6	32.2	34.2	35.8	36.6	37.2	37.5	37.5	37.5	37.5	37.5
20	0.0	6.4	11.5	16.6	22.2	27.0	30.4	33.4	34.8	35.2	35.6	35.8	35.4	35.0	35.0	35.0
22	0.0	5.6	10.4	15.0	20.4	24.8	28.4	32.2	33.4	34.2	34.6	34.4	34.0	34.0	33.8	33.6
24	0.0	5.0	9.6	14.6	19.0	23.4	28.0	30.8	32.0	32.6	33.0	32.8	32.6	32.4	32.8	32.6
26	0.0	5.0	9.9	14.6	19.0	23.0	27.0	29.6	30.8	30.8	31.2	31.4	31.2	31.4	31.6	32.0
28	0.0	5.0	9.9	15.0	19.0	22.5	25.8	27.8	29.0	29.4	29.6	30.0	30.0	30.4	30.6	30.8
30	0.0	5.0	9.9	15.0	19.0	22.5	25.6	27.0	27.8	28.4	29.0	29.5	29.6	30.0	30.0	30.4

## RTM-Andrea\_1250\_Map\_AGGRESSIVE-1431\_2\_Rev-3

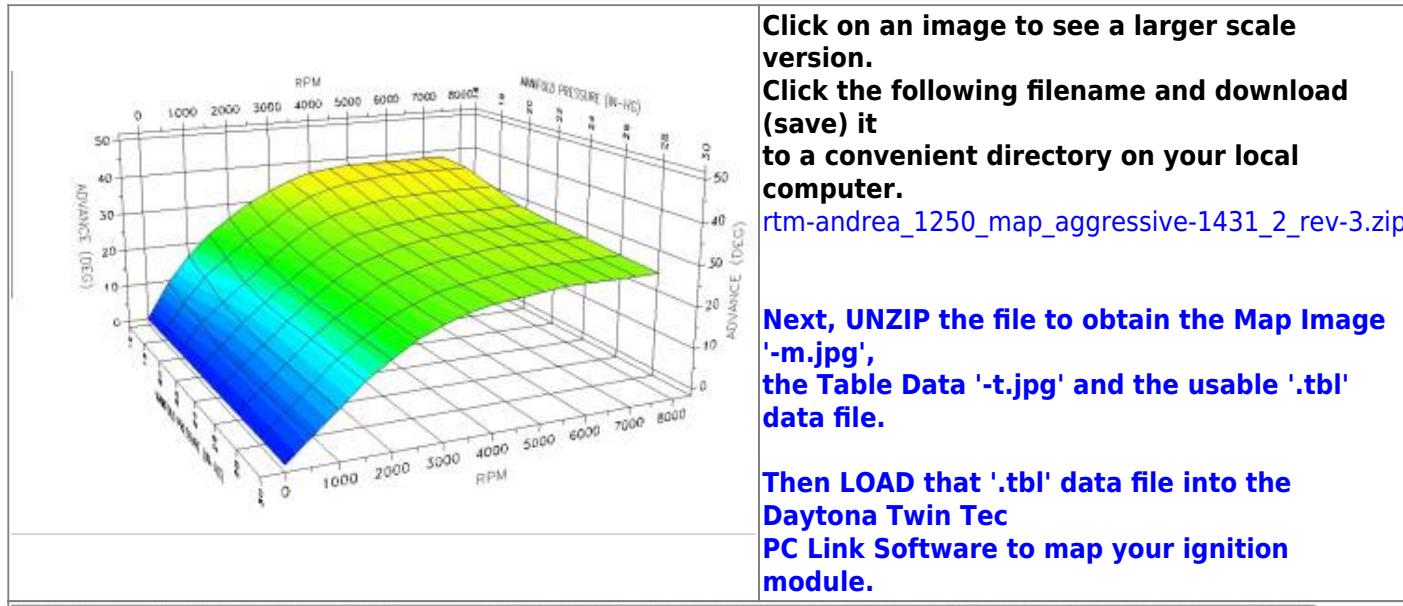


MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	9.4	16.4	22.0	26.0	29.6	32.6	35.0	36.8	37.5	38.1	38.1	38.1	38.1	38.1	38.1
18	0.0	8.2	14.4	19.0	23.4	26.8	30.4	33.4	35.0	36.3	36.8	37.5	37.5	37.5	37.5	37.5
20	0.0	7.0	11.5	16.2	20.8	25.0	28.6	31.0	32.6	33.8	34.6	34.8	35.0	35.0	35.0	35.0
22	0.0	5.0	10.4	15.0	19.4	23.5	27.0	29.4	30.6	31.4	32.0	32.6	32.6	32.6	32.6	32.6
24	0.0	5.0	9.6	14.6	19.0	23.0	26.4	28.2	29.8	30.6	31.2	31.5	31.5	31.5	31.5	31.5
26	0.0	5.0	9.9	15.0	19.0	22.5	25.8	27.6	29.0	29.8	30.4	31.0	31.0	31.0	31.0	31.0
28	0.0	5.0	9.9	15.0	19.0	22.5	25.0	27.0	28.0	28.8	29.5	30.0	30.0	30.0	30.0	30.0
30	0.0	5.0	9.9	15.0	19.0	22.5	24.8	26.6	27.8	28.4	29.0	29.5	29.5	29.5	29.5	29.5

## RTM-Andrea\_1250\_Map\_Revised\_aggressive

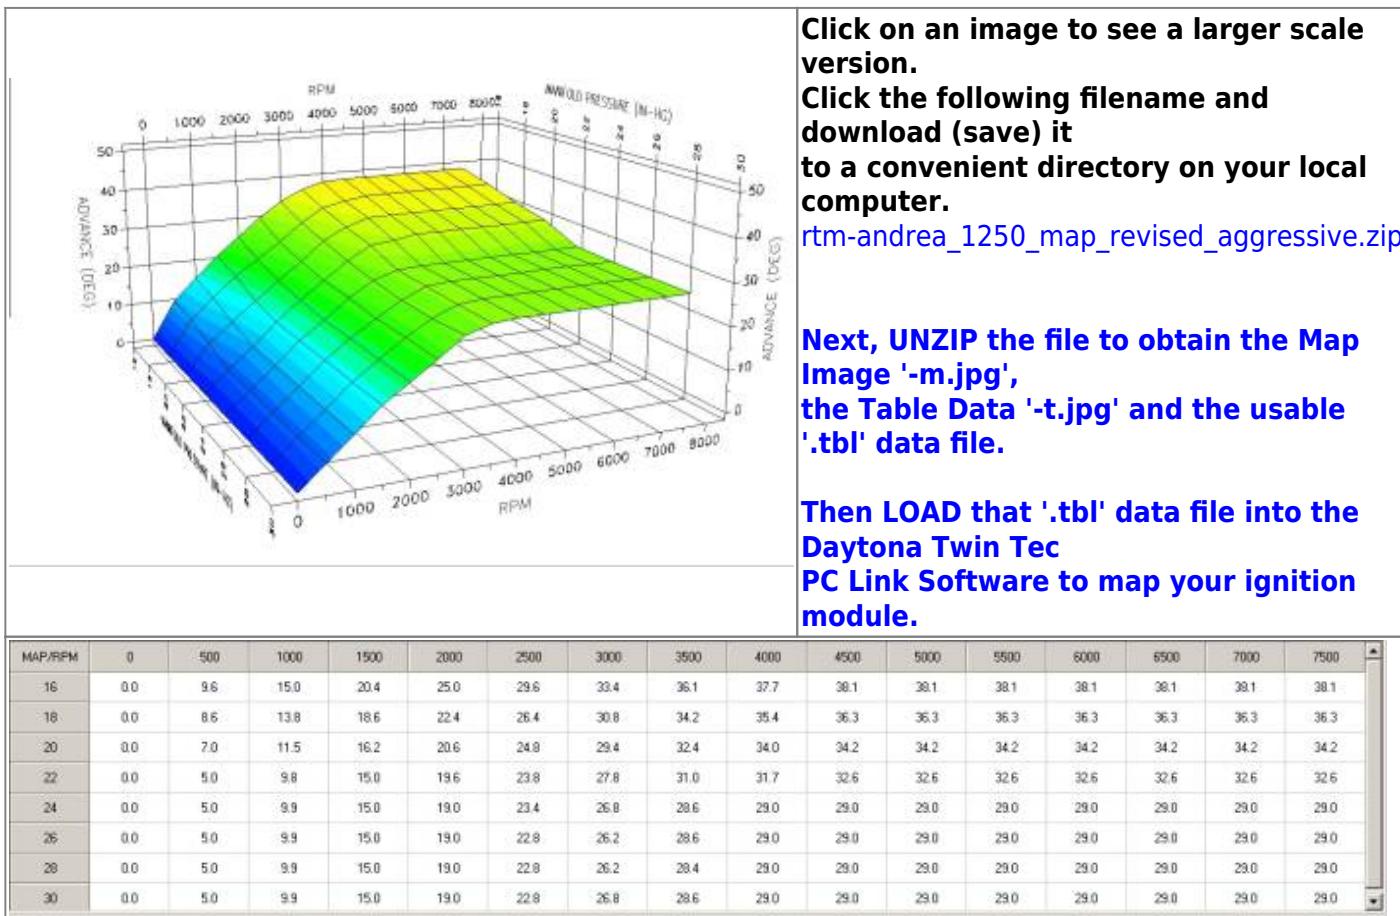


## RTM-Andrea\_1250\_Map\_Revised-aggressive-VSS\_1630

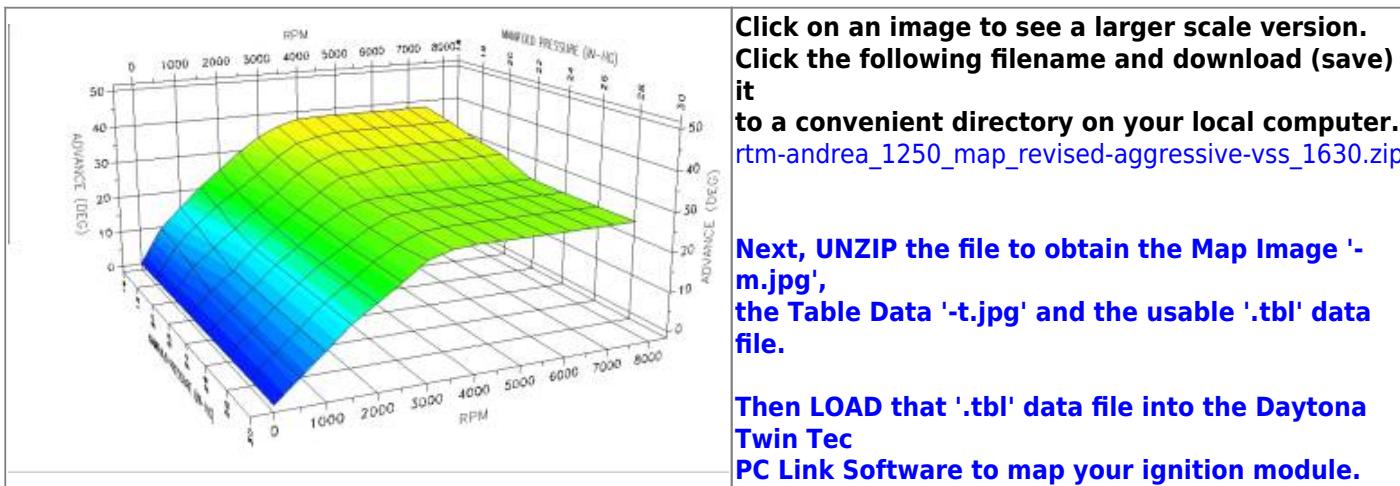


MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	9.6	15.0	20.4	25.0	29.6	33.4	36.1	37.7	38.1	38.1	38.1	38.1	38.1	38.1	38.1
18	0.0	8.6	13.8	18.6	22.4	26.4	30.8	34.2	35.4	36.3	36.3	36.3	36.3	36.3	36.3	36.3
20	0.0	7.0	11.5	16.2	20.6	24.8	29.4	32.4	34.0	34.2	34.2	34.2	34.2	34.2	34.2	34.2
22	0.0	5.0	9.8	15.0	19.6	23.8	27.8	31.0	31.7	32.6	32.6	32.6	32.6	32.6	32.6	32.6
24	0.0	5.0	9.9	15.0	19.0	23.4	26.8	28.6	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0
26	0.0	5.0	9.9	15.0	19.0	22.8	26.2	28.6	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0
28	0.0	5.0	9.9	15.0	19.0	22.8	26.2	28.4	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0
30	0.0	5.0	9.9	15.0	19.0	22.8	26.8	28.6	29.0	29.0	29.0	29.0	29.0	29.0	29.0	29.0

## RTM-Andrea\_1250\_Map\_Version\_4-0\_revised\_ramp\_from\_0to45

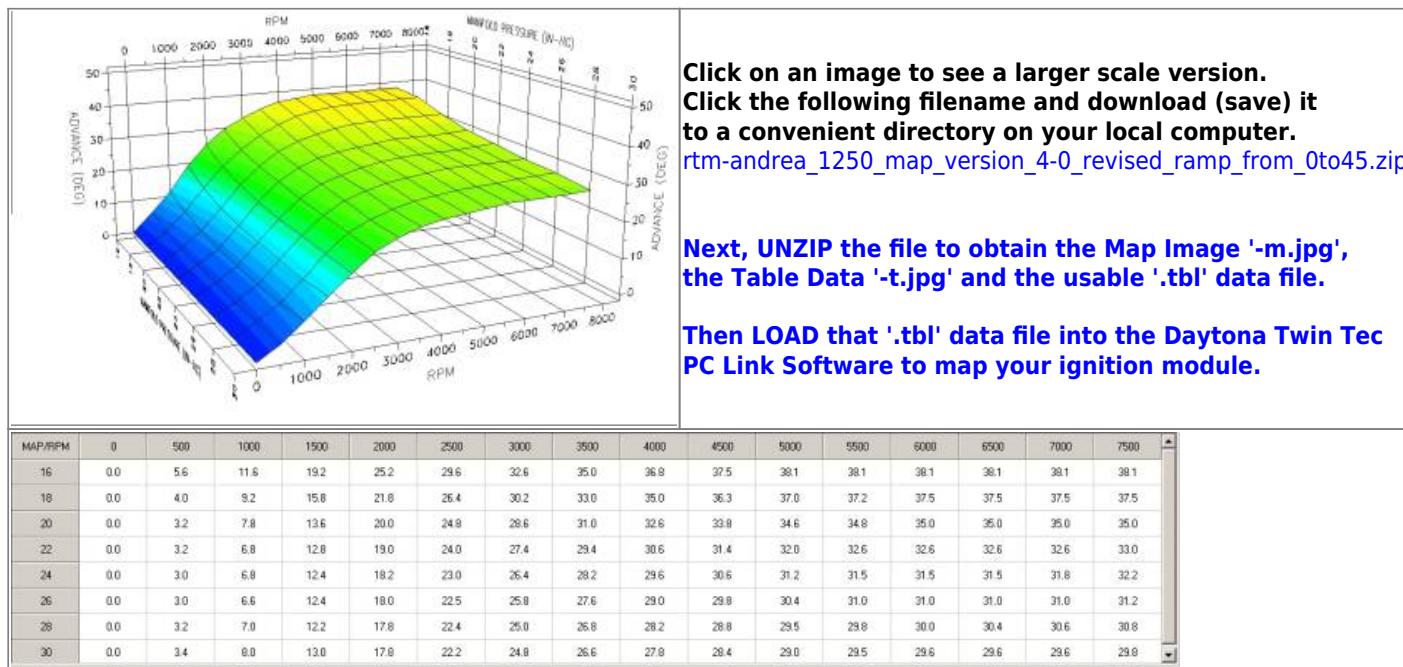

## Scarecrow\_1682

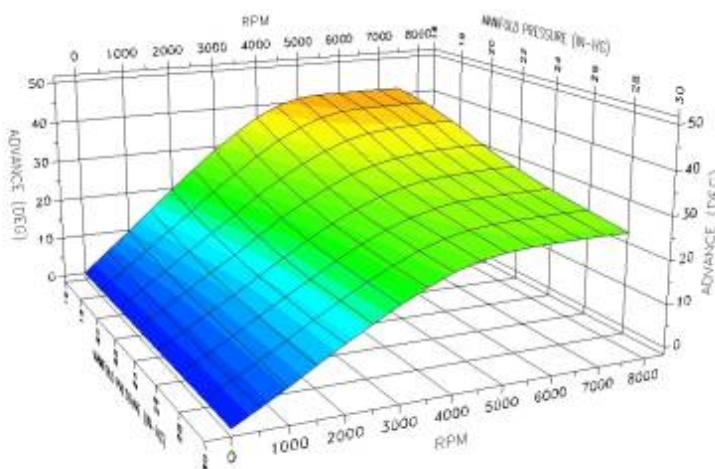


**Click on an image to see a larger scale version.  
Click the following filename and download (save) it to a convenient directory on your local computer.**  
[scarecrow\\_1682.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	5.0	9.8	14.8	19.6	24.5	29.0	33.0	36.7	39.4	41.0	41.5	41.5	41.5	41.5	41.5
18	0.0	4.4	8.7	13.1	17.5	21.9	26.0	30.0	33.5	36.5	38.6	39.7	40.0	40.1	40.1	40.1
20	0.0	3.9	7.8	11.8	15.8	19.8	23.8	27.5	30.7	33.4	35.4	36.7	37.3	37.7	37.9	37.9
22	0.0	3.5	7.1	10.8	14.5	18.2	21.9	25.3	28.2	30.7	32.4	33.6	34.2	34.5	34.7	34.7
24	0.0	3.3	6.7	10.2	13.7	17.2	20.6	23.8	26.5	28.8	30.4	31.4	31.9	32.1	32.3	32.3
26	0.0	3.1	6.5	10.0	13.4	16.7	20.0	22.9	25.4	27.5	29.0	29.9	30.1	30.2	30.3	30.3
28	0.0	3.1	6.4	9.8	13.2	16.5	19.7	22.5	24.9	26.8	28.0	28.5	28.7	28.9	28.9	28.9
30	0.0	3.1	6.3	9.8	13.2	16.4	19.5	22.2	24.6	26.2	27.1	27.6	27.7	27.7	27.7	27.7

## SE\_COPY\_SORTA

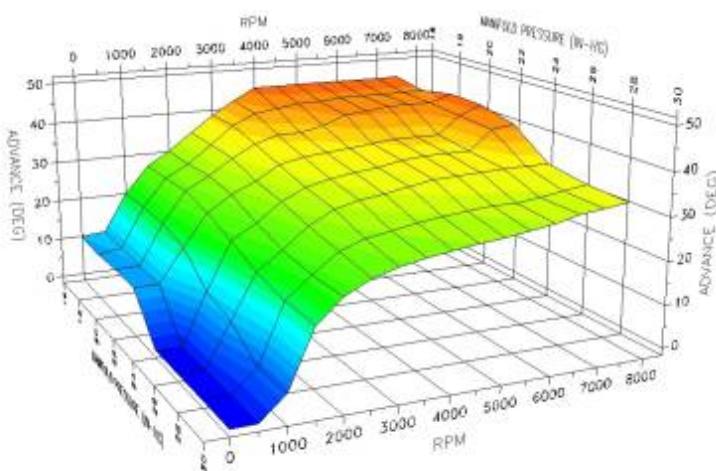

**Click on an image to see a larger scale version.**


**Click the following filename and download (save) it to a convenient directory on your local computer.**  
[se\\_copy\\_sorta.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	10.0	10.6	20.0	26.8	30.2	34.6	38.6	42.0	45.0	45.0	45.0	45.0	45.0	45.0	45.0	45.0
18	9.4	10.4	20.0	27.0	30.0	34.4	38.8	41.4	42.1	43.0	43.0	43.6	43.6	43.6	43.6	43.6
20	10.0	10.0	19.8	27.2	30.2	34.0	37.0	38.8	38.8	40.0	42.2	42.6	43.4	43.4	43.4	45.0
22	10.0	10.0	18.0	25.4	29.2	31.8	35.0	36.3	36.8	37.3	37.9	38.4	38.4	38.4	42.8	45.0
24	0.0	0.0	12.0	22.8	26.2	30.4	33.1	34.4	35.3	35.9	36.8	37.4	37.4	37.4	42.0	42.8
26	0.0	0.0	10.0	20.0	24.2	28.8	31.7	33.0	33.9	34.9	35.8	36.0	36.2	36.4	36.4	36.4
28	0.0	0.0	5.0	18.4	23.0	27.2	29.2	30.2	31.2	31.8	32.4	32.8	32.8	33.4	34.2	35.0
30	0.0	0.0	5.0	18.0	23.0	26.0	27.4	28.6	29.2	30.0	30.4	31.2	32.0	33.2	33.8	34.6

## WEDGE\_Mod\_1682

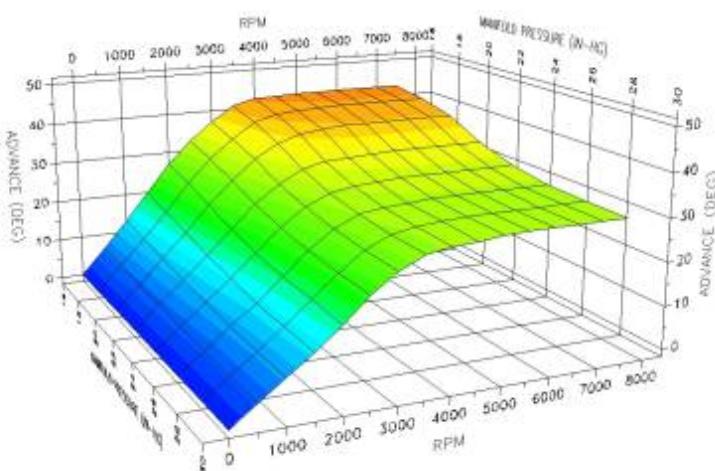


**Click on an image to see a larger scale version.  
Click the following filename and download (save) it to a convenient directory on your local computer.**  
[wedge\\_mod\\_1682.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	0.0	6.3	12.8	19.9	26.9	32.6	37.1	40.8	42.4	42.4	42.8	42.8	42.8	42.8	42.8	42.8
18	0.0	6.3	12.1	18.5	25.2	30.8	35.4	39.2	40.8	41.4	41.5	41.7	41.7	41.7	41.7	41.7
20	0.0	5.5	11.4	17.1	23.2	28.7	33.4	36.8	38.5	39.2	39.8	39.8	39.8	39.8	39.8	39.8
22	0.0	5.3	10.4	15.5	21.1	26.4	30.6	33.6	34.8	35.2	35.6	35.7	35.7	35.7	35.7	35.7
24	0.0	4.9	9.7	14.4	19.5	24.6	28.9	31.3	32.4	32.7	33.1	33.1	33.1	33.1	33.1	33.1
26	0.0	4.4	9.0	13.2	18.5	23.6	27.6	30.3	31.0	31.3	31.7	31.7	31.7	31.7	31.7	31.7
28	0.0	4.4	8.6	13.0	18.0	22.9	26.9	29.6	30.4	31.0	31.3	31.3	31.3	31.3	31.3	31.3
30	0.0	4.4	8.6	12.7	17.4	22.7	26.8	29.4	30.3	30.6	31.2	31.3	31.3	31.3	31.3	31.3

## WTF\_Map\_12-29-2014

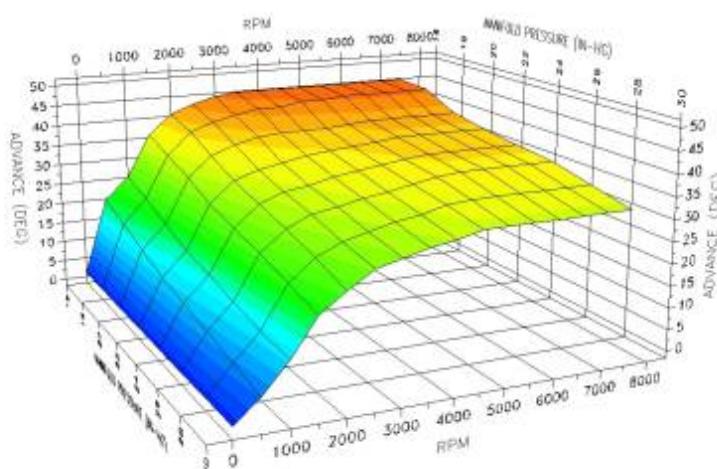

**Click on an image to see a larger scale version.  
Click the following filename and download (save) it to a convenient directory on your local computer.**  
[wtf\\_map\\_12-29-2014.zip](#)

**Next, UNZIP the file to obtain the Map Image '-m.jpg', the Table Data '-t.jpg' and the usable '.tbl' data file.**

**Then LOAD that '.tbl' data file into the Daytona Twin Tec PC Link Software to map your ignition module.**

MAP/RPM	0	500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500
16	1.1	19.7	25.2	35.6	40.5	42.6	44.2	44.9	44.9	44.9	44.9	44.9	44.9	44.9	44.9	44.9
18	1.1	17.1	23.1	33.3	38.7	40.7	42.1	43.1	43.1	44.0	44.0	44.5	44.5	44.5	44.5	44.5
20	1.1	14.6	20.2	31.0	35.9	37.8	39.2	39.8	39.8	39.8	40.3	40.8	40.8	40.8	40.8	40.8
22	1.1	12.1	17.8	28.2	33.1	35.0	36.1	37.3	37.8	38.4	38.9	39.4	39.4	39.4	39.4	39.4
24	1.1	10.7	16.4	26.2	31.2	33.3	34.1	35.4	36.3	37.0	37.8	38.4	38.4	38.4	38.4	38.4
26	1.1	9.2	15.0	24.8	29.4	31.9	32.7	34.0	34.8	35.9	37.0	37.5	37.5	37.5	37.5	37.5
28	1.1	7.8	13.4	22.7	27.3	29.7	31.2	32.6	33.4	34.9	35.4	35.4	35.4	35.4	35.4	35.4
30	1.1	6.0	12.5	20.8	24.8	28.3	29.7	31.2	32.0	33.4	33.4	33.4	33.4	33.4	33.4	33.4

Use your Browser BACK Button -or-

[Go To Technical Menu](#)

From:

<https://sportsterpedia.com/> - Sportsterpedia



Permanent link:

<https://sportsterpedia.com/doku.php.techtalk:ref:engctl50b>

Last update: **2020/01/29 22:48**